

MINI-CRAWLER CRANE

MODEL

URW094CP2UR SERIES

OPERATION & MAINTENANCE MANUAL

FURUKAWA UNIC CORPORATION

HEAD OFFICE : Nihonbashi nishikawa Bldg, 5-3, Nihonbashi
1-chome, Chuo-ku, Tokyo 103-0027, Japan

OMURW094CP2UR20141028
PRINTED IN JAPAN

Request to those who operate the crane

The operator's manual describes correct operation methods, simple inspection, and service for the UNIC crane.

Be sure to read this manual carefully to carry out correct and safe operation of the crane. Operate the crane after you have understood the contents of this manual.

Although we take all possible measures to ensure quality of the crane, you are requested to contact our business offices, UNIC sales agents, or authorized service stations whenever you have anything you do not understand.

◆For making inquiries

When making inquiries, ordering spare parts, and requesting repairs, be sure to inform us of the crane model, specification, serial number, and date of manufacture which are indicated on the name plate.

◆Name plate of the machine is located at the right side of column.

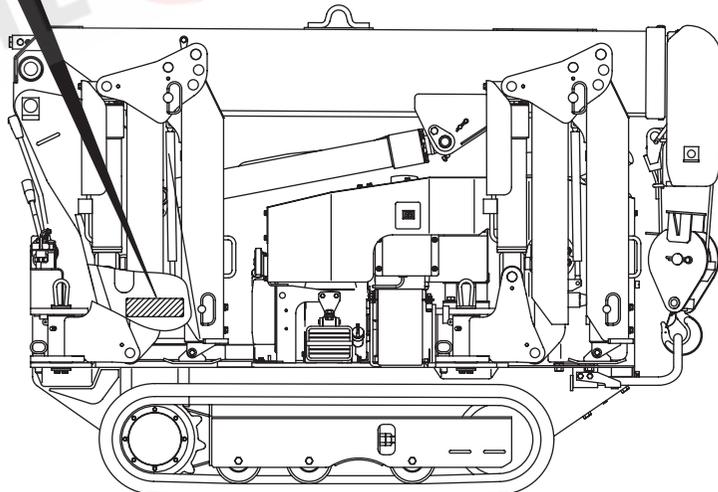
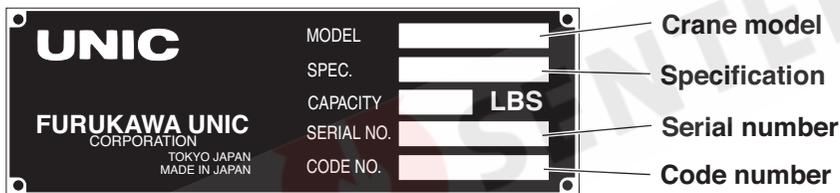


TABLE OF CONTENTS

SETUP OF THIS MANUAL0- 4

1. FOR SAFETY OPERATION

- ① Request to customers1- 1

2. SAFETY PRECAUTIONS ON CARRIER OPERATION

- ① Before operation2- 1
- ② During operation2- 2
- ③ When loading and unloading2- 3
- ④ After operation2- 4

3. SAFETY PRECAUTIONS ON CRANE OPERATION

- ① Before operation3- 1
- ② During operation3- 2
- ③ After operation3- 3

4. DESCRIPTION OF CARRIER EQUIPMENT4- 1

5. DESCRIPTION OF CRANE EQUIPMENT5- 1

6. NAME PLATES

- ① Description of name plates (Stickers)6- 1
- ② Stickers in detail6- 2

7. DEFINITION OF TERMS

- ① Extension and spread of outriggers7- 1
- ② How boom-sections are extended7- 3
- ③ Net rated load7- 4
- ④ Rated load7- 4
- ⑤ Lifting capacity7- 4
- ⑥ Working radius7- 4
- ⑦ Boom length7- 4
- ⑧ Boom angle7- 4
- ⑨ Lift above ground7- 4

8. HOW TO REFER TO WORKING RANGE CHART AND RATED LOAD CHART

- ① Working range chart8- 1
- ② Rated load chart8- 2

9. DESCRIPTION OF EACH CONTROL DEVICE

- ① Overwinding alarm9- 1
- ② Automatic stop for over-winding9- 2
- ③ Boom angle chart9- 3
- ④ Load meter9- 6
- ⑤ Warning horn9- 8
- ⑥ Hook safety latch9- 9
- ⑦ Automatic stop for leaving minimum wire rope (with wire rope retaining roller) ..9- 9

10. HOW TO OPERATE CARRIER

- ① Designation of each control lever and its location ..10- 1
- ② Preparation before operation10- 2
- ③ How to operate10- 3
- ④ How to crawl10- 6

11. HOW TO OPERATE CRANE

- ① Designation of each control lever and location11- 1
- ② Preparation before operation11- 2
- ③ Procedures to set up outriggers11- 3
- ④ How to operate boom for “derricking” ..11- 7
- ⑤ How to hoist and lower the hook11- 8
- ⑥ How to telescope boom11-10
- ⑦ How to slew boom11-11
- ⑧ How to store crane11-13
- ⑨ Procedures for storing hook11-14
- ⑩ How to store outriggers11-15
- ⑪ Storing position when the machine body has been lifted up11-17
- ⑫ How to switch manual operation mode to/from radio remote control mode11-19
- ⑬ Operation in an emergency11-21
- ⑭ How to operate outriggers when in an emergency11-23

12. U-WAVE, RADIO REMOTO CONTROL DEVICE

- ① Request to those who operate the crane12- 1
- ② Safety precautions12- 2
- ③ Designation of each equipment12- 5
- ④ Inspection before crane operation12- 8
- ⑤ How to switch crane operation mode12-10
- ⑥ How to operate the crane through radio control operation12-12
- ⑦ How to replace batteries of transmitter ...12-34
- ⑧ Daily checks, trouble inspection12-37
- ⑨ Mode indicator lamp (Control box)12-42
- ⑩ Measures to be taken in an emergency ...12-48

13. MAINTENANCE AND INSPECTION OF CARRIER

- ① Inspection before operation13- 2
- ② Inspection and Maintenance which is to be carried out every 250 hours or 3 months ..13- 9
- ③ Storage13-11
- ④ Fitting safety covers13-12
- ⑤ Maintenance and inspection of engine ..13-12

14. MAINTENANCE AND INSPECTION OF CRANE

- ① Inspection before operation14- 2
- ② Cleaning14- 3
- ③ Inspection of bolts mounting slewing bearings14- 3
- ④ Replacement of wire rope (for winding-up)14- 4
- ⑤ Replacement of expendable parts14- 8

15. LUBRICATION TO CARRIER

- ① Precaution when carrying out lubrication15- 1
- ② List of recommended lubricant15- 2
- ③ Filling water and lubrication chart.....15- 3

16. LUBRICATION TO CRANE

- ① Precaution when carrying out lubrication16- 1
- ② List of recommended lubricant16- 2
- ③ Lubrication chart.....16- 3
- ④ Lubrication.....16- 4

17. MAJOR SPECIFICATIONS

- ① URW094CP2UR (4-section boom)17- 1

SETUP OF THIS MANUAL


SETUP OF THIS MANUAL

Crane covered in this manual have some difference in operation in accordance with the specifications of with or without radio remote controller.

Difference in operation due to crane specifications is separately illustrated in this manual for each specification.

1. Designation of specifications

Crane specifications covered in this manual are roughly divided into three, the radio remote control type, the remote control type, and the manual type.

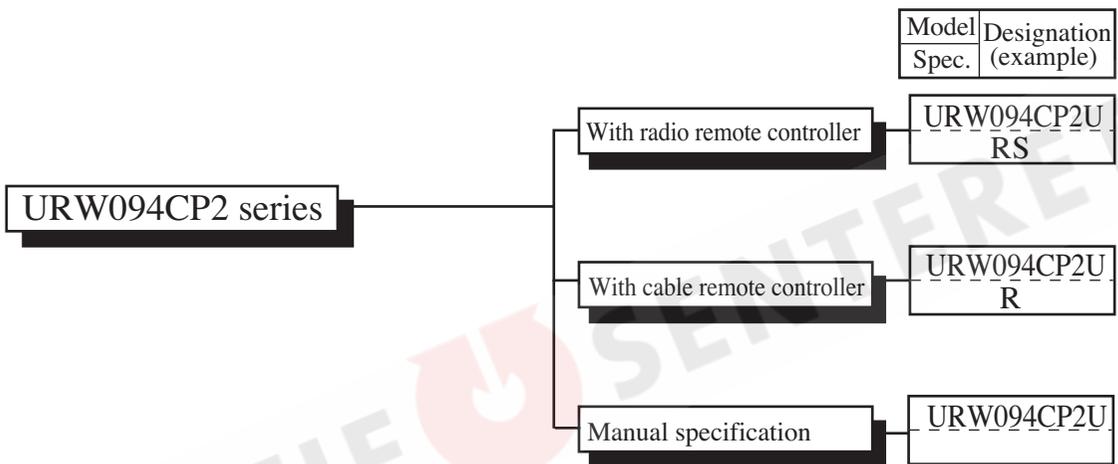

1. FOR SAFETY OPERATION

Observe all the safety regulations !



★ Read preventive measures against danger and cautions stated in this manual for proper understanding.

★ Most accidents related to the crane occur due to operation, maintenance, and inspection which have failed in observing basic safety regulations.

1 Request to customers

◆ Never failed to observe **⚠ WARNING** and **⚠ CAUTION** described in the manual as they are of great importance in safety and the crane operation.

⚠ WARNING . . Failure to observe this may invite an accident resulting in injury or death.

⚠ CAUTION . . Failure to observe this may cause damage to the crane.

- ◆ Store this manual where it is easily accessible to read it over and over again.
- ◆ Failure to observe the right operation and maintenance/inspection illustrated in this manual may cause trouble in the crane and may invite an accident, and this will not only shorten its service life but will impair safety in the crane operation.
Please remember, in such cases, that no warranty will be given even if the crane is within valid warranty period.
- ◆ In order to prevent injury or death to crane operators and to those who stand close to crane operating area due to operational mistake, caution plates are stuck on the crane.
You are requested to read them carefully.
- ◆ Do not alter the crane.
 - ★ If you want to make an alteration, contact with UNIC sales agent or an authorized service shop.
 - ★ UNIC does not bear any responsibility for troubles and/or accidents due to unauthorized alteration.

2. SAFETY PRECAUTIONS ON CARRIER OPERATION

WARNING

★Observe the cautions for securing safety.
Failure to observe the cautions may invite trouble or serious accident.

1 Before operation

1 Dress neatly and wear protectors such as helmet, safety shoes, and gloves without fail.

★Do not wear baggy clothes and accessories which can be caught by control levers and fittings, and oil-stained working clothes which may catch fire.

2 Be sure to make inspection before operation and periodical voluntary inspection.

If found something wrong, repair it immediately.

3 The crane is prohibited to crawl on a public road by the road traffic law.

4 Check that no safety covers have been left removed.

★It is very dangerous to start the engine, to operate the crane with the safety cover removed as the driving mechanism is directly exposed.

5 Be sure to stop the engine before refueling or supplying and changing lubricant.


A fire source such as smoking cigarette in mouth is strictly prohibited.

Failure to observe this may cause a fire.

6 When starting the engine in a small limited area or indoors, open the windows and doors for well ventilation.

★Poor ventilation may invite an exhaust gas poisoning.

7 Shift the crane-crawl lever to “Crawl” when crawling the crane.

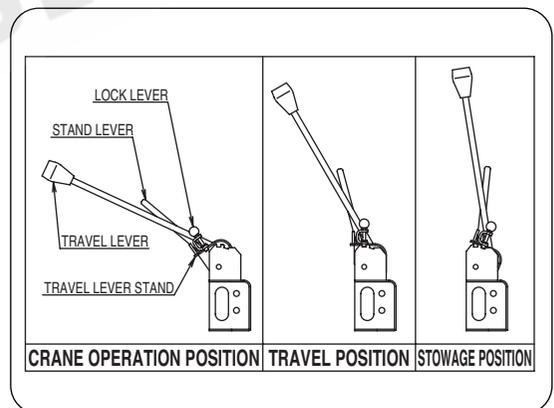

★Crane will not work unless the crane-crawl lever is shifted to “Crane” position.

SAFETY PRECAUTIONS ON CARRIER OPERATION

2 During operation

1 The machine employs particularly small truck to facilitate working in a restricted space.

Since high performance crane is mounted on the small truck, it has been built with a higher center of gravity.

★Take special care not to overturn the crane when crawling on a unlevelled ground.


2 When crawling the crane, all personnel except for the operator are strictly forbidden to stand within 6.56ft (2m) of it.

3 When crawling the crane, be sure to put outriggers in a condition of being stored and store the hook.

4 Do not run the crane with a cargo hoisted or without the crane being stored.

5 Special care must be taken to run the crane slowly when making a sharp turn and crawling on a rough road.

6 When going over uneven ground and going up and down hills, do so straight-on. Be careful not to unbalance or expose the crane to sharp impact.

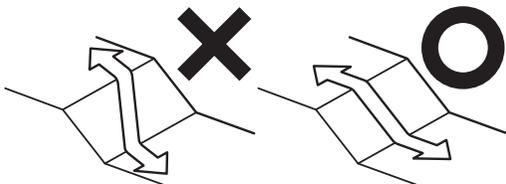

7 Be sure to use a foot-board to run over a ramp of more than 6in.(15cm).

8 Crawl the crane with low speed on a slope.


9 Be sure to use a pallet against the rubber crawler when parking the crane on a slope.

10 Do not make an abrupt stop and start, and change a course on a slope.

11 When crawling up and down a slope, operate the crane by standing at a higher position than the crane body.

12 Do not use the crane on a steep slope of more than 10 degrees.

Pay attention that the crane will not lean by more than 10 degrees due to jolting when operating/crawling on a unlevelled road.

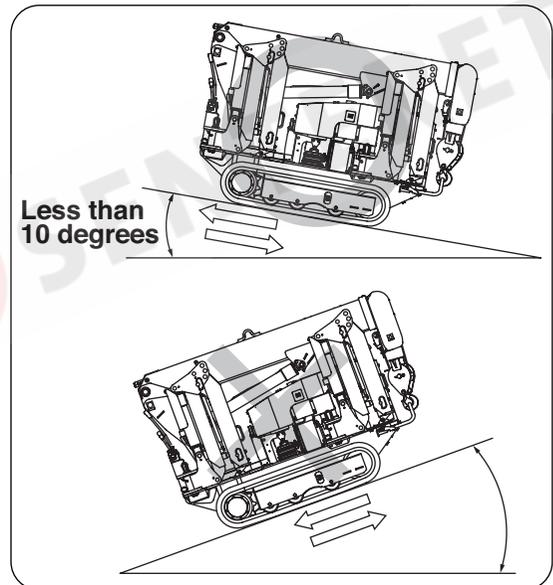

13 Do not run the crane over bumpy area, lying rocks with sharp edges, rough solid rock, small broken stones, edges of steel plate, steel bars for reinforcement, scrap metals, and waste materials and on a road such as in riverside where covered with many stones which may remarkably shorten service life of rubber crawler.

14 Do not turn the crane body in such way that the rubber crawler makes a simultaneous rotation by turns as this causes remarkable wear of rubber crawler due to quick movement.


15 Do not take an article or an animal on the crane.

★It may invite critical situation due to abrupt swing or shift of center of gravity.


16 Do not park the crane over a place where withered grass or straw are being spread.

★It may cause a fire by heat of exhaust pipe or exhaust gas.


17 To avoid rubber crawler damage.



Be sure to drive both sides of crawler in the same direction for making a turn.



Do not drive both sides of crawler in the opposite direction each other.



Do not drive only one side of the crawler.

★For the white (or gray) crawler, observe the driving strictly in terms of its characteristics.

3 When loading and unloading

1 When loading and unloading the crane, use a non-slip foot-board with a enough capacity of strength, width, and length and run the crane straight up and down very slowly.

In addition, operate it by standing at a higher position than the crane body.

Changing direction of the crane on the foot-board may cause the crane to fall off.

2 Stop the engine, apply parking brake, and put drags to wheels to secure the mounting vehicle when loading and unloading the crane.

★Failure to observe this may cause the crane to fall off because the vehicle shift while it is being loaded and unloaded.

SAFETY PRECAUTIONS ON CARRIER OPERATION

4 After operation

1 Return the crawling lever and run the engine at a low speed.

2 Shift the crawling lever to “Crane” position.

3 Stop the engine and remove dirt and dust stuck on the crane body.

★ Since dust stuck on the battery, electric wiring, and engine related components such as muffler may cause a fire in particular, be sure to remove it.

4 Cover the crane or store it in a storage house to prevent it from being accessed by unrelated persons such as children.


★ Cover the crane after heated sections have been cooled off.

Putting a cover on while the crane body is still hot may cause a fire.

5 Remove the starter switch key to keep it securely.

6 Disconnect a battery cable before the crane is to be stored for a long period of time.

★ Failure to disconnect it may cause a fire as cables short-circuited by gnawing animals such as rat.

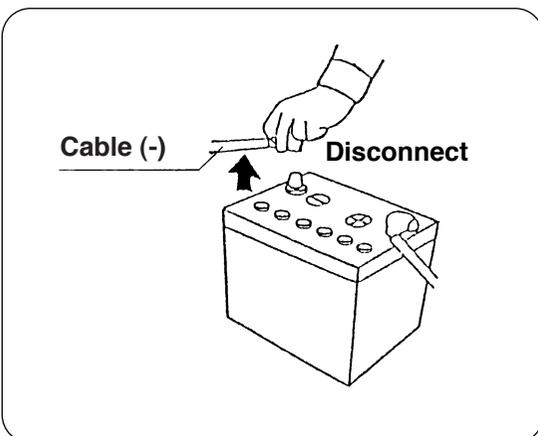


3. SAFETY PRECAUTIONS ON CRANE OPERATION

1 Before operation

1 Be sure to make inspection before operation and periodical inspection for slinging implements.

★If a defective slinging implement is used, fall of lifted cargo may result.

2 Shift the crawling lever to “Crane” position.

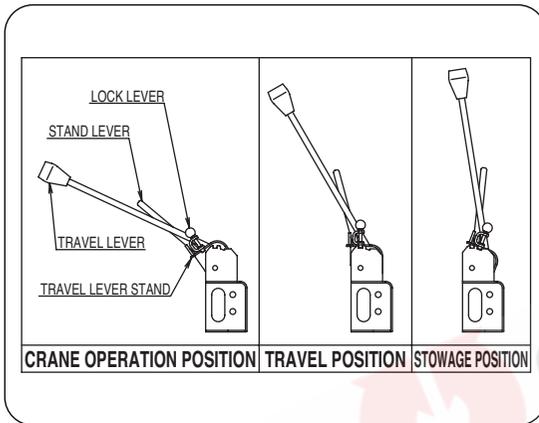

3 Turn ON the over-winding alarm switch.

4 Make sure that each safety device is always functioning properly.

★Be sure to turn ON the over-winding alarm switch before starting crane operation.

5 Keep a safety distance away from the high-voltage power line to avoid an electric shock.

★The crane is not electrically insulated.

6 Do not operate the crane when wind velocity exceeds 22mph(10m/sec.) and/or while thundering.

★Crane operation while strong wind is blowing can cause fall of a lifted cargo or overturn of the crane as the boom and/or a lifted cargo are hit by a gust of wind.

7 Pay attention that anyone except persons concerned will not enter within a working radius of the crane.


★Take good care to carry out safety operation by keeping a close watch around the working area.

8 Make sure that the ground on which outriggers are to be set up is solid and firm.

★When setting up the outriggers on an unlevelled ground or on a slope, be sure to place a support (such as plank, steel plate etc.) under the outrigger foot flanges to keep the crane level.

In addition, when the crane is to be operated on a soft ground, take the same measures to prevent the outrigger foot flanges from sinking into the ground when a cargo is lifted up.

9 Lift up the crawler by approx. 2in.(50mm) from the ground.

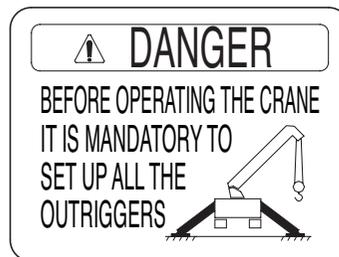

10 Operation with the crane kept leaning makes it unstable when a cargo is lifted up.

Such operation can cause the crane to be overturned.

11 In normal crane operation, be sure to set up the crane level with the outriggers fully extended.

12 Do not stand under or in front of the hook when unhooking as it swings.

13 Do not try adjusting hydraulic equipment.

SAFETY PRECAUTIONS ON CRANE OPERATION

2 During operation

1 Pay attention that the hook will not be over-wound.

Be sure to turn ON the “over-winding alarm switch”.

★Remember that the hook is wound up when boom is extending.

★If the hook hits against the boom top due to being over-wound of the hook, it may cause damage to wire rope and the sheaves at the boom top and may cause the fall of lifted cargo.

2 Operate each lever slowly and smoothly.

★An abrupt lever operation with a cargo lifted gives an excessive shock to the crane which may cause damage to the crane and/or overturn due to swing of a lifted cargo.

★ If a control lever will not make a smooth return to its neutral position, carry out lubrication and repair as soon as possible.

3 Slew the crane at low speed.

★Swing of a lifted cargo increases working radius of the crane which may cause it to be overloaded.

4 If the engine speed is too slow when operating the crane, control the accelerator lever to increase it.

★Crane operation with the engine (and pump) running at low speed may cause a cargo hoisted up to swing due to pulsation of the engine.

This is not a malfunction but impairs smooth control of the crane.

5 Overloaded operation is strictly prohibited.

★Crane operation with a load exceeding the rated load hoisted may cause damage or overturn to the crane.

6 Pulling a cargo sideways, straight, or obliquely is strictly prohibited.

★These operation may cause slewing members, booms, columns, and derrick cylinder to be damaged.

7 When a cargo to be lifted is detached from the ground, stop lifting it up temporarily to confirm safety.

★When a cargo is lifted off the ground, stop lifting it up temporarily to make sure that the cargo is kept horizontally, the crane maintains its stability, and the rope slinging up the cargo is positioned properly. Then lift it up again after making sure of the safety.

★For lowering a cargo, stop lowering it immediately before it touches the ground then lower it again gradually.

8 Do not leave from operating position with a cargo hoisted.

★Lower a hoisted cargo onto the ground before leaving the operation site.

9 Do not get up on a cargo being hoisted.

★This may cause a fall from the cargo being hoisted.

10 Do not stay under a hoisted cargo.

11 Pay attention that wire ropes will not be paid out unnecessarily to prevent ropes from being wound around the drum irregularly.

★Operation such as paying out wire ropes further with a cargo placed on the ground, retraction and/or lowering boom which loosen the ropes to cause them irregular winding which results in remarkable shortening service life of the ropes.

★Wind the first layer of rope firmly and regularly around the drum.

★Correct kinks of rope immediately with a mallet.

12 Pay extra attention to underground crane work in which the hook must be lowered further than the work on the ground.

★When paying out wire ropes, be sure that more than 3 turns of rope must always be left on the drum.

13 Stop the crane operation when temperature of hydraulic oil exceeds 176°F (80°C).

★Oil temperature is apt to rise easily if repeated operation of winding up and down the hook, especially in a high lift, is required.

★Excessive high temperature of hydraulic oil damages high-pressure hoses and gaskets being employed to cause the oil to spout out so that a scald may result.

14 Do not touch the engine and the hood in the side with a bare finger as they become too hot.

3 After operation

1 Make sure that the booms, the outriggers, and the hook have been stored before crawling the crane.

2 Do not carry out maintenance and inspection while temperature of either hydraulic oil or gear oil is still high.

★Temperature of both hydraulic and gear oil is high immediately after crane operation so that accumulated high pressure still remains. Removing filling cap, draining oil, or replacing oil filter while temperature is still high allows hydraulic and/or gear oil to spout out and a scald may result.

3 Since temperature on the engine and the hood in the side is too high immediately after crane work, touch them after they have been cooled down.

1. Rubber crawler

Cored bar and steel fabric (cords) are integrally molded in the rubber which is of the same quality as automobile tire.

2. Wheel sprocket

It transmits driving power to the rubber crawler to allow the crane to crawl.

3. Idle roller

This is a roller which gives a proper tension to the rubber crawler.

4. Truck roller

This supports the weight of crane and rolls on the rubber crawler.

5. Crawling motor

Hydraulic motor with reduction gears which transmits driving power to the wheel sprocket is built inside.

6. Crawling lever

This is to change crawling speed and direction.

7. Accelerator lever

This is to control engine speed.

8. Horn switch

9. Fuel tank

Fuel to be used is leadless gasoline.

10. Hydraulic oil tank

This is filled with hydraulic oil which commonly supplies both to the carrier and to the crane.

11. Starter switch

This is a switch to start and stop the engine.

12. Hour meter


This indicates total engine running time.

13. Choke knob

This is pulled when starting the engine in cold weather.

14. Lock lever

5. DESCRIPTION OF CRANE EQUIPMENT

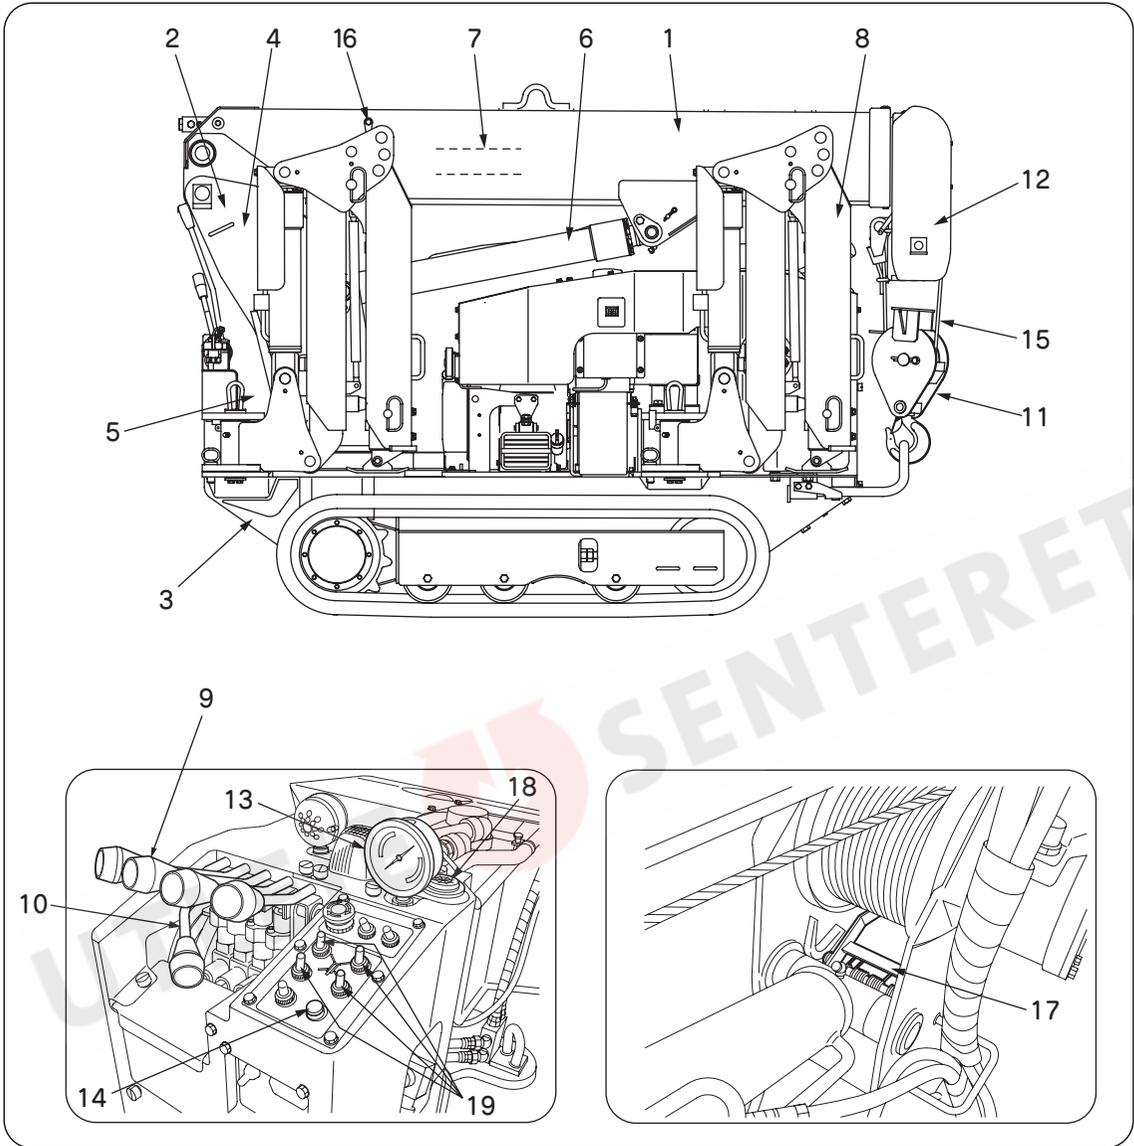

1. Boom

It extends and retracts by hydraulic cylinder and the hook is suspended from its top.

2. Column

This is a vertically mounted member on the crane in which boom, winch, and derrick cylinders are installed.

The column can be turned by slewing device.

3. Frame

This is fixed on the vehicle to support the column and outriggers.

4. Hoist winch

This is a device which rotates the wire drum by hydraulic motor to hoist up and down a cargo via wire ropes.

5. Slewing device

This turns the column by hydraulic motor.

6. Derrick cylinder

This raises and lowers the boom.

7. Telescoping cylinder

This extends and retracts sections of boom.

8. Outrigger

This supports the crane to maintain its stability while it is operated.

9. Crane operating levers

Respective levers control raising and lowering boom, hoisting a cargo up and down, telescoping boom, and slewing boom.

10. Outrigger control levers

Respective levers control raising/lowering and extending/retracting outriggers.

11. Hook

12. Over-winding alarm

When the hook comes close to the boom top, this makes an alarm to warn that wire ropes are to be over-wound.

13. Load meter

This reads weight of a cargo being hoisted.

14. Warning horn

Depression of warning switch sounds the horn for warning.

This is to warn co-workers and others in the operation site.

15. Wire rope

16. Boom angle chart

This can read the working radius corresponding to extended length of boom and its angle.

17. Automatic stop for leaving minimum wire rope (with wire rope retaining roller)

This is a device to restrict slackening of wire rope on the drum which allows to stop unwinding automatically when remaining wire rope on the drum comes close to 3 turns.

18. Level

This is an instrument for checking horizontal plane of the crane body.


19. Outrigger selection switch

This selects active outrigger and operating direction.

6. NAME PLATES

1 Description of name plates (Stickers)

The machine is provided with stickers indicating caution (framed in box) and specifications as shown in the figure below, and in addition to that there are stickers showing control levers, switches, and instructions for lubrication.

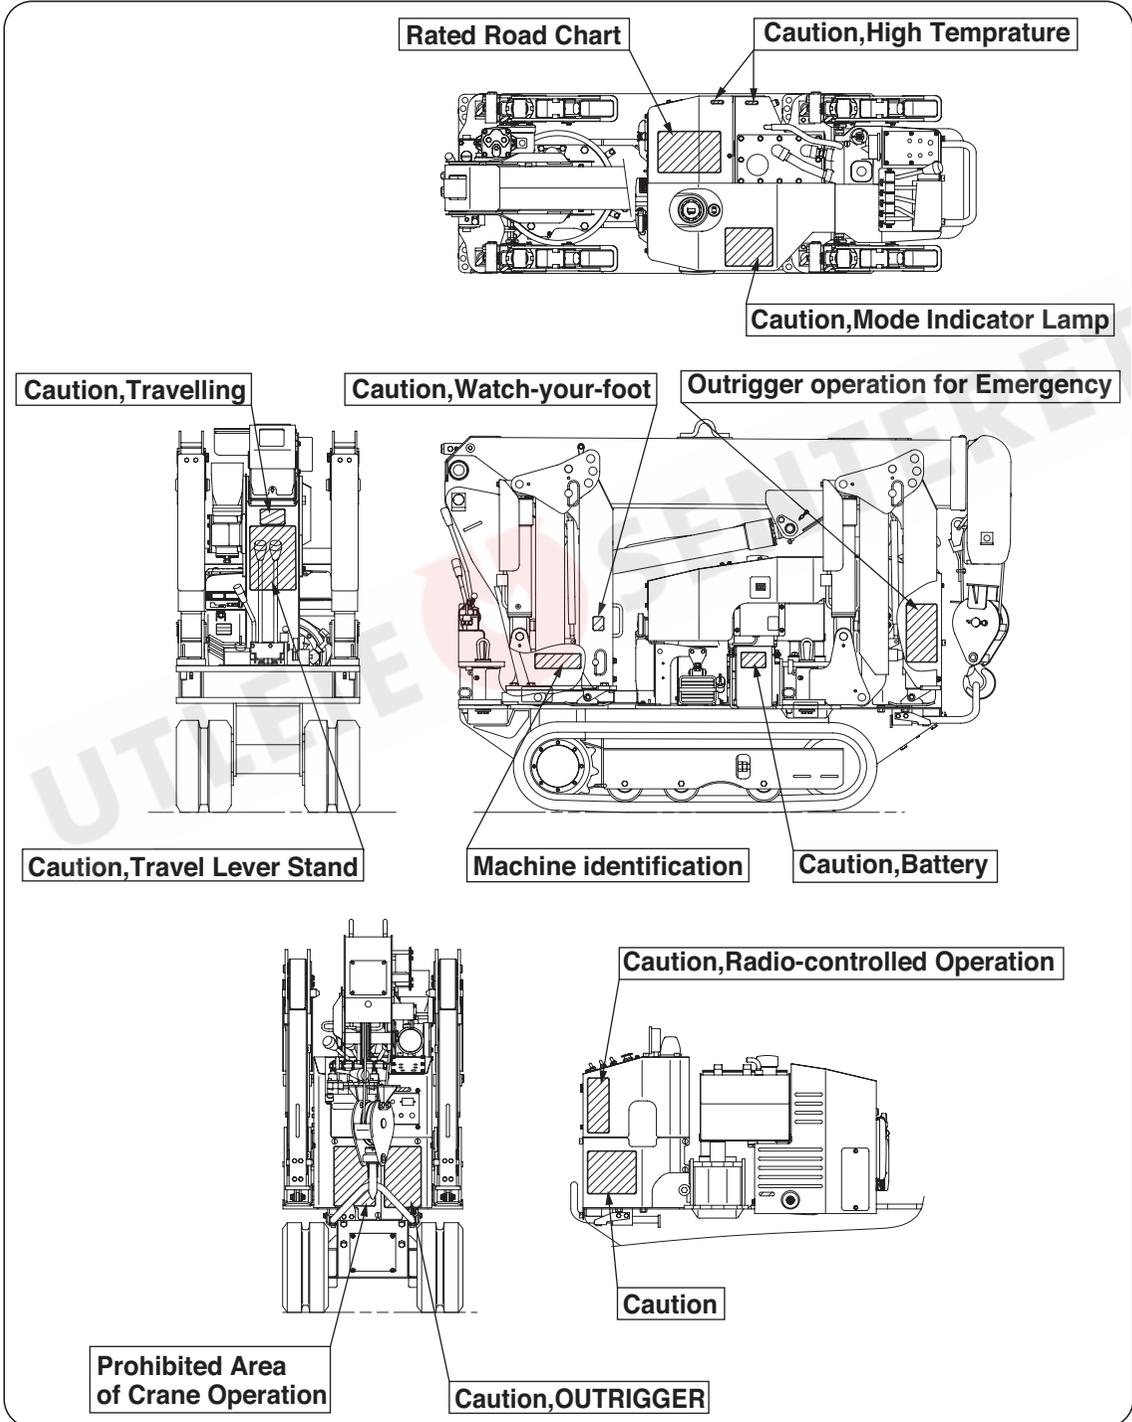

2 Stickers in detail


CAUTION

- ★ Always keep the stickers clean so that they can be read easily.
- ★ If any of the stickers has come off, stick it again or replace it with new sticker.
- ★ When ordering stickers, specify the part number shown at the bottom-right of the sticker concerned.

Sticker [HIGH TEMPERATURE]



Sticker [BATTERY]

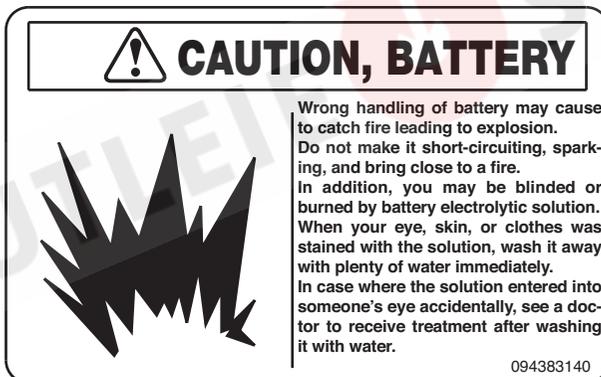

Sticker [WATCH-YOUR-FOOT]



Sticker [OUTRIGGERS]

!

CAUTION OUTRIGGERS

- Place the crane on a firm and level surface and use the outriggers in principle in a fully extended condition.
- Do not extend the outrigger cylinders with the outriggers stowed.
- Swing the outriggers with the outrigger cylinders retracted.
- For extension of the outriggers, be sure to support the outriggers on the ground with the outrigger cylinders after the inner boxes are extended.
- For stowage of the outriggers, be sure to stow the inner boxes after the outriggers are fully retracted, and swing the outriggers to the stowage position after the outer boxes are folded.
- When extending and retracting the outriggers, be sure to insert swing lock pins to prevent the outriggers from swinging.
- When traveling, be sure to stow the outriggers.

FULLY EXTENDED CONDITION OF OUTRIGGERS

CENTER OF SLEWING
10.5 ft
50°
50°
50°
50°
10.9 ft
10.5 ft

OUTER BOX
ARM
INNER BOX

Condition in which the inner box is fully extended and the outer box securing pin is placed in the "fully extended" position.

- If either of the inner box or outer box is positioned at other than maximum extension, operate with performance of other than maximum extension.
- In case of swinging with a load lifted, fore-and-aft stability of the main body is different from right-and-left stability. Shorten an operating radius as much as possible and perform operations using caution in turnover.
- When operating the crane, be sure to keep the crane level using the outriggers.
- If placement of each outrigger is changed from the above illustration, operate according to a different decal "Prohibited area of crane operation."


30L881050-W094CP2UR

Sticker [CAUTION, CRAWLING]



CAUTION, TRAVELING UNIC

The truck might fall off or fall down during traveling.
Slow down the vehicle and direct your mind to traveling when passing close to road shoulder or on the soft ground.

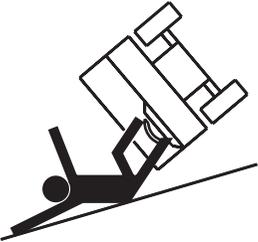

094383160

Sticker [CAUTION]




CAUTION

- Read the instruction manual carefully before use.
- When operating this crane, check the surrounding area for safety.
- Be sure to perform inspection and maintenance before starting operation.
- Be sure to stop power before inspection and maintenance.
- Be sure to reinstall covers removed for inspection and maintenance.
- Place the crane level using a level.
- A load indicator shows performance of the crane placed on a firm and level surface.
Never perform overload operation by combined use with a load meter.
- If hoisting the load exceeding the rated load, the crane may turn over. Observe the rated load for operation.
- Never allow travel with a load lifted and crane operation with no outriggers extended.
Doing so is very dangerous.
- Extend the outriggers and float the carriage by approx. 0.16 ft for crane operations.
The carriage, if not floated, may be damaged. Never perform operations with the carriage floated high, which is very dangerous.
- High-speed slewing may cause the crane to turn over by slewing of load.
Slewing at such a speed as does not cause slewing of load.
- When extending the boom, allow room between the boom top and the hook.
- The weight of a lifted load can be measured with a load meter only during hoisting of the hook.
- When traveling, be sure to store the hook completely.
- After completing the work, be sure to turn OFF the power of the crane.

30L881010-W094CP2UR

WORKING RANGE CHART

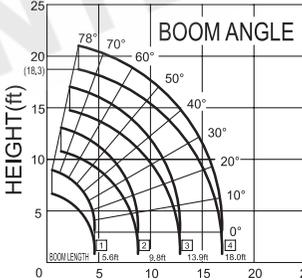

WORKING RADIUS(ft)

Note : The chart shows the data when the crane is operated with no-load and shift due to deflection of boom is not considered.



CAUTION SLEWING BOOM

30L881060-W094CP2UR

NAME PLATES

Sticker [RATED LOAD CHART]

RATED LOAD CHART

The mass of the hook(35lbs.),slings, and any accessories attached to the boom or loadline must be deducted from the rated loads in the chart.

BOOM SECTION	1				
WORKING RADIUS(ft.)	3.0	3.5	4.0	4.5	4.62
RATED LOAD(lbs.)	1990	1990	1990	1990	1990
OUTRIGGER MAX EXT. LOAD(lbs.)	1760	1760	1620	1470	1430

BOOM SECTION	1+2						
WORKING RADIUS(ft.)	3.0	3.5	4.5	5.0	7.0	8.0	8.82
RATED LOAD(lbs.)	1990	1990	1990	1990	1660	1460	1270
OUTRIGGER NOT MAX EXT. LOAD(lbs.)	1760	1760	1450	1300	800	650	500

BOOM SECTION	1+2+3							
WORKING RADIUS(ft.)	3.0	6.0	7.0	8.0	9.0	10.0	11.0	12.89
RATED LOAD(lbs.)	1870	1860	1670	1470	1300	1150	950	700
OUTRIGGER NOT MAX EXT. LOAD(lbs.)	1100	1080	800	650	500	400	340	250

BOOM SECTION	1+2+3+4							
WORKING RADIUS(ft.)	8.0	9.0	10.0	11.0	12.0	14.0	16.0	16.96
RATED LOAD(lbs.)	1450	1300	1140	980	840	650	500	440
OUTRIGGER NOT MAX EXT. LOAD(lbs.)	750	520	390	340	280	200	150	140

CAUTION RATED LOAD

- The rated load is performance when the crane is placed level and is based on an actual working radius including boom deflection under load. The rated load is also based on strength and stability of the crane.
- Maximum extension of an outrigger is a condition in which the inner box is extended to the maximum extension position and a swing lock pin of the outrigger arm is inserted into "MAX EXT." position. In other conditions than the above, operate with performance of not maximum extension.
- If any one of the four outriggers is not fully extended, operate with performance of not maximum extension.
- Improper set-up of the outriggers may cause the crane to turn over. Place the outriggers on a firm and level surface with maximum extension. Make sure, then, that lock pins are securely inserted.
- The boom 1+2+3 is a condition in which the boom 3 is extended to the mark.
- Operate with performance of 1+2+3 when the boom 3 is extended even if only a little; and performance of 1+2+3+4 when the mark on the side plate of the boom 3 moves away from the boom 2 even if only a little.

30L881040-W094CP2UR


Sticker [MODE INDICATION LAMP]



CAUTION

MODE INDICATOR LAMP

INDICATOR (LIT)	OPERATION MODE (STATUS)	RADIO CONTROL SELECTOR SWITCH	POSSIBLE OPERATION
00	CRANE MODE	RADIO CONTROL ON	MANUAL AND RADIO CONTROL
01		RADIO CONTROL OFF	MANUAL
04	OUTRIGGER RADIO CONTROLLED MODE	RADIO CONTROL ON	MANUAL AND RADIO CONTROL
05		RADIO CONTROL OFF	RADIO CONTROL
10	OVERWINDING	—	—
13	STORAGE OF HOOK	—	—
14	CANCELLATION OF AUTO-STOP	—	—
15	AUTOMATIC STOP	—	—
0F	TRAVEL MODE	—	—

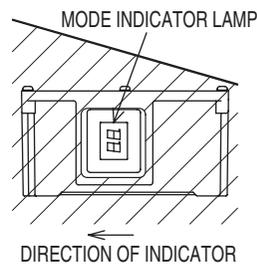

- The above table shows the main mode indication. For details, see the instructions.
- The radio control selector switch opposite to the mode indicator lamp allows selection of ON and OFF of radio-controlled operation.
- When radio control is ON, both manual and radio-controlled operation can be performed.
- When radio control is OFF, radio-controlled operation cannot be performed (except for outrigger radio-controlled operation).
- Flashing of the mode indicator shows abnormality of operation or the equipment. Follow instructions of the instruction manual.

09R886160-W295CR

Sticker [OUTRIGGER OPERATION FOR EMERGENCY]

⚠ OUTRIGGER OPERATION FOR EMERGENCY


When the outriggers do not operate normally with normal operation methods, operate them in a make-shift manner in the following procedures.

When the specific work is complete, have the outriggers inspected and repaired at your nearest service shop of our products as soon as possible.

1. Remove this cover of the outrigger valves.
2. Push the solenoid valve button of the following outriggers to be operated with a narrow rod such as a screwdriver.
3. Operate the outrigger control lever while pushing the solenoid valve button.

OPERATION	OPERATION METHOD	
OUTRIGGER ①	RET.	Push 3 and operate the lever.
	EXT.	Push 4 and operate the lever.
OUTRIGGER ②	RET.	Push 7 and operate the lever.
	EXT.	Push 8 and operate the lever.
OUTRIGGER ③	RET.	Push 5 and operate the lever.
	EXT.	Push 6 and operate the lever.
OUTRIGGER ④	RET.	Push 1 and operate the lever.
	EXT.	Push 2 and operate the lever.

SOLENOID VALVES FOR OPERATING OUTRIGGERS

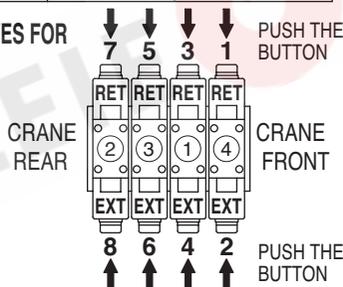

Note: When removing the cover or pushing the solenoid valve button, be careful not to damage the wiring.

09CU81270-W094CR

Sticker [Radio-controlled operation]




⚠ CAUTION Radio-controlled operation

- For approx. two seconds after the key is switched ON, the system is analyzed. Do not operate the crane during this period. If the crane is operated during system analysis, a voice urging "inspection and maintenance" is announced. In this case, switch the key ON again.
- When the emergency stop switch in the switch panel is turned to "STOP", all crane movements make an emergency stop.
- If the crane does not operate in spite of an announced voice saying "Remote control ready." after the key is switched ON, it is possible that the emergency stop switch is turned to "STOP." In this case, the crane can be operated if the emergency stop switch is turned to "RESET."
- Be careful that in case of performing hook storage operation with the switch panel of the crane, the manual operating lever also moves with the switch turned to "STORE."
- Be careful that in case of operating the crane with a radio control transmitter, the manual operating lever moves simultaneously.
- If the manual operating lever is moved during radio-controlled operation, the crane stops automatically.
- Operation with a radio control transmitter cannot be performed during crane operation with the manual lever.

09R886150-W295CR


NAME PLATES

Sticker [TRAVEL LEVER STAND]

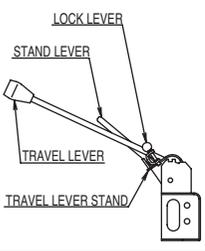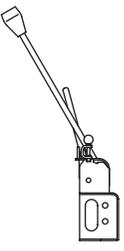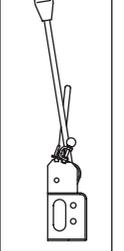 CAUTION			TRAVEL LEVER STAND		
					
CRANE OPERATION POSITION		TRAVEL POSITION		STOWAGE POSITION	
<ul style="list-style-type: none"> When changing the position of the travel lever stand, be sure to change the position by holding the stand lever instead of the travel lever. <p>CRANE OPERATION POSITION</p> <ul style="list-style-type: none"> When operating a crane, pull up the lock lever and tilt the travel lever stand toward you. Tilt the travel lever stand until it contacts the stopper. If the crane is operated without the travel lever stand tilted to the end, the travel lever may contact the main body of the crane while the crane is swung, resulting in breakage. Be careful not to contact the travel lever while operating the crane. The contact activates the crawler, which is dangerous. <p>TRAVEL POSITION</p> <ul style="list-style-type: none"> When travelling, set the travel lever stand to the travel position. Be sure to secure the stand with the lock lever. When the travel lever stand is set to the travel position, the crane does not operate at all except for travelling. When changing to the travel position, be sure to stow the boom and outriggers and position the crane to the travel position. Travelling without positioning the crane to the travel position may cause a serious accident such as turnover. <p>STOWAGE POSITION</p> <ul style="list-style-type: none"> When transporting a crane, pull up the lock lever and tilt the travel lever stand toward the column. Even when the travel lever stand is in the stowage position, operation of the travel lever actuates the carriage if the hydraulic pump operates. Use due care when changing the position. 					

09F888220-V29SCR


Sticker [PROHIBITED AREA OF CRANE OPERATIONS]

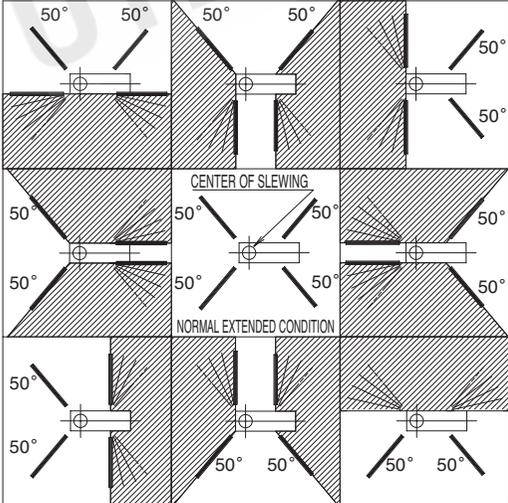 PROHIBITED AREA OF CRANE OPERATIONS		
<p>Orange areas in each outrigger placement shows prohibited areas of crane operations.</p>		
		
<ul style="list-style-type: none"> Perform operations with outriggers extended in each illustration so that the position of a lifted load does not go beyond white areas. Never perform operations in orange areas, because the crane may turn over. Be sure to set any two adjacent outriggers of the four outriggers to normal extension (front 50 degrees, rear 50 degrees) as shown in the above illustrations. If any one of the four outriggers is not fully extended, operate with performance of not maximum extension. Be sure to insert the swing lock pins to prevent the outriggers from rotating. 		

09CU81050-W094CR

7. DEFINITION OF TERMS

1 Extension and spread of outriggers

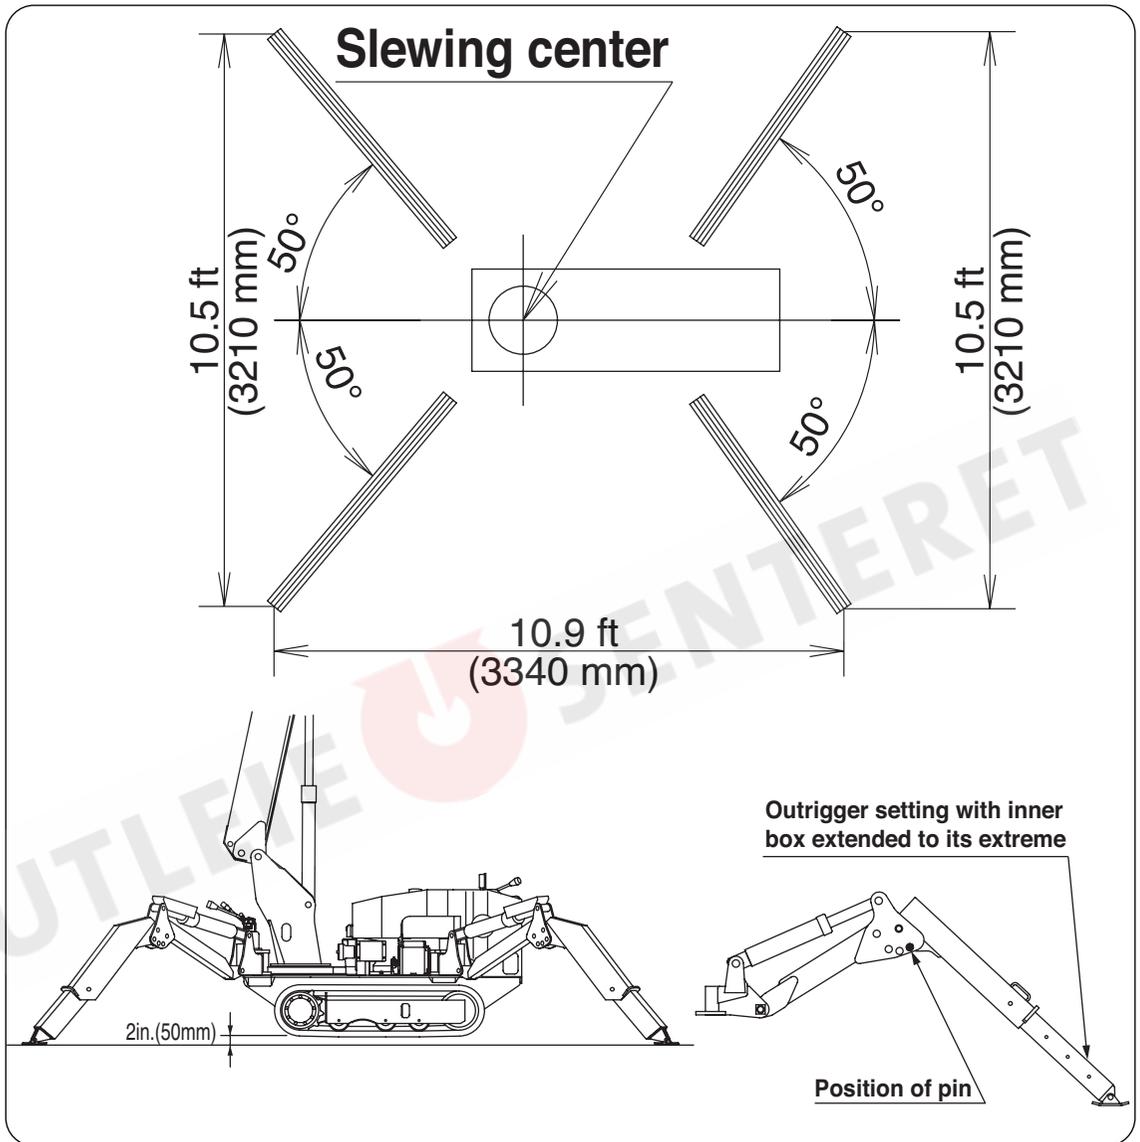


The figure above shows that outriggers are extended to their extremes.

Carry out operation by making the crane level on a flat and solid ground with the outriggers extended to their extremes, and with the crane body raised by approx. 2in.(50mm) above the ground.


DEFINITION OF TERMS

- ◆ Rated load is expressed when the outriggers are extended to maximum and to a distance below maximum with their spread angle set the same.
As a rule, set the outriggers extended to their extremes and with the spread angle of each 50°. When any one of 4 outriggers has not been set to the maximum extension, the rated load other than maximum extension is to be applied which must be observed.
- ◆ Since prohibited range of crane operation is specified according to spread angle of outriggers, confirm it on the sticker.
If it is failed to observe, the crane may be overturned.

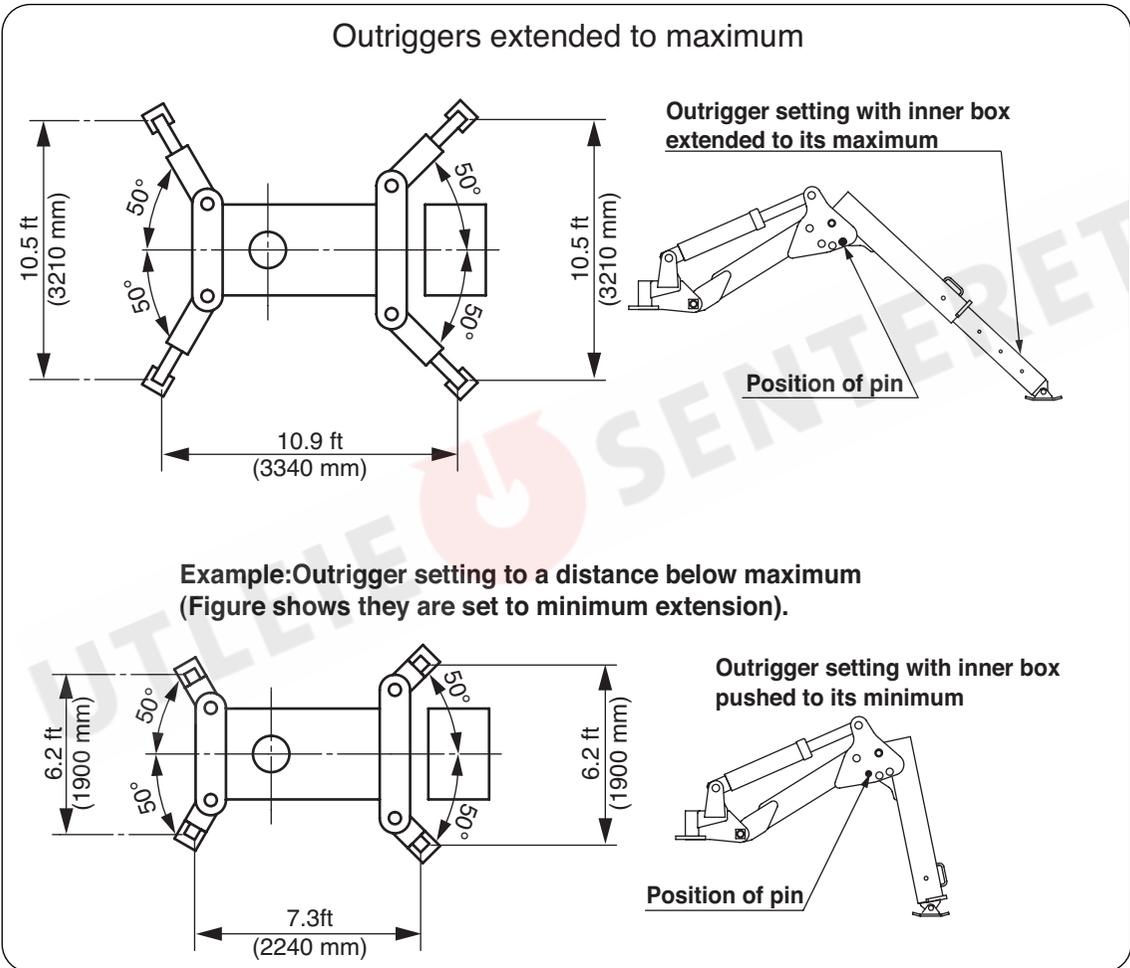

2 How boom-sections are extended


4-section boom

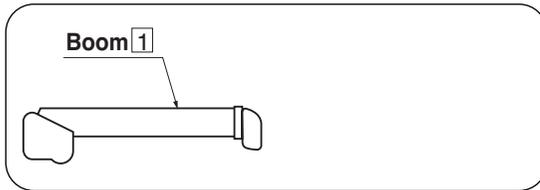

● How boom-sections are extended


Boom : **1**

All boom sections are retracted.

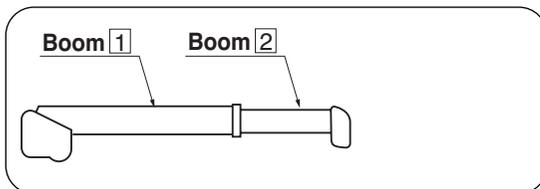


Boom : **1+2** or **2**

Boom section (2) only is extended.

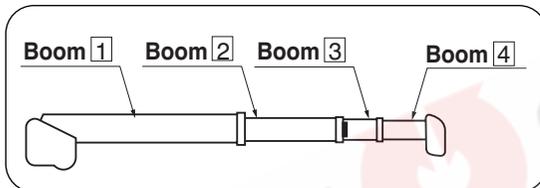

Boom : **1+2+3** or **3**


Boom sections (3) is extended to the mark ■.

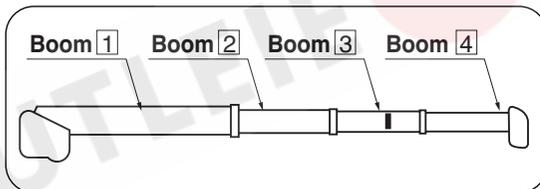

Boom : **1+2+3+4** or **4**

Boom section (2), (3) and (4) are fully extended.

DEFINITION OF TERMS

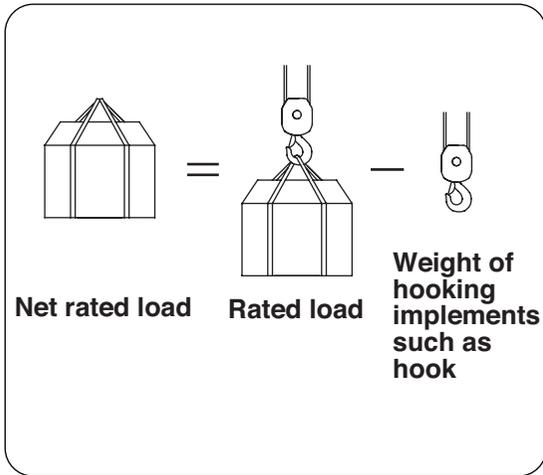

3 **Net rated load**

Net load which can be lifted by hook determined on the basis of stability of crane.

4 **Rated load**


Maximum load including hook and hooking implements which can be lifted according to the boom angle and/or the boom length determined on the basis of stability of crane.

5 **Lifting capacity**

This refers to maximum load of the rated load described section 4 above.

6 **Working radius**

This is horizontal distance from the slewing center to the hook center.

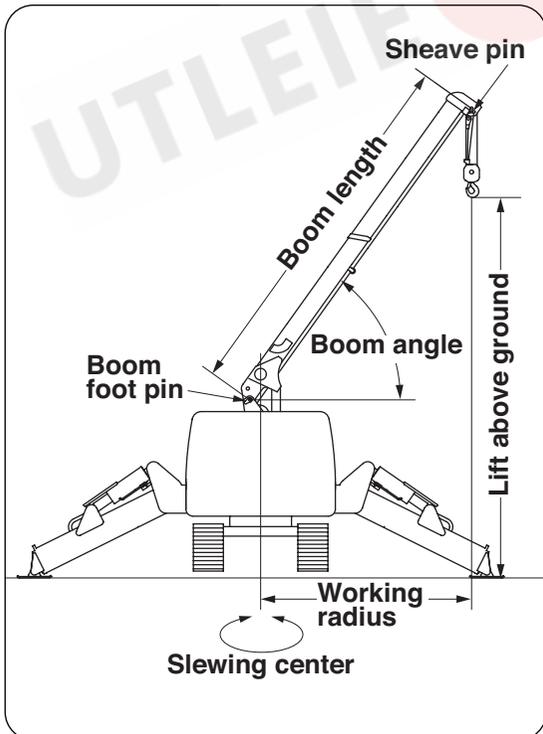

7 **Boom length**

This is distance from the boom foot pin to the sheave pin on the boom top.

8 **Boom angle**


This refers to an angle made by axis line of boom and the horizontal line.

9 **Lift above ground**

This refers to maximum vertical distance between bottom end of the hook to the ground surface with the hook wound up to touch the over-winding alarm detector.


8. HOW TO REFER TO WORKING RANGE CHART AND RATED LOAD CHART

These charts are stuck in front of crane operation levers and how to refer to charts is illustrated as follows:

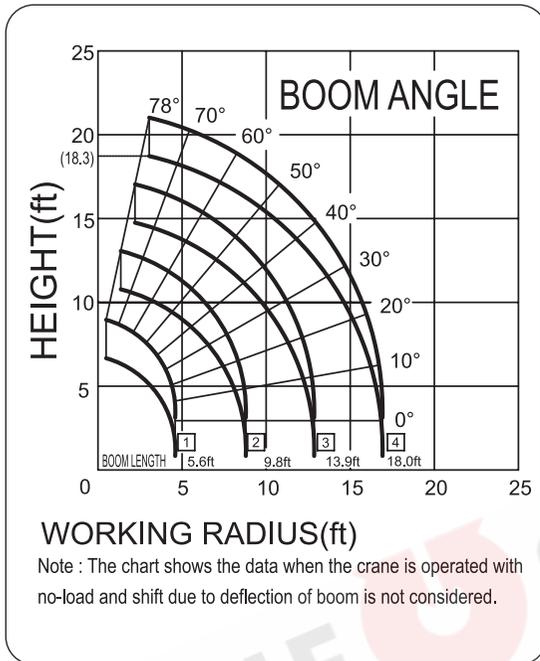


1 Working range chart

The chart shows the relation among boom length and working radius, boom angle, and lift above ground.

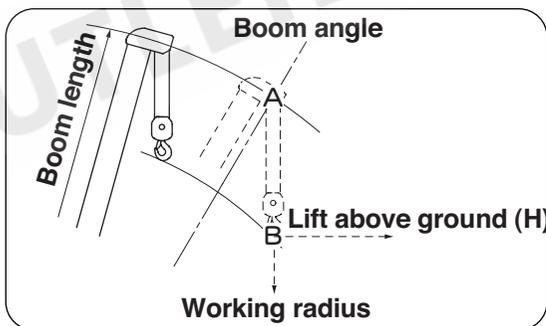

Although the point-A and the point-B follow the tracks along the same working radius, the point-A refers to the boom angle and the point-B the lift above ground.

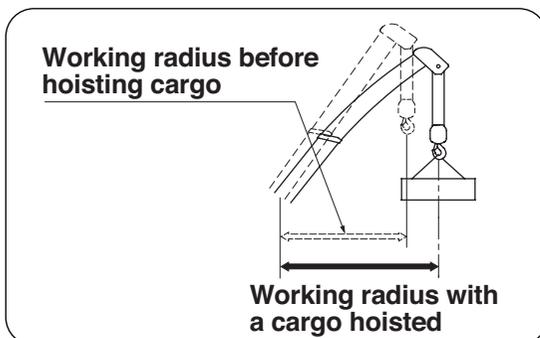

The working range chart does not incorporate any shift due to deflection of boom. Keep in mind that the actual working radius is somewhat extended due to boom deflection when a cargo is being hoisted.

HOW TO REFER TO WORKING RANGE CHART AND RATED LOAD CHART

2 Rated load chart

The chart shows maximum load which can be hoisted up for every combination of boom-sections to be extended for each working radius.

RATED LOAD CHART

The mass of the hook(35lbs.),slings, and any accessories attached to the boom or loadline must be deducted from the rated loads in the chart.

BOOM SECTION		1				
WORKING RADIUS(ft.)		3.0	3.5	4.0	4.5	4.62
RATED LOAD(lbs.)	OUTRIGGER MAX EXT.	1990	1990	1990	1990	1990
	OUTRIGGER NOT MAX EXT.	1760	1760	1620	1470	1430

BOOM SECTION		1+2						
WORKING RADIUS(ft.)		3.0	3.5	4.5	5.0	7.0	8.0	8.82
RATED LOAD(lbs.)	OUTRIGGER MAX EXT.	1990	1990	1990	1990	1660	1460	1270
	OUTRIGGER NOT MAX EXT.	1760	1760	1450	1300	800	650	500

BOOM SECTION		1+2+3							
WORKING RADIUS(ft.)		3.0	6.0	7.0	8.0	9.0	10.0	11.0	12.89
RATED LOAD(lbs.)	OUTRIGGER MAX EXT.	1870	1860	1670	1470	1300	1150	950	700
	OUTRIGGER NOT MAX EXT.	1100	1080	800	650	500	400	340	250

BOOM SECTION		1+2+3+4								
WORKING RADIUS(ft.)		8.0	9.0	10.0	11.0	12.0	14.0	16.0	16.96	
RATED LOAD(lbs.)	OUTRIGGER MAX EXT.	1450	1300	1140	980	840	650	500	440	
	OUTRIGGER NOT MAX EXT.	750	520	390	340	280	200	150	140	

CAUTION

★The chart shows hoisting capacity when the crane is set up level with the outriggers extended and the data are based on actual working radius by incorporating shift due to deflection of the boom under loaded.

★The rated loads specified above are based on strength of the crane and stability of the crane.



Be sure to check the chart for the rated load as it is to be changed according to how far the outriggers are extended.

9. DESCRIPTION OF EACH CONTROL DEVICE

1 Overwinding alarm

◆1. Function of overwinding alarm

The device automatically makes an alarm sound to warn that the wire ropes are being over-wound when the hook comes close to the boom top.

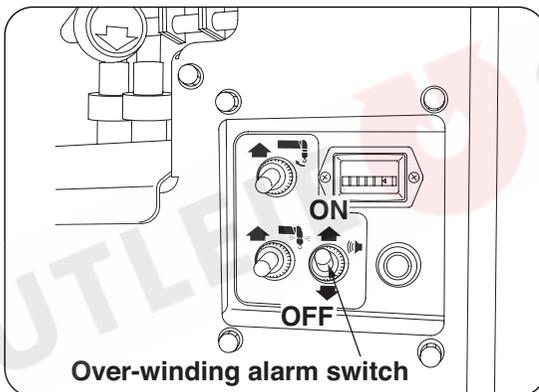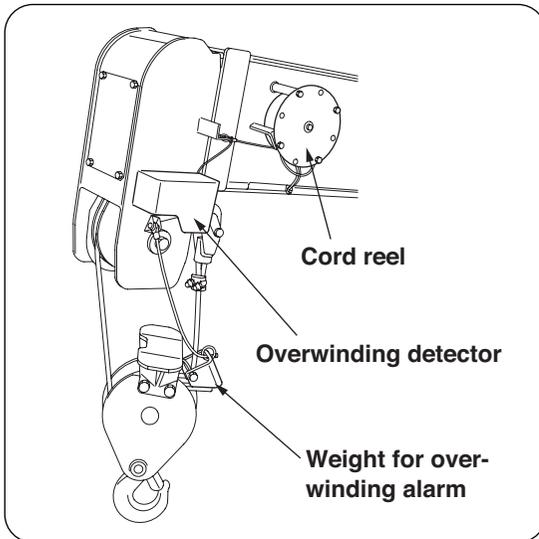

◆2. Operating procedures

1 Turn ON the over-winding alarm switch before starting crane operation.

If the alarm sounds while the hook is being hoisted or the boom is being extended, stop the crane operation immediately and lower the hook or retract the boom.


2 Turn the alarm switch OFF after the crane work has been completed.

CAUTION

★When the over-winding alarm switch is turned OFF, over-winding alarm will not function even if the hook is being overwound. Be sure to turn the switch ON before starting crane work and check that the alarm sounds every time when the weight for over-winding alarm is lifted up to the detector.

★Since the length of wire rope hanging the weight is specified by laws and regulations concerned, do not make it short at random.

★The alarm sounds even if any of electric wires connected to the over-winding detector at the boom top is broken. Ask an authorized UNIC service station for repair.

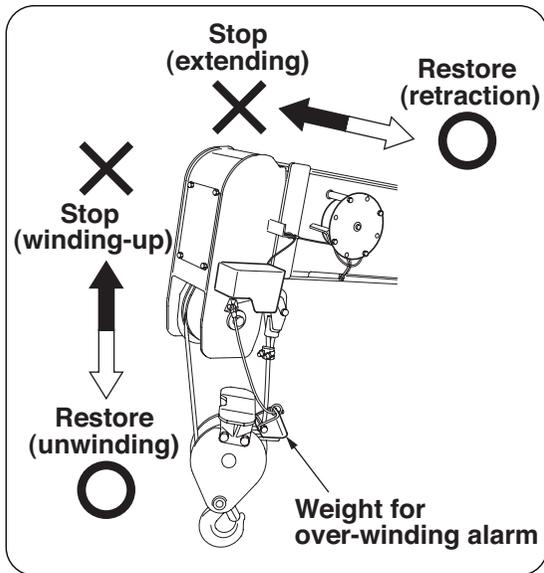

2 Automatic stop for over-winding

◆1. Function of automatic stop for over-winding

If the hook comes close to the boom top and it hits against the weight for over-winding alarm, buzzer sounds and functions of winding-up hook, extending boom, and raising boom stop automatically.

When the automatic stop is activated, lower the hook, retract or lower the boom until the buzzer stops sounding.

This allows the activated automatic stop to return to normal.

●Remarks

Since viscosity of hydraulic oil increases during cold winter or in low temperature environment, function of winding-up hook or extending boom may not stop perfectly but it allows to make a slight movement even if the hook hits against the weight which is not a disorder.

Carry out warming-up and the automatic stop recovers functioning when temperature of hydraulic oil rises to a certain level.


◆2. How to reset when automatic stop for over-winding is found out of order


If crane can not be operated due to failure in the automatic stop, reset the automatic stop and store the crane.

●Step 1

Turn the reset switch for the automatic stop to "Reset" to reset the automatic stop.

Then wind up the hook, extend or raise the boom by controlling operation lever.

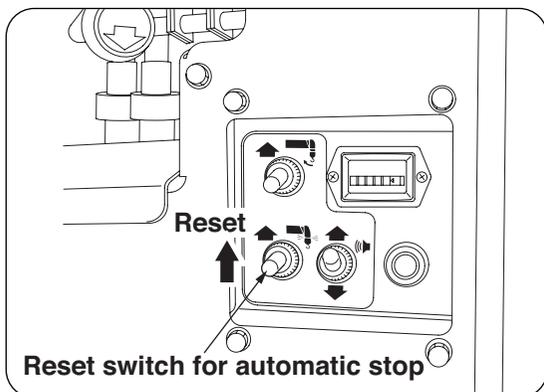

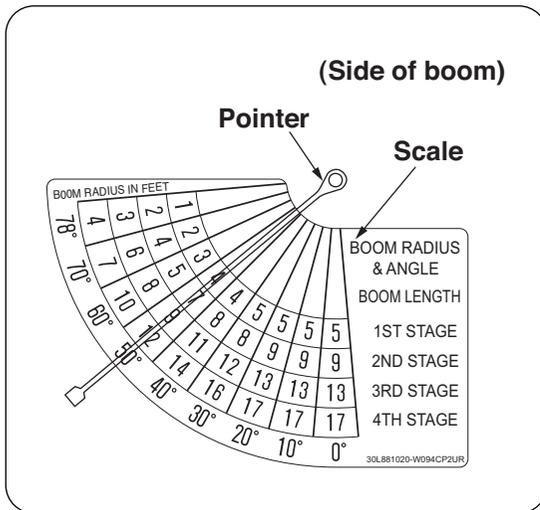

3 Boom angle chart

The chart reads the working radius corresponding to extended length of boom and its angle.

◆1. Working radius

The value to which the needle points on the scale of meter is the working radius in each combination of boom-sections being extended.

◆2. Boom angle

Deflection of the needle on the angle scale reads the boom angle.





CAUTION

★ Use a proper scale band according to boom-sections being extended.

DESCRIPTION OF EACH CONTROL DEVICE

★ The following is an example of how to use the load chart.

1. Extend boom **3** completely.
2. Using the boom angle indicator as you guide, raise boom to 50° elevation. As can be seen, the boom radius is approximately 9 feet and the hook height is approximately 12 feet. By looking at the load chart, the boom capacity is 1300 lbs. When outriggers are extended fully. The capacity is 500 lbs when outriggers are not extended fully. This capacity must be reduced for some optional equipment.

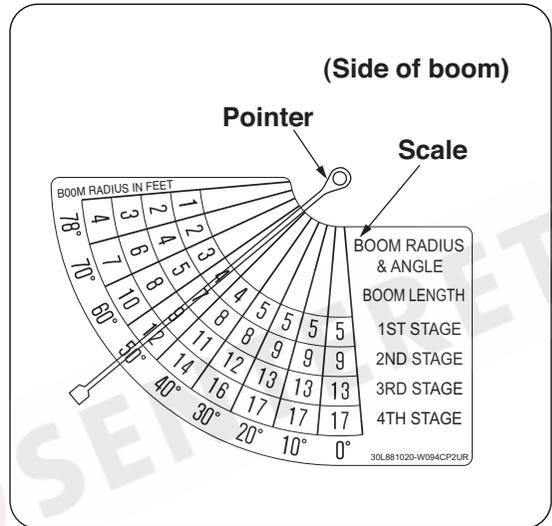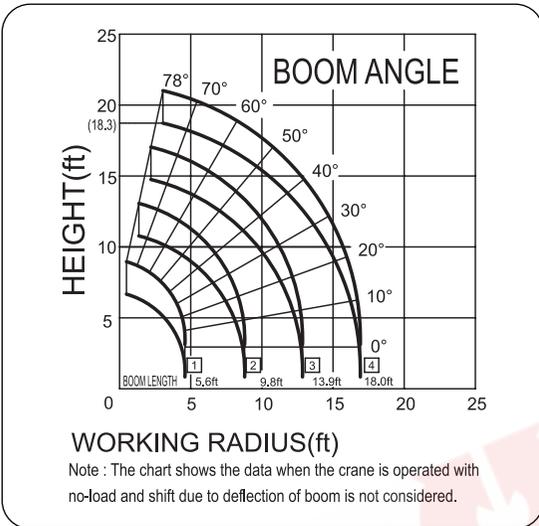

RATED LOAD CHART

The mass of the hook(35lbs.),slings, and any accessories attached to the boom or loadline must be deducted from the rated loads in the chart.

BOOM SECTION	1				
WORKING RADIUS(ft.)	3.0	3.5	4.0	4.5	4.62
RATED LOAD(lbs.)	1990	1990	1990	1990	1990
OUTRIGGER MAX EXT.	1760	1760	1620	1470	1430
OUTRIGGER NOT MAX EXT.					

BOOM SECTION	1+2						
WORKING RADIUS(ft.)	3.0	3.5	4.5	5.0	7.0	8.0	8.82
RATED LOAD(lbs.)	1990	1990	1990	1990	1660	1460	1270
OUTRIGGER MAX EXT.	1760	1760	1450	1300	800	650	500
OUTRIGGER NOT MAX EXT.							

BOOM SECTION	1+2+3							
WORKING RADIUS(ft.)	3.0	6.0	7.0	8.0	9.0	10.0	11.0	12.89
RATED LOAD(lbs.)	1870	1860	1670	1470	1300	1150	950	700
OUTRIGGER MAX EXT.	1100	1080	800	650	500	400	340	250
OUTRIGGER NOT MAX EXT.								


BOOM SECTION	1+2+3+4							
WORKING RADIUS(ft.)	8.0	9.0	10.0	11.0	12.0	14.0	16.0	16.96
RATED LOAD(lbs.)	1450	1300	1140	980	840	650	500	440
OUTRIGGER MAX EXT.	750	520	390	340	280	200	150	140
OUTRIGGER NOT MAX EXT.								



CAUTION RATED LOAD

- The rated load is performance when the crane is placed level and is based on an actual working radius including boom deflection under load. The rated load is also based on strength and stability of the crane.
- Maximum extension of an outrigger is a condition in which the inner box is extended to the maximum extension position and a swing lock pin of the outrigger arm is inserted into "MAX EXT." position. In other conditions than the above, operate with performance of not maximum extension.
- If any one of the four outriggers is not fully extended, operate with performance of not maximum extension.
- Improper set-up of the outriggers may cause the crane to turn over. Place the outriggers on a firm and level surface with maximum extension. Make sure, then, that lock pins are securely inserted.
- The boom **1+2+3** is a condition in which the boom **3** is extended to the **█** mark.
- Operate with performance of **1+2+3** when the boom **3** is extended even if only a little; and performance of **1+2+3+4** when the **█** mark on the side plate of the boom **3** moves away from the boom **2** even if only a little.

30L881040-W094CP2UR

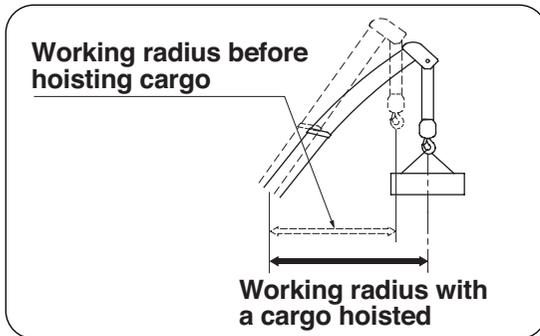

CAUTION

★ Since the working radius increases due to deflection of the boom when a cargo starts to be lifted up, set the boom angle so that the hook comes to somewhat inner side.

◆ How to refer to hoisting capacity when outriggers are extended to minimum or to halfway.

As a general rule, the outriggers are to be extended to their extremes.

If it is forced to operate the crane with the outriggers extended to minimum or to halfway, operate the crane in accordance with instructions shown below.

1. Find the working radius.
2. The rated load is to be obtained from the data shown in the “outriggers extended to minimum on the chart of rated load” according to how boom-sections are extended.

- When operated with the working radius of 8ft, with the extended boom configuration of 1+2, and with outriggers extended to halfway or to minimum, take 650lbs.
- When operated with the working radius of 10ft, with the extended boom configuration of 1+2+3, and with outriggers extended to halfway or to minimum, take 400lbs.

The mass of the hook(35lbs.), slings, and any accessories attached to the boom or loadline must be deducted from the rated loads in the chart.

RATED LOAD CHART

BOOM SECTION	1				
WORKING RADIUS(ft.)	3.0	3.5	4.0	4.5	4.62
RATED LOAD(lbs.)	1990	1990	1990	1990	1990
OUTRIGGER MAX EXT.	1760	1760	1620	1470	1430
OUTRIGGER NOT MAX EXT.					

BOOM SECTION	1+2						
WORKING RADIUS(ft.)	3.0	3.5	4.5	5.0	7.0	8.0	8.82
RATED LOAD(lbs.)	1990	1990	1990	1990	1660	1460	1270
OUTRIGGER MAX EXT.	1760	1760	1450	1300	800	650	500
OUTRIGGER NOT MAX EXT.							


BOOM SECTION	1+2+3								
WORKING RADIUS(ft.)	3.0	6.0	7.0	8.0	9.0	10.0	11.0	12.89	
RATED LOAD(lbs.)	1870	1860	1670	1470	1300	1150	950	700	
OUTRIGGER MAX EXT.	1100	1080	800	650	500	400	340	250	
OUTRIGGER NOT MAX EXT.									

CAUTION

★ When the outriggers are extended to minimum or to halfway, operate the crane according to capacity obtained from the “outriggers extended to minimum or to halfway accordingly on the chart of rated load”.

★ The load indicator can not be used when the outriggers are extended to minimum or to halfway.

DESCRIPTION OF EACH CONTROL DEVICE

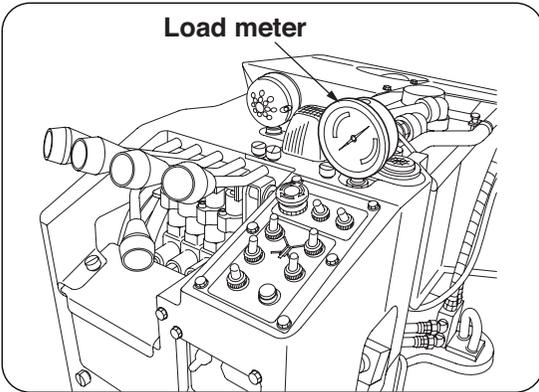


4 Load meter

The meter shows weight of a cargo being hoisted.

Read the scale band corresponding to the wire-rope hooking system (number of wire ropes being hooked).

●Remarks

The load meter is fixed on the panel.

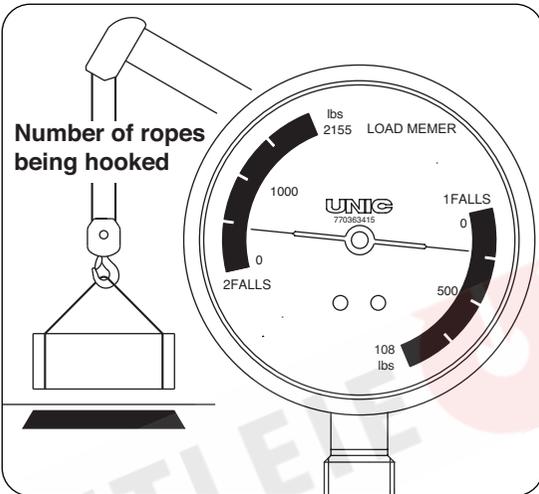

◆Dial of load meter has:

- Scale bands for 2-rope hooking system and single-rope hooking system.

⚠ CAUTION

★“Load meter” indicates the weight of a hoisted cargo only while the hook is being lifted up and it will not show the weight while other operations, such as when stopping winding up and lowering a cargo, are being carried out.

DESCRIPTION OF EACH CONTROL DEVICE

◆ Follow the steps illustrated below when measuring weight of a hoisted cargo with the load meter.

- ① Allow the engine to run at a low speed.
- ② Adjust the lifting-up speed of hook so that the needle may point at 0 (zero) on the load meter scale by lifting up hook with no-load.

Measure the weight of a cargo at the lifting-up speed adjusted.

- Shift the lever for winding-up hook to the position just before the engine starts increasing its speed by auto-acceleration.

This will not be measured by a slight control of the lever for winding-up hook.

- For radio Remote control types, when it is measured by winding-up hook control using the manual control lever after the speed mode has been switched to a very slow speed mode by the radio Remote controller, the measurement can easily be done as the engine speed will not be increased.

- ③ Taking an example of the case where a cargo is hoisted up by using 2-rope hooking system. Read the load meter for the point (a) on the scale band of “2FALLS” while a cargo hooked is being lifted up to approximately 12in. above the ground (Fig. 1).

The meter shows “500lbs” for the actual weight of the cargo.

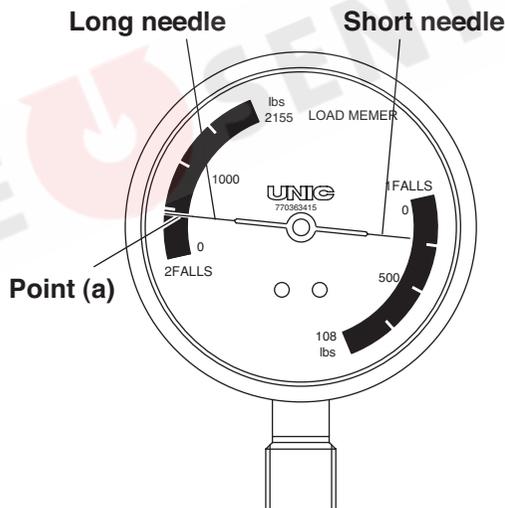


Fig. 1 Load meter


DESCRIPTION OF EACH CONTROL DEVICE

◆ Check for safety operation

① If a crane is loaded so much that readings on the load meter exceeds the rated load, the crane can be damaged or overturned.

In such case, move the crawler crane closer to the cargo to be hoisted to decrease the working radius, then operate the crane again within the rated load.


② When the load meter reads less than the specified rated load in the chart, the cargo can be lifted up safely.

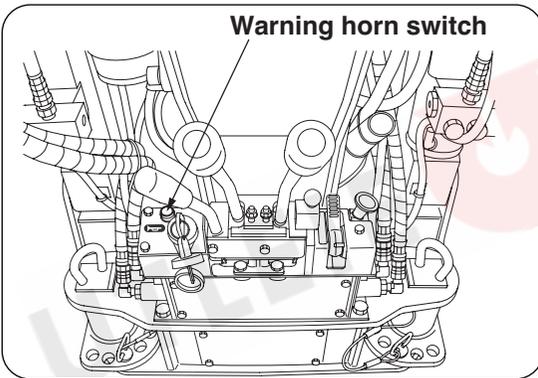


5 **Warning horn**

Before lifting up the cargo, depress the warning horn switch on the crawler panel to give warning sound to those who have entered within slewing range during crane operation, or to workers in charge of slinging work near the cargo or in a course where the cargo may pass along.


Depress the switch button to give warning sound.

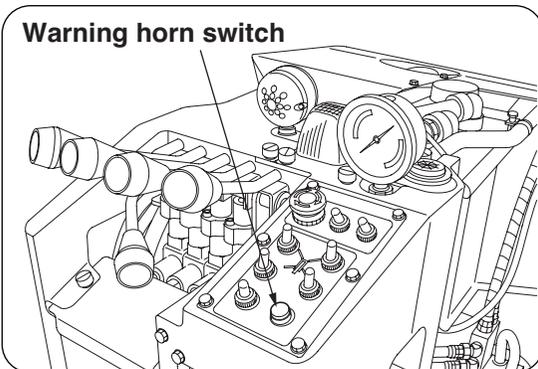

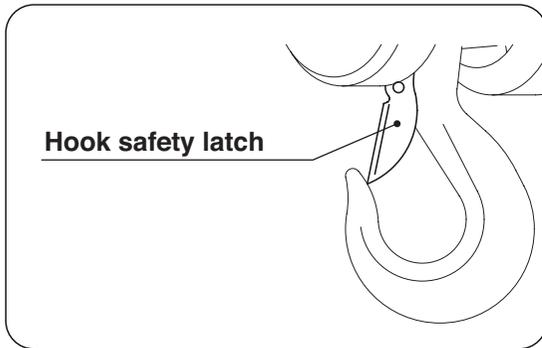

6 Hook safety latch

The mechanism is to prevent slinging wire rope from being disengaged out of the hook.

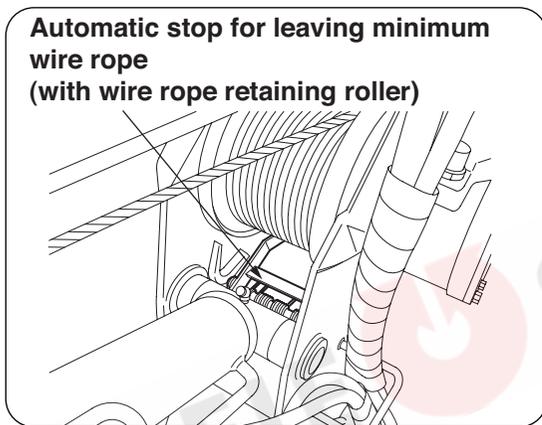

7 Automatic stop for leaving minimum wire rope (with wire rope retaining roller)


This is a device to restrict slackening of wire rope on the drum.

The device prevents the rope on the drum from slackening when winding up and down the hook or making it an abrupt stop and when the hook is lowered to the ground.

In addition, it allows to stop unwinding automatically when remaining wire ropes on the drum come close to 3 turns so that the rope can not be unwound further.

10. HOW TO OPERATE CARRIER

1 Designation of each control lever and its location

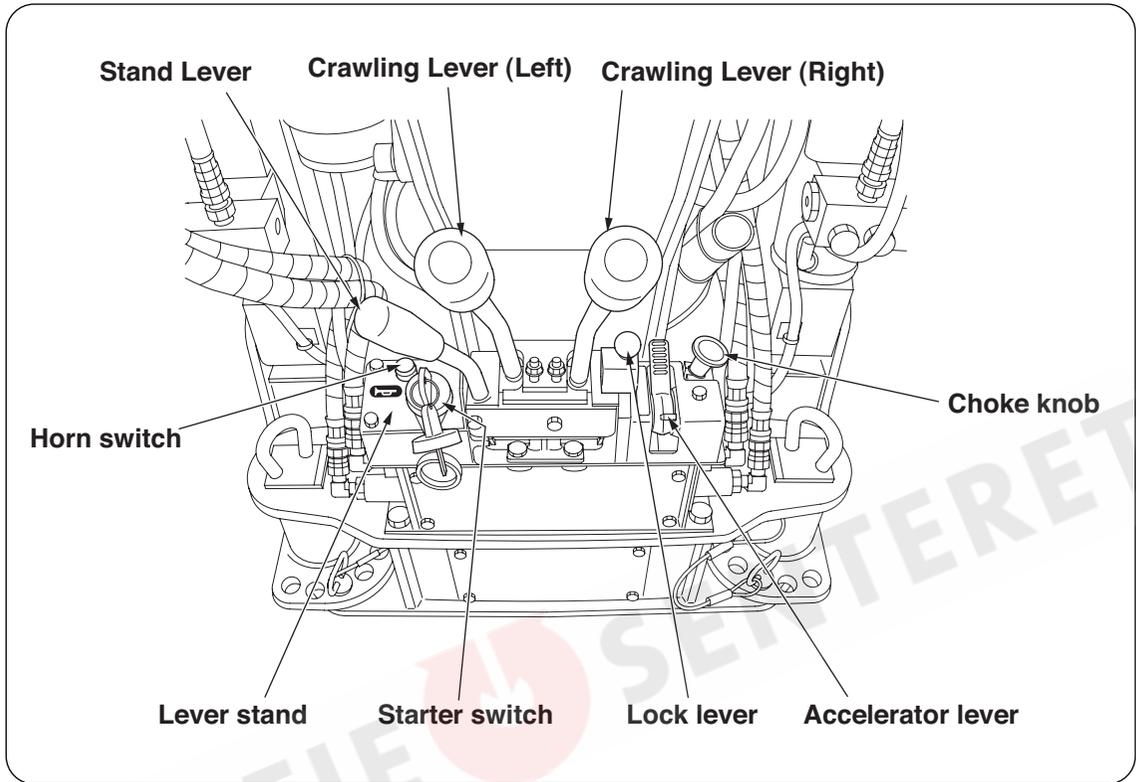


2 Preparation before operation

! WARNING


- ★Ventilate well when starting the engine in a small limited area or indoors.
- ★Do not start the engine from the outside of the operator's position.
- ★Confirm the safety around the crane working site before starting the engine.

! CAUTION

- ★Heavy-duty operation of the crane during an initial period after the start of operation may deteriorate its performance in a shorter time. Take approximately 100 hours after the start of operation as a breaking in period during which abrupt start and acceleration, and continuous operation under heavy load must be avoided.

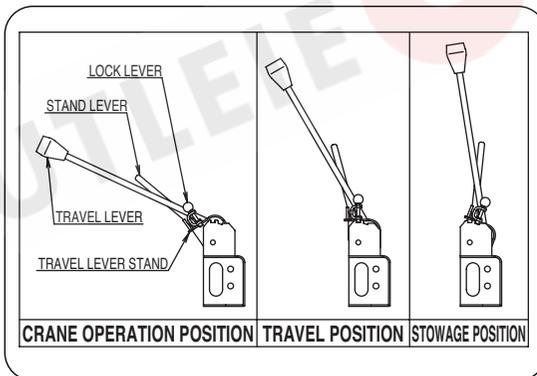

- 1 Shift the crawling lever stand to "Travel" position.
- 2 Make sure that both crawling levers (left and right) are at their neutral positions.
- 3 Confirm that the machine is at crawling posture.
 - Boom is lowered to its extreme.
 - Outriggers are stored.
 - Hook is stored.

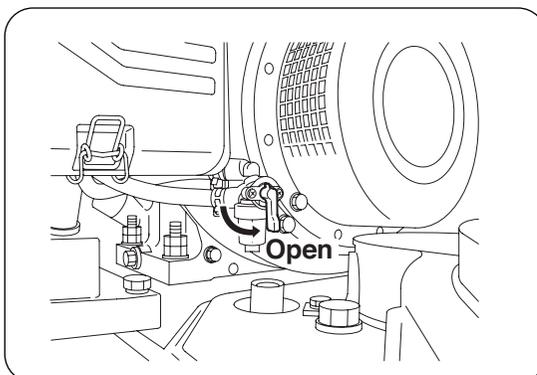


- 4 Open the fuel cock.
- 5 Raise engine speed to that somewhat higher than idling.

3 *How to operate*

! WARNING

- ★ Do not start the engine by using a auxiliary ignition fluid as it may be in danger of explosion.
- ★ Be sure to repair whenever found anything unusual.
- ★ Be sure to stop the engine before re-fueling.

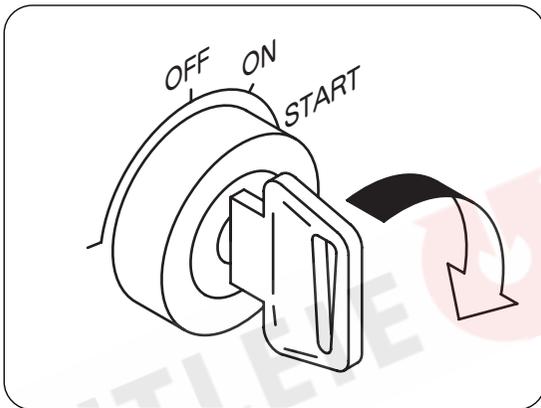

◆ **1. Starting engine**

- Starting in normal condition


- 1** Insert the key into the starter switch and turn it to ON position.
- 2** Pull the accelerator lever a bit, and pull the choke knob if the engine is cold. Return the choke knob fully to its original position after the engine has started.
- 3** Turn the switch key to START position to start the engine.
- 4** Release the key after the engine has started running. The key returns to ON position by itself.

! CAUTION


- ★ Continuous running of starter motor allows the battery to be discharged and the starter motor itself to be damaged. Do not activate the motor for more than 5 seconds without a break.
- ★ If the engine failed to be started, wait 1 or 2 minutes to try it again.

● Starting in a cold weather

When it is hard to start the engine in lower outside air temperature, take steps as follows:

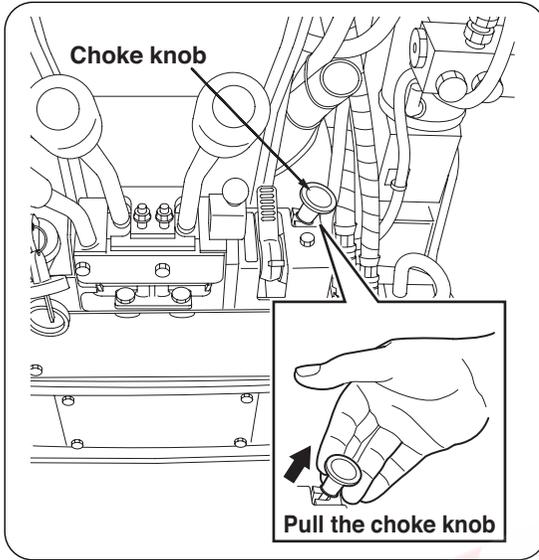

1 Pull the choke knob and pull the accelerator lever a bit to get the engine speed somewhat higher than idling.

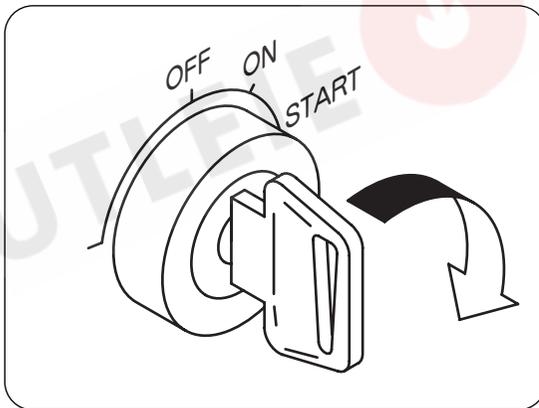

2 Turn the switch key to START position to start the engine.

3 Release the key immediately after the engine has started running. The key returns to ON position by itself.

4 Return the choke knob to its original position after the engine speed has increased

5 Return the accelerator lever to idling position after the engine makes a steady running.

◆2. Steps to be taken after engine has started


CAUTION

★Do not make the engine to accelerate abruptly before it has been warmed up.

After the engine has started, do not rush into crawling the crane but take the steps as follows:

1 After the engine has started, check for unusual noise, vibration, heat, bad odor, and for fuel leakage. If found anything wrong, stop the engine to find the cause.

2 The warming-up allows not only the lubricant to circulate well enough through each operating section but also allows the engine to be warmed up gradually to raise temperature of oil which in turn creates the better operating conditions.

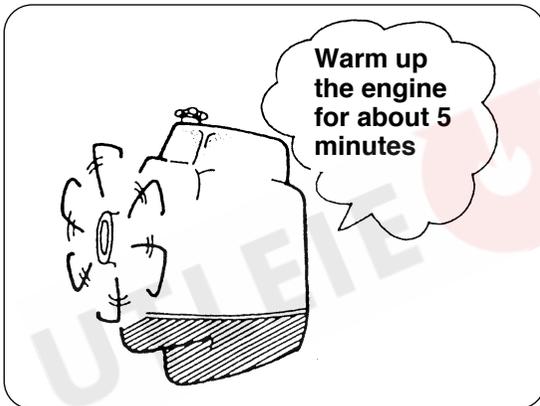

4 How to Crawl

WARNING

★ Start the crane crawling after the safety around the crawler has been confirmed and make a sign when starting the crane crawling.

★ Carry out crawling operation by standing in front of the crawling lever.

★ Keep anyone away from the crane.

★ Do not crawl the crane with someone or an object mounted on the crane.

★ Arrange those who guide at a place where it may be unsafe and you have a blind spot.

★ Crawl the crane as slowly as possible while making a turn.

★ If crawling backward, watch where it is to be crawl and restrain crawling speed.

★ Run the crane slowly when making a sharp turn and crawling on a rough road.

★ Before leaving the crane, shift the crawling lever stand to storing position and stop the engine.

★ Avoid running over obstacles.

If it is unavoidable, crawl at low speed and keep the crane to lean less than 10° to the left.

★ When parking the crane on the street is unavoidable, set up safety devices such as a sign, a barricade, and a blinking light so that passing of other vehicles and pedestrians may not be disturbed.

★ Put a pallet against the rubber crawler when parking the crane for a long period of time.

★ Do not park the crane over a place where withered grass or straw, which is flammable.

This may cause a fire by heat of exhaust pipe or exhaust fume.


★ When crawling the crane on a water filled area, observe to crawl it within allowable depth of water.

Allowable depth: Up to the center of crawling motor or of sprocket.

★ In case where the machine is forced to turn on the spot (spin turn), be sure to stop the movement of the machine first, allow the engine to run at a low speed to make it turn slowly and gently.

An abrupt turning not only damages the rubber crawler badly but also causes the machine to bounce from which may invite a very dangerous situation.

HOW TO OPERATE CARRIER

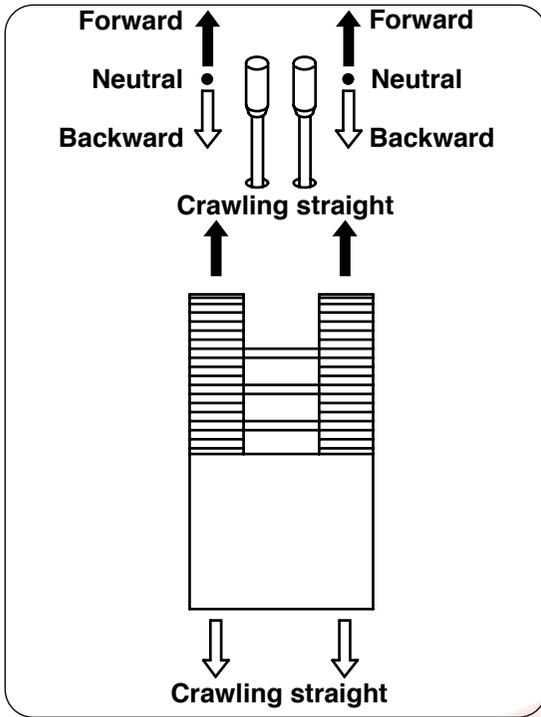

◆1. Starting, crawling, stopping the crane


1 Make sure that the crawling lever stand is shifted to “Crawl” position.

2 Shift the crawling levers (left and right) simultaneously to the other side to make the crane to crawl forward and shift the levers to this side makes it to move backward..

Shifting the levers to neutral together allows the brake to be applied automatically.

⚠ WARNING

When riding over an obstacle or going up and down a hill, do so straight-on. If you operate the crane at an angle, it may become unbalanced and tip over.

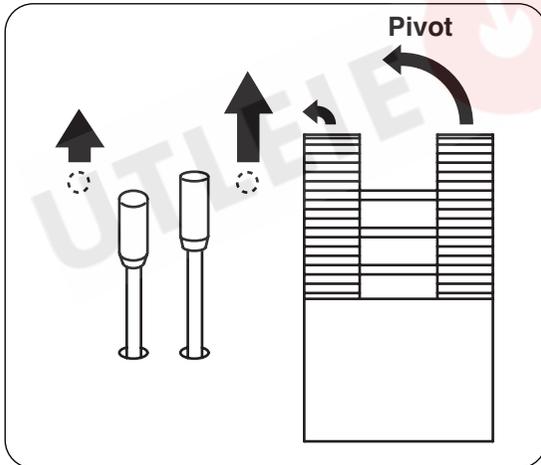

◆2. Making a turn

● Making a turn while moving

When traveling forward: It turns to the left (right) by shifting the right (left) traveling lever much further than the left (right) traveling lever.


When traveling backward: It turns to the left (right) by shifting the right (left) traveling lever much further than the left (right) traveling lever.

⚠ WARNING

Do not operate the right (left) traveling lever with the left (right) traveling lever put at its neutral position.

Otherwise, the rubber crawler damages and the machine bounces from which may invite a very dangerous situation.

In case where the machine is forced to operate this way, be sure to stop the movement of the machine first, allow the engine to run at a low speed to operate it slowly and gently.

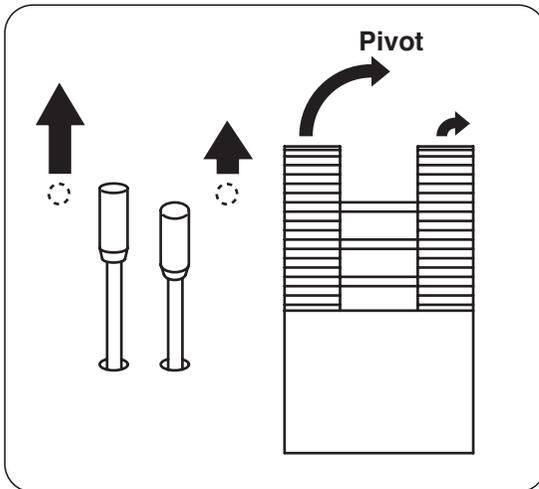

● Making a turn when the machine is at a standstill

Shifting the traveling levers both to the right and to the left forward at the same time allows the machine to turn to the right (left) if the left (right) traveling lever is moved much further than the right (left) traveling lever.


Shifting the traveling levers both to the right and to the left backward at the same time allows the machine to turn to the right (left) if the left (right) traveling lever is moved much further than the right (left) traveling lever.

⚠ WARNING

Do not operate the right (left) traveling lever with the left (right) traveling lever put at its neutral position.

Otherwise, the rubber crawler damages and the machine bounces from which may invite a very dangerous situation.

In case where the machine is forced to operate this way, be sure to stop the movement of the machine first, allow the engine to run at a low speed to operate it slowly and gently.

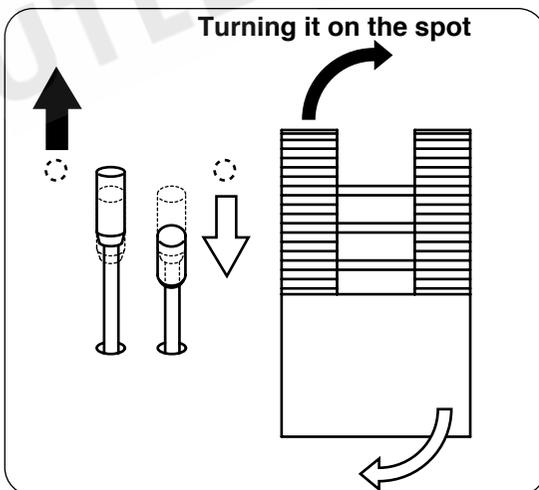

● Making a turn on the spot (spin turn)

As a rule, do not make the machine to turn on the spot.

In case where the machine is forced to turn on the spot, be sure to stop the movement of the machine first and allow the engine to run at a low speed.


Shifting the left (right) traveling lever forward and the right (left) traveling lever backward slowly allows the machine to turn to the right (left) on the spot.

⚠ WARNING

An abrupt turning not only damages the rubber crawler badly but also causes the machine to bounce from which may invite a very dangerous situation.

11. HOW TO OPERATE CRANE


1 Designation of each control lever and location

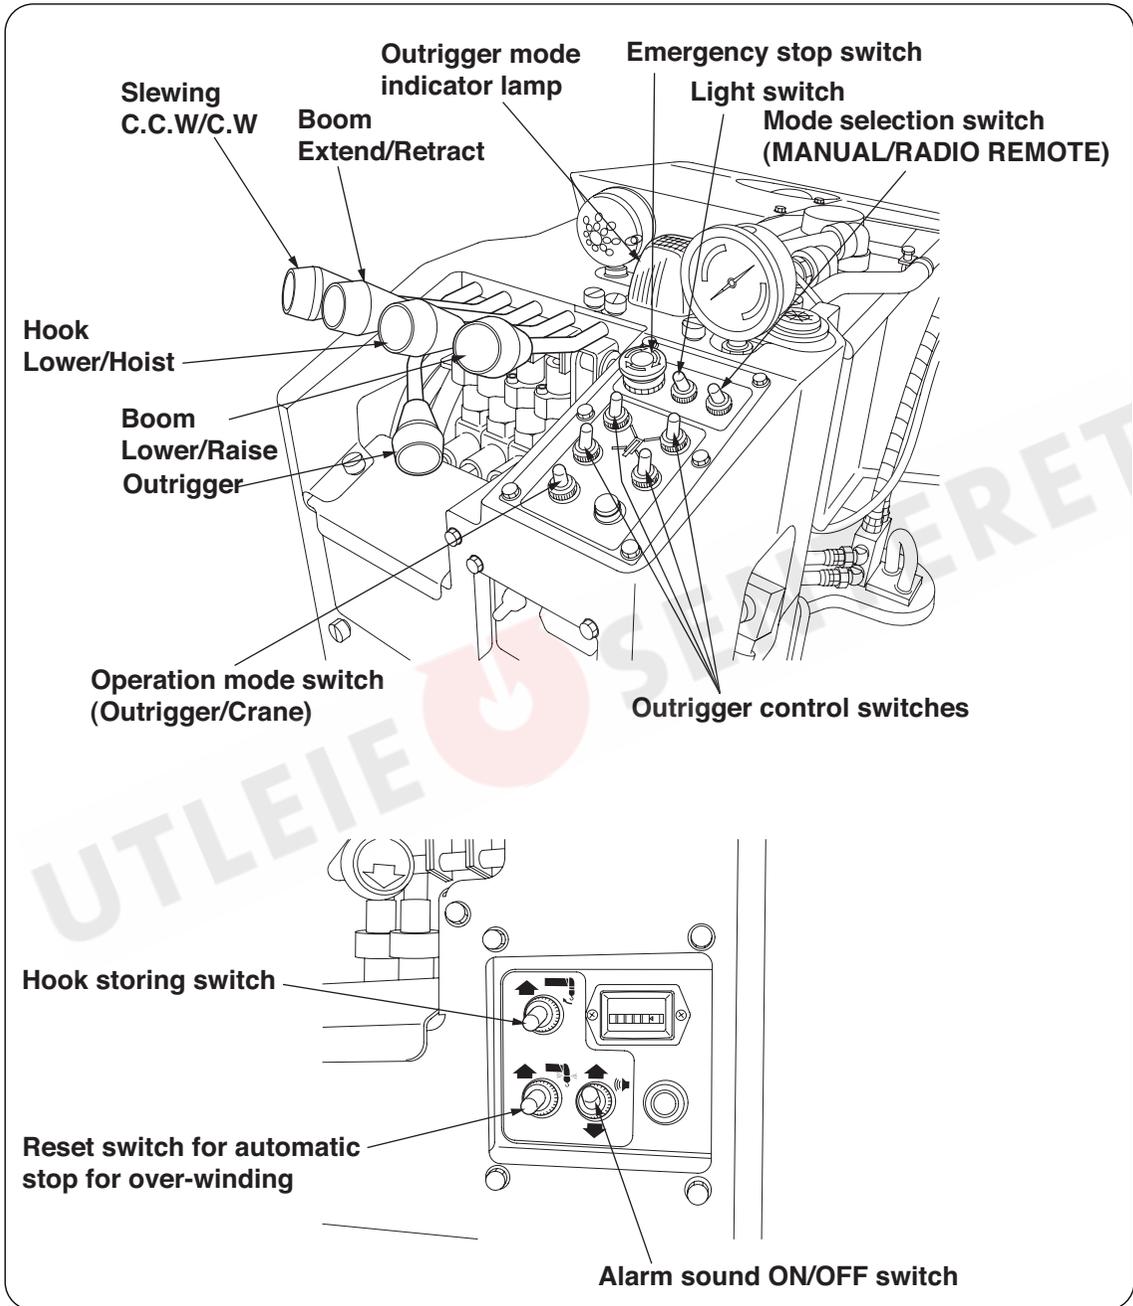

2 Preparation before operation

! WARNING

★Do not let anyone stand under or in front of the hook as it swings when it is released from the hook holder. Failure to do this may invite an accident.

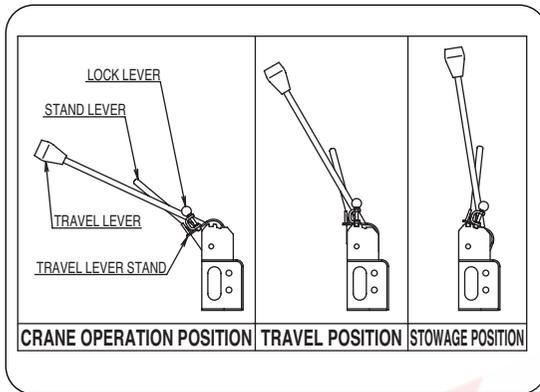

- 1 Set the crawling lever stand to “Crane” position.
- 2 Make sure that each lever for controlling crane and outriggers is at its neutral position.
- 3 Start the engine. Set the engine speed at somewhat higher than idling. (Running the engine idle may result in engine stop when operating crane functions).
- 4 Turn the operation mode switch to “Outrigger”. (Outrigger mode indicator lamp lights.)
- 5 Turn ON the alarm sound switch.

! CAUTION

★In winter time, do not rush to operate the crane even after the steps illustrated above, preparation before operation, have been completed. Run the hydraulic pump for a while to warm it up.

★Since viscosity of hydraulic oil is too high when the oil temperature is low, high-speed running of hydraulic pump fails the oil to be circulated so that the pump may be damaged.

3 Procedures to set up outriggers

WARNING

★Crane operation without setting up the outriggers is strictly prohibited.

★Do not operate the crane and extend the vertical cylinders and inner boxes while outriggers have been stored.

★When setting up the outriggers on a rough ground or on a slope, be sure to place a support (such as plank, steel plate etc.) under the outrigger foot flanges to keep the crane level.

In addition, when the crane is to be operated on a soft ground, take the same measures to prevent the outrigger foot flanges from sinking into the ground when a cargo is lifted up.

Setting up the crane on a ground where it is not solid and firm enough may cause it to be overturned.

★Do not put your foot under the outrigger foot flange while outriggers are being extended.

It may invite such accident as that the foot may be crushed by the outrigger.

★Operation with the crane kept leaning makes it unstable when a cargo is lifted up.

Such operation can cause the outriggers to be damaged and the crane to be overturned.

★The rated load is to be changed according to how far (maximum, halfway, minimum) the outriggers are extended.


Be sure to consult the “sticker concerning PROHIBITED AREA OF CRANE OPERATIONS” for the rated load corresponding to each extension.

★In normal crane operation, set up the crane level on a solid and firm ground with the outriggers fully extended and lift up the crane body by approx. 2in.(50mm) above the ground.

★When outriggers are extended or being stored, be sure to insert the set pins so that the outriggers may not be rotated unexpectedly.


★When extending outriggers, extend the inner boxes and allow them to touch the ground by using the vertical cylinders.

★Be sure to touch the outriggers to the ground, as the crane may sink into the ground naturally if they are detached away from the ground.

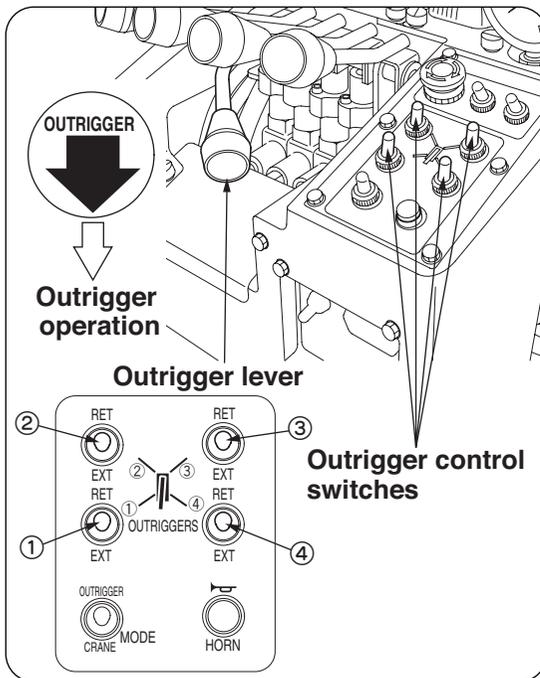

There are four (4) outrigger control switches and each switch is numbered. Select an outrigger control switch to throw it to desired function and operate the outrigger lever accordingly.


Set up the outriggers as follows:

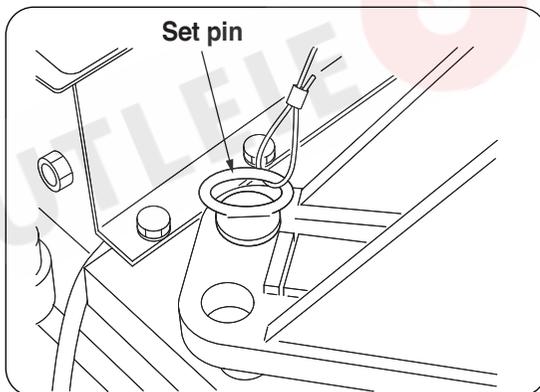

1 Extract the outrigger set pin and insert it in appropriate place while referring to the sticker "PROHIBITED RANGE OF CRANE OPERATION".


2 Remove the lock pin (1) in the arm and hold the knob of outer box firmly to lift it up. Insert the lock pin and retain it with a stopper pin.

3 Remove the lock pin (2) to pull out the inner box. Insert the lock pin (2) and retain it with a stopper pin.

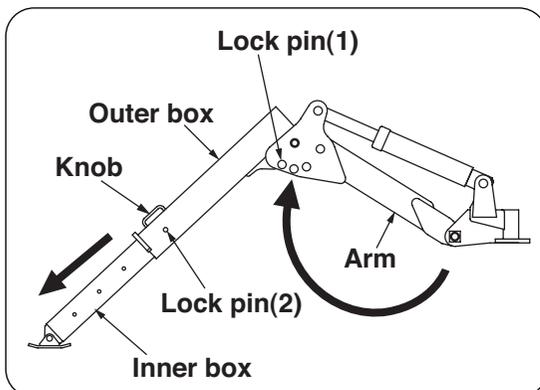


4 Control each outrigger control lever to adjust that the crane body is raised by approx. 2in.(50mm) above the ground and it keeps level by referring to a level.

⚠ WARNING

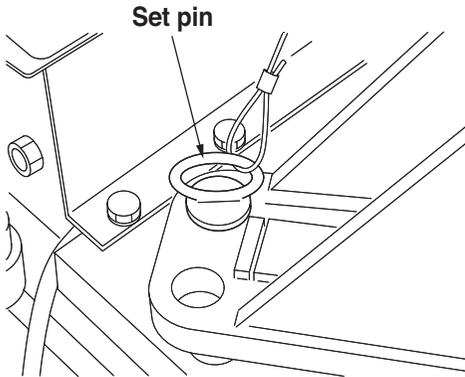


★ Insert each set pin securely when the outriggers are being stored and set up on the ground. Insufficient insertion of the set pins allows them to come off which in turn may make the crawler to lose balance causing the crane to be overturned.

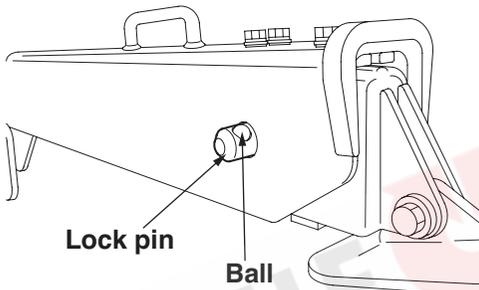

★ Be sure to insert the lock pin fully and check that the retaining ball is jugged out of the pin. If the lock pin has not been inserted fully, it gradually escapes during crane operation which in turn may cause over-turn of the crane.

⚠ DANGER

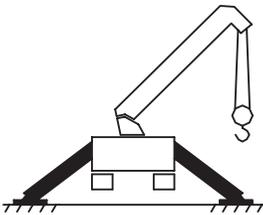

★ Before operating the crane it is mandatory to set up all the outriggers.

◆ Extension of outriggers and rated load

! WARNING


★ Rated load is expressed when the outriggers are extended to maximum and to a distance below maximum with their spread angle set the same.

As a rule, set the outriggers extended to their extremes and with the spread angle of each 50°.


When any one of 4 outriggers has not been set to the maximum extension, the rated load other than maximum extension is to be applied which must be observed.

★ Since prohibited range of crane operation is specified according to spread angle of outriggers, confirm it on the sticker. If it is failed to observe, the crane may be overturned.

Outriggers extended to maximum

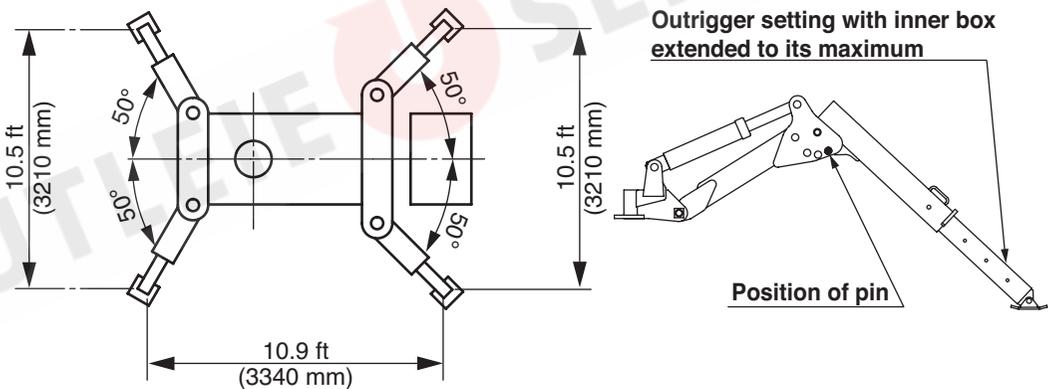

Example: Outrigger setting to a distance below maximum (Figure shows they are set to minimum extension).

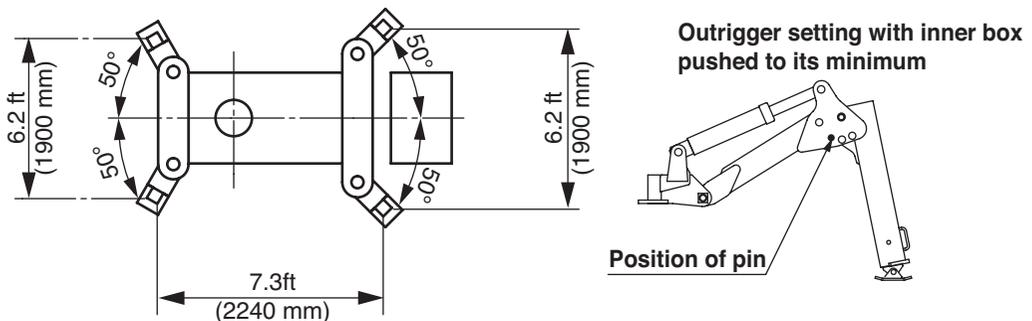

4 How to operate boom for “derricking” (raising and lowering)

! WARNING

★An abrupt crane operation while a cargo is being lifted up gives an excessive shock to the crane which may cause the crane to be damaged or the crawler to be overturned.


Be sure to control levers slowly.

★The longer the boom is extended, the faster a cargo is lifted up and down by boom derricking operation.

Operate the boom so that a cargo can be lifted up slowly.

★When lowering boom with a cargo hoisted, the working radius increases which in turn decreases the capacity specified in the rated load chart.

Check the readings of load indicator to confirm the safety before the boom is lowered.

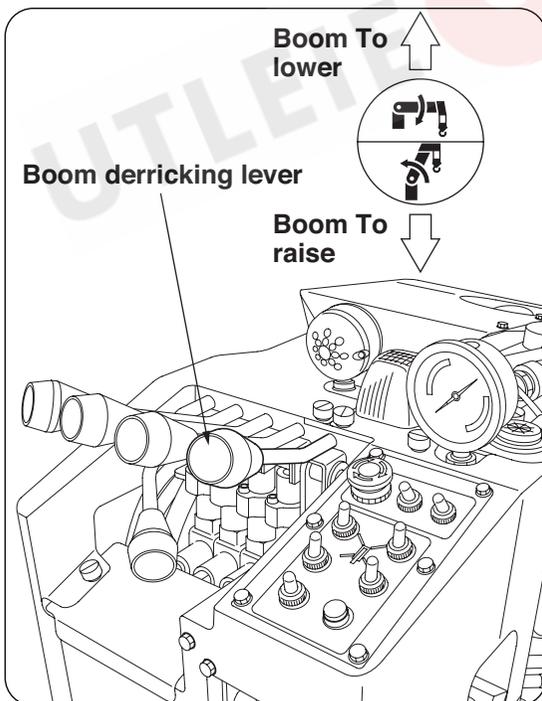

To raise

Shift the lever to “RAISE” to raise the boom.

To lower

Shift the lever to “LOWER” to lower the boom.

To stop

Return the lever to neutral position to stop the boom derricking.

◆Power automatic accelerator


When the control lever is shifted further to “RAISE” or “LOWER”, the engine speed increases according to the movement of the lever which in turn increases derricking speed of the boom as the lever is interlocked with the accelerator.

5 **How to hoist and lower the hook**

! WARNING

★Pay attention that the hook will not be over-wound.
Be sure to turn ON the “alarm sound ON/OFF switch”.

★If the hook hits against the boom top due to being over-wound of the hook, it may cause damage to the wire rope and the sheaves at the boom top and may cause the lifted cargo to fall.

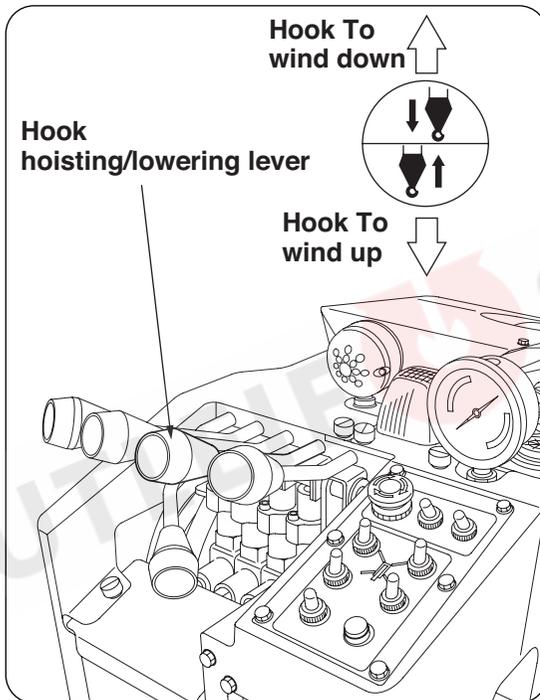

To wind up(raise)

Shift the lever to “UP” to raise the hook.

To wind down(lower)

Shift the lever to “DOWN” to lower the hook..

To stop

Return the lever to neutral position to stop the hook being wound up/down.

◆**Power automatic accelerator**

When the control lever is shifted further to "WIND UP" or to "WIND DOWN", the engine speed increases according to the movement of the lever which in turn increases hoisting speed of the hook as the lever is interlocked with the accelerator.

 **CAUTION**

★Further paying out of the wire rope after the hook has reached the ground causes the rope to be irregularly wound around the drum. Lifting up a cargo with the rope irregularly wound on the drum damages the rope which results in remarkable shortening of its service life.

★When paying out wire rope longer such as down to underground work site, make sure that more than 3 turns of wire rope shall always be left on the drum.

★When the first layer of wire rope fails to be wound around the drum firmly and regularly, ropes wound over the first layer may dig into the inner layers to cause an irregular winding, When the wire rope is unwound to or wound up from the first layer of rope, wind it up/down slowly so that the first layer of rope can be wound around the drum firmly and regularly.

★Stop the crane operation when hydraulic oil temperature exceeds 176°F(80°C). Oil temperature is apt to rise easily if repeated operation of winding up/down of the hook, especially in a high lift, is carried out.

■ To know approximate oil temperature by sense of touch:


158°F (70°C)	You can touch the oil tank (Lower part) with the palm of your hand for 3~4 seconds.
176°F (80°C)	You can touch the oil tank (Lower part) with your finger tip for 1~2 seconds.
194°F (90°C)	The moment you touch the oil tank (Lower part), you will let the hand off by reflex action.

6 How to telescope boom

! WARNING

★If the boom is extended further with the hook come close to the boom top, the hook may hit against the boom top causing the wire rope and the sheaves at the boom top to be damaged, and the fall of lifted cargo may result.

★Be sure to turn ON the “alarm sound ON/OFF switch”.

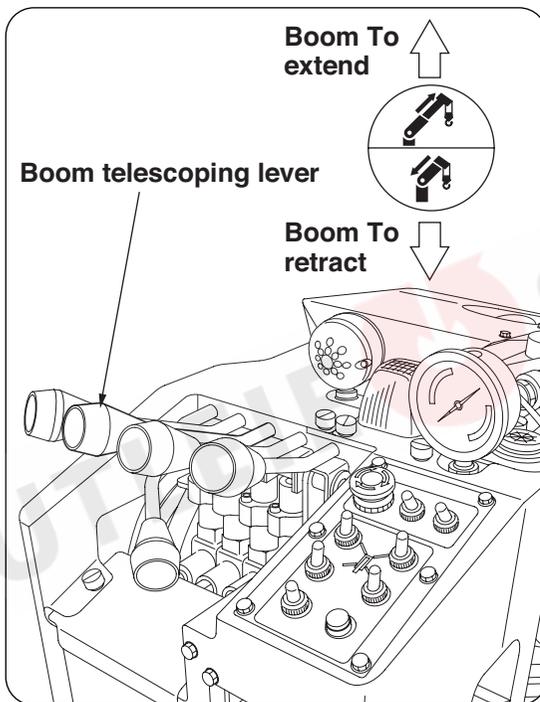

To extend
Shift the lever to “EXTend” to extend the boom.

To retract
Shift the lever to “RETract” to retract the boom.

To stop
Return the lever to neutral position to stop the boom telescoping.

◆Power automatic accelerator

When the control lever is shifted further to “EXT” or “RET”, the engine speed increases according to the movement of the lever which in turn increases telescoping speed of the boom as the lever is interlocked with the accelerator.

! CAUTION


★The hook is lifted up as the boom extends and is lowered as it retracts.

When telescoping the boom, pay attention to where the hook is.

7 How to slew boom

! WARNING


- ★ Carry out slewing operation slowly without raising the engine.
- ★ Slewing without outriggers set up is strictly prohibited.
- ★ Control levers slowly to allow the boom to make a smooth start and stop slewing.
An abrupt lever control with a cargo hoisted allow it to swing which may cause hitting against the other objects and overturn of the crane.
- ★ The longer the boom is extended and the smaller the derricking angle becomes, the lifted cargo moves faster.
Perform slewing operation slowly with the above in mind.

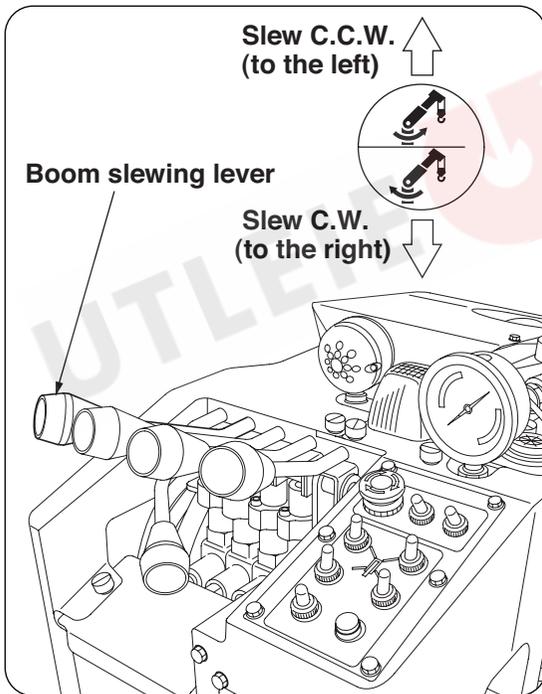

To slew to the right(C.W.)
Shift the lever to “↻” to slew it C.W..
To slew to the left(C.C.W.)
Shift the lever to “↺” to slew it C.C.W..
To stop
Return the lever to neutral position to stop the boom slewing.

◆ **Power automatic accelerator**
When the control lever is shifted further to “↻” or “↺” direction, the engine speed increases according to the movement of the lever which in turn increases slewing speed of the boom as the lever is interlocked with the accelerator.

HOW TO OPERATE CRANE

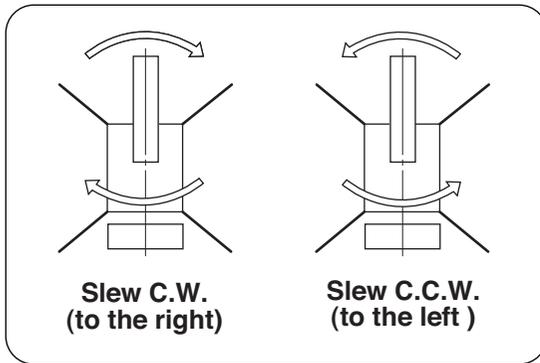

For slewing direction of boom, “slew to the right” means slewing in the direction as the hands of a clock rotate (C.W.) and “slew to the left” means slewing in the opposite direction of clock hands rotate (C.C.W.) when viewed over the crane.

CAUTION

★ Before starting the boom to slew, sound the warning horn to those who are attending or in the working site.


8 How to store crane

! WARNING

★Be sure to store the boom from the left hand side of the operator's position.

★Be careful about the storing the crane and slow down operating speed as the distance between the boom and each control lever becomes close.

In addition, be sure to store the crane to observe the procedures as follows:

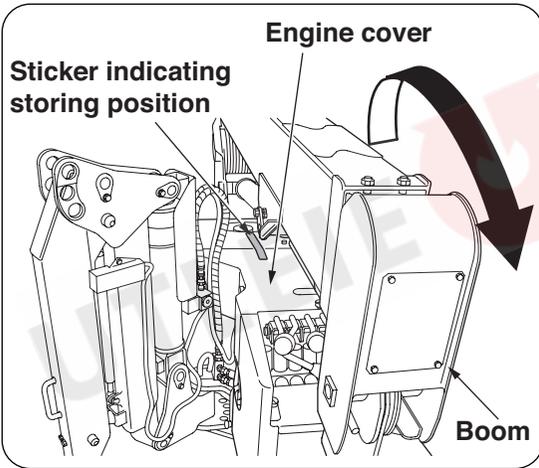


- 1** Retract the boom.
- 2** Slew the boom to a place close to the "sticker for boom storage".
- 3** Lower the boom to its extreme.
- 4** Position so that the side of boom of your side comes right over the sticker indicating storing position stuck on the engine cover.
- 5** Store the hook.

9 Procedures for storing hook

! WARNING

- ★Never try operating the crane by controlling the hook storing control switch as this is dangerous.
- ★Store the hook after all boom sections have been retracted and lowered fully.
- ★Do not operate the hook storing control switch and other control lever at the same time which may cause a malfunction and a breakdown.

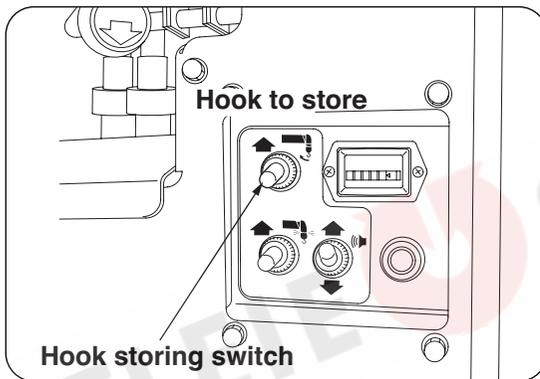

1 Hoist up the hook with the “hook storing switch” turned to “Store”. The hook stops being wound up when the hook hits against the weight of over-winding alarm.

2 Wind up the hook slowly by controlling the hook storing switch after the hook is at a standstill. Release the switch after the hook has been stored.


! CAUTION

- ★Storing hook while it is swinging may cause the boom, the hook, and the wire rope to be damaged.
- ★Take care that the manual control lever for hoisting/lowering hook moves toward hoisting side when storing the hook.


10 How to store outriggers

! WARNING

- ★ Start storing outriggers after the boom has been stored.
- ★ When storing outriggers, be sure to retract the inner boxes to their extremes after the cylinders have been fully retracted.
(It is very dangerous that inner box may fall by own weight unless the inner boxes are retracted after the cylinders have been fully retracted.)
- ★ When storing the outriggers, be sure to insert the set pins securely so that the outriggers may not be rotated unexpectedly.

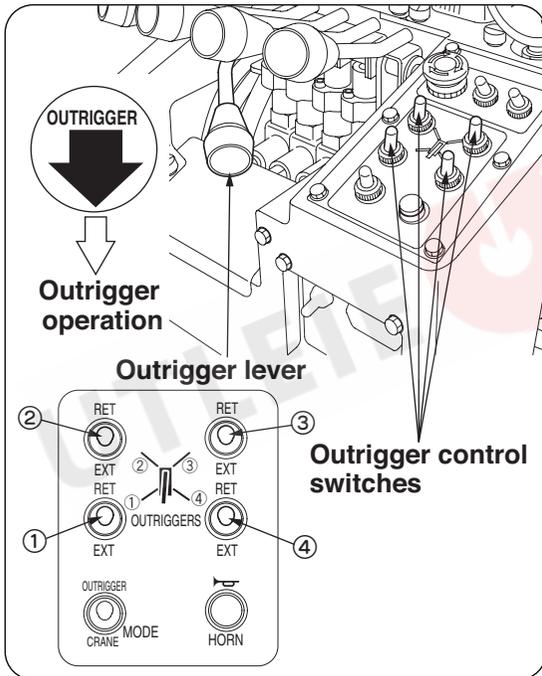

There are four (4) outrigger control switches and each switch is numbered. Select an outrigger control switch to throw it to desired function and operate the outrigger lever accordingly. Carry out each operation of the outriggers according to instructions on the sticker.

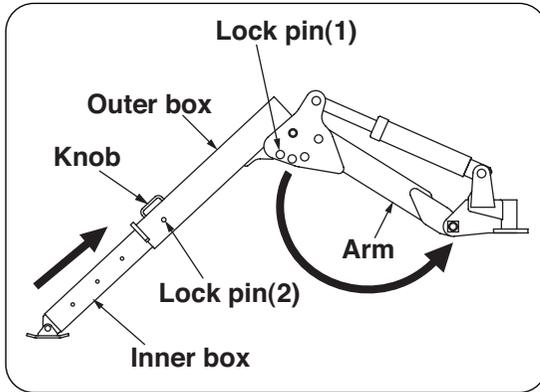

Store the outriggers as follows:

- 1** Retract the cylinders fully first to retract the inner boxes to their extremes.
- 2** Remove the lock pin (2), push in the inner box fully, and insert the lock pin (2) back again.
Retain the lock pin with a stopper pin.
- 3** Remove the lock pin (1) in the arm and hold the knob of outer box firmly to push it down strongly.
Insert the lock pin (1) and retain it with a stopper pin..
- 4** Remove the outrigger set pin and insert it securely in appropriate place so that the outrigger may not be rotated unexpectedly.

●Remarks

Outriggers may be lowered while crawling for a long time which is not a fault.

11 Storing position when the machine body has been lifted up


! WARNING

★When the machine body is to be lifted up by using the lifting hook located upper side of the boom, be sure to store the machine body at the storing position when it has been lifted up.

★Lifting up the machine body with the hook stored at the top of the boom without securing it with the bracket for fixing hook allows the derrick cylinder to be extended.


Since this is very dangerous, do not lift it up in such a way mentioned above.

When the machine body is to be lifted up by using the lifting hook located upper side of the boom, store the hook according to procedures illustrated below.

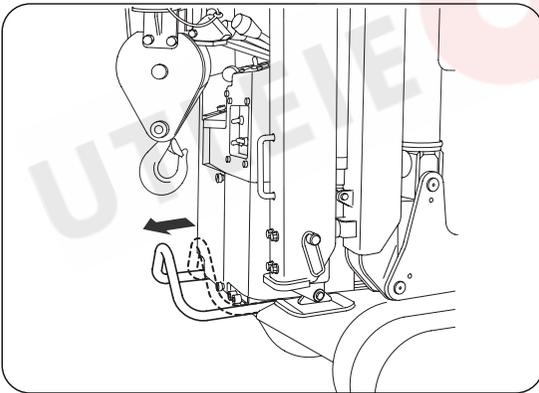


1 Store the crane by following instructions illustrated in the section “9 How to store crane” (on page 11-13).

2 Extract the hook store bracket fully out of the crane body side.

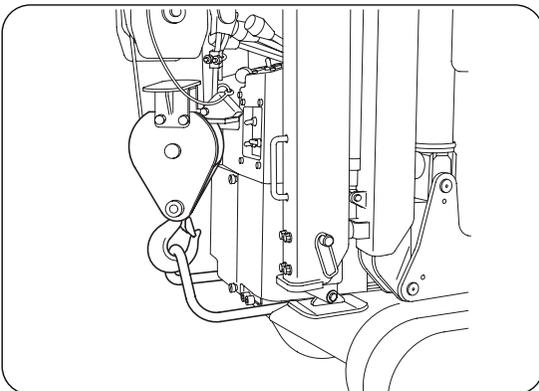

3 Put the hook on the storing bracket to wind it up slowly by the hook store switch. Release the switch after the hook has been stored.

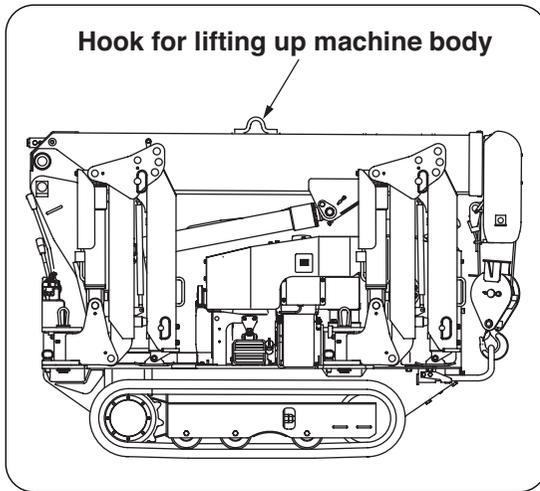

- 4** Lift up the machine body by using the hook located upper side of the boom.

UTLEIE  SENTERET

12 **How to switch manual operation mode to/from radio remote control mode**

1 Put the traveling lever stand in the operating position of the crane.

2 Check that each lever for controlling the crane and the outriggers stays at its neutral position.

3 Start the engine.

4 When operated in manual control mode, the outriggers and the crane can only be operated by manual control.

No operation can be carried out through radio remote controller.

The operation mode indicator lamp located on the top of cover will not be lit during manual control mode.

5 Push the mode selection switch to switch it to the radio remote control mode.


6 When it is switched to the radio remote control mode, the outriggers and the crane can only be operated through radio remote controller.

Turn ON the radio remote controller to carry out remote control operation.

The outriggers and the crane cannot be operated by manual control.

7 When switched to radio remote control mode, the operation mode lamp located on the top of cover will be lit.

The lamp should always be lit when operated on radio control mode.

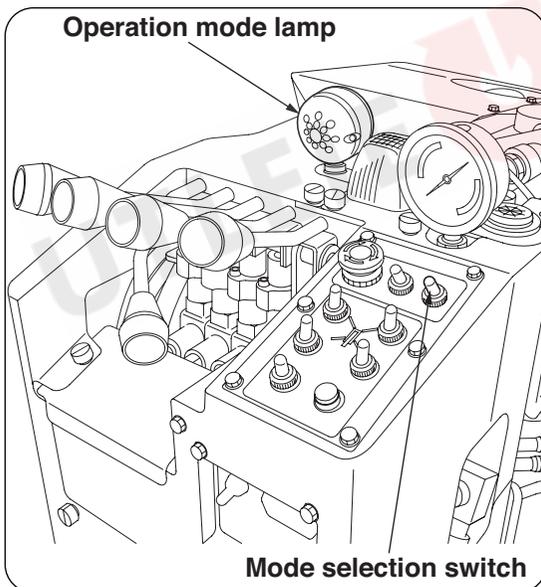

 **CAUTION**

★The state of each operation mode will be maintained even after the power has once been turned OFF.

Check the operation mode and the operation mode indicator lamp when it has been re-started.


★The operation mode indicator lamp functions according to each operation mode as follows:

Radio control mode : Operation mode indicator lamp lights.


Manual operation mode : Operation mode indicator lamp goes off.

UTLEIE  SENTERET


13 Operation in an emergency

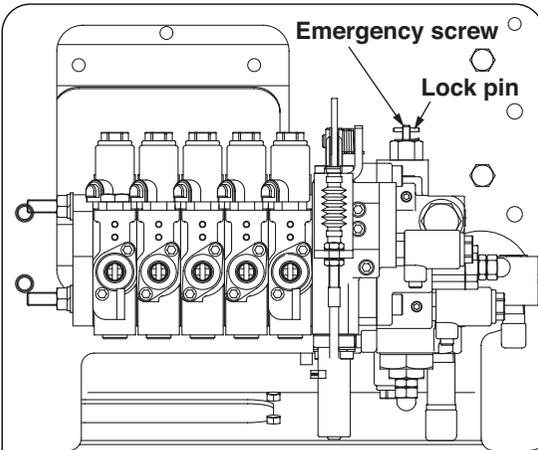

(On the top side of control valve)

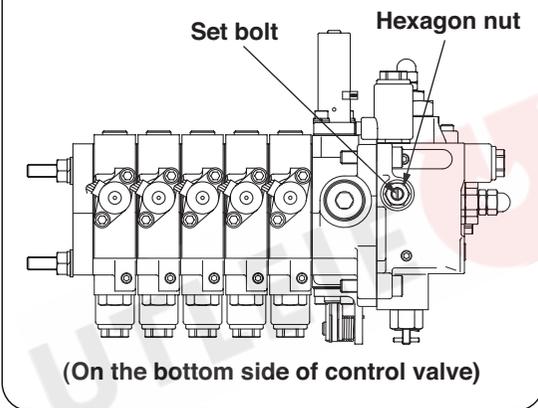

(On the bottom side of control valve)

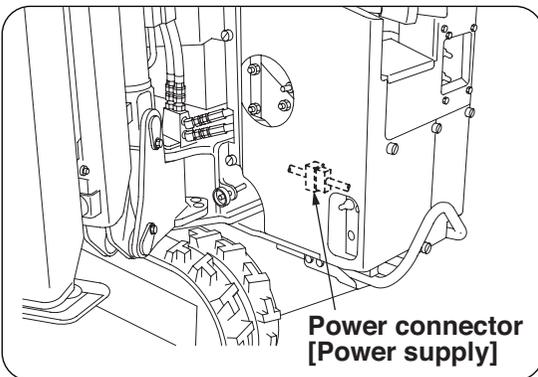

If the crane fails to be operated either by radio remote control or by manual control, operate the crane by taking procedures as follows:

Procedure 1

- ① Disconnect the power connector [BATTERY MAIN] located under the control valve.
- ② Remove the lock pin attached to the emergency screw and gently turn the emergency screw clockwise until tight. (Pay attention that the screw may break if it is tightened with an excessive force.)
- ③ Check that all manual control levers are at their neutral positions. If a lever has been caught in halfway, return it to its neutral position.
- ④ Loosen the hexagon nut attached to the lower part of the control valve and then tighten the locked set bolt until tight. This allows the crane to be operated.

 **CAUTION**

★Be sure to disconnect the power connector after the emergency screw has been tightened up.

If the power connector is disconnected without tightening up the emergency screw, the crane may make an abrupt movement.

★If the power connector is disconnected, operate the crane carefully as the engine speed control, the voice message, and the safety device such as automatic stop will not function.

★Since this is a temporary measure when in an emergency, be sure to repair the crane at an authorized UNIC service shop after the crane has been stored.


UTLEIE  SENTERET

14 How to operate outriggers when in an emergency

! WARNING

★Do not touch the engine, muffler and its cover with your bare finger/hand as they are very hot immediately after operation.

★Be sure to put the cover back again after the outriggers have been stored.

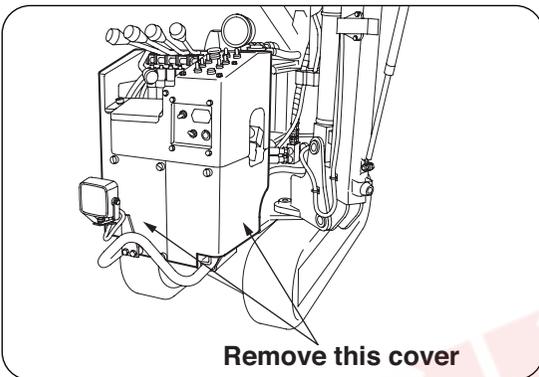


If outriggers fail to make a functioning correctly in normal operation, operate outriggers temporarily according to procedures illustrated below.

1 Remove the cover over the outrigger valves.
Remove the thumb-screws (13 places) to remove the cover.

2 Push the solenoid valve button of outrigger you want to operate with a bar such as screwdriver.

When the outrigger control lever concerned operates, the outrigger functions.

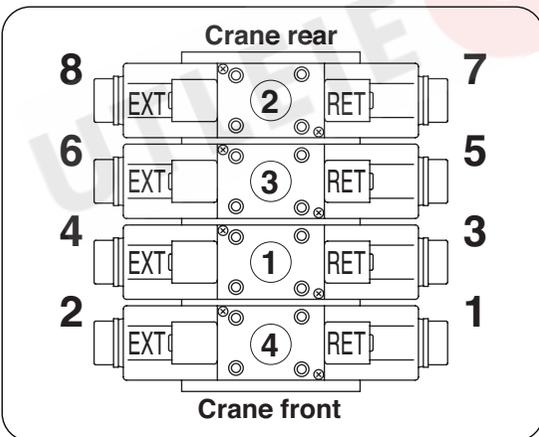

Outrigger to be operated		Operation
Outrigger ①	Retract	Operate lever with button 3 depressed
	Extend	Operate lever with button 4 depressed
Outrigger ②	Retract	Operate lever with button 7 depressed
	Extend	Operate lever with button 8 depressed
Outrigger ③	Retract	Operate lever with button 5 depressed
	Extend	Operate lever with button 6 depressed
Outrigger ④	Retract	Operate lever with button 1 depressed
	Extend	Operate lever with button 2 depressed

! CAUTION

★While cover is being removed or when depressing a solenoid valve button, work carefully not to damage the electric wiring.

★After the procedures have been completed, have the crane repaired by the nearest UNIC service shop.

12. U-WAVE, Radio remote control device

1 Request to those who operate the crane

This radio remote control device conforms to regulations for specified small power radio station in the radio wave law.


Use of U-WAVE, “specific low power type” interlocking radio control device, allows the crane operation that will hardly be influenced by radio interference compared with conventional radio remote controllers of weak radio wave type.

In addition, there is no need to get qualification, license, or registration in using the radio remote control device.

Read this manual carefully and understand the contents to use this device.

◆ When making inquiries


When making inquiries, be sure to inform us of model, serial number illustrated on the following label in the remote control transmitter.

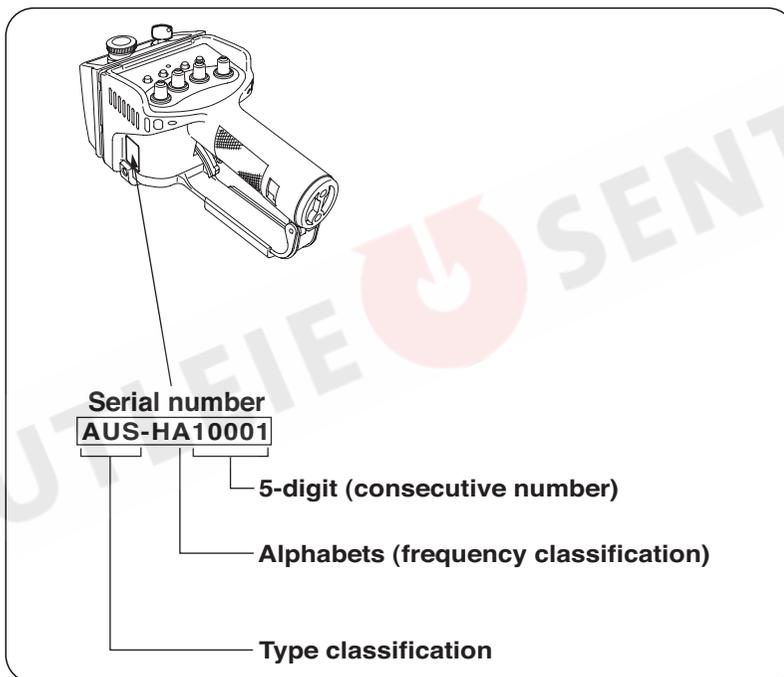


2 Safety precautions

WARNING

★Observe the cautions for securing safety.
Failure to observe the cautions may invite troubles or serious accidents.

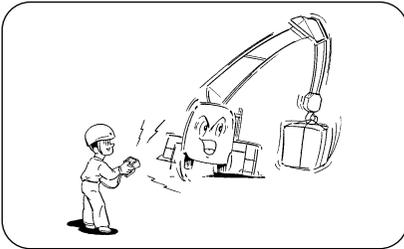

1 In case of crane operation through transmitter, pay attention to circumstances around the crane and to the safety especially for the crane that it will not to be overturned as the operator is to control the crane at a distance.

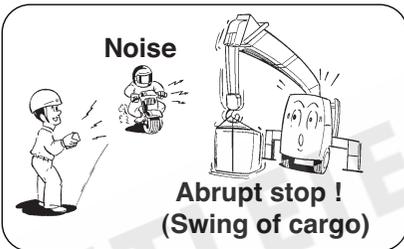

2 Pay attention to the swing of a lifted cargo as the crane may make an abrupt stop when operating it through radio remote control device because it may be affected by radio interference, radio jamming, and noise coming from outside.


In order for the crane system not to be affected easily by noise coming from outside, operate the crane with the following in mind:

- ① Operator must not leave the crane unnecessarily.
Operate the crane within working radius of the crane.
- ② Correct or repair the transmission antenna (located at the stem of transmitter) if it has been distorted or damaged.

●Remarks

Typical source of noise interference:

- Ignition noise emitted from the engines such as of motorcycles or of portable generators.
- Buzzers using contacts such as for alarming when reversing vehicles.
- Electric motors of air-conditioner fan, electric fan, and flashing beacon mounted in cab compartment.

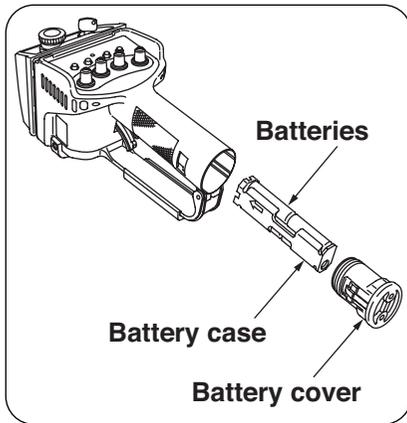

- 3** Remove the batteries when the transmitter will not be used for a long period of time. Otherwise, leakage of battery may result. Be sure to observe the cautions indicated on the batteries as liquid inside will leak due to wrong use of batteries.

- 4** Dispose of used batteries in accordance with local regulations.



- 5** Never try disassembly or alteration of transmitter, receiver, and control box. Do not remove the stay of transmitter as the transmission antenna is built in it.



- 6** Do not drop or hit the transmitter against something, or give a strong shock, as it may cause damage to the enclosure or breakdown of electronic components. In addition, dropping or giving a strong shock to the transmitter may damage batteries inside causing generation of heat. If the transmitter has been given a strong shock, be sure to check batteries and replace them if damaged.



- 7** Do not wash the transmitter with water directly. Wipe dirt off the transmitter with a piece of cloth wet with water or diluted detergent. Avoid using an alkaline detergent, an alcohol, or a spraying washing detergent for this purpose as they may cause the plastic housing of transmitter to crack.

U-WAVE, Radio remote control device



8 Do not thrust the control panel in the transmitter and/or control keys with a sharp article as it may make a hole resulting in entering water inside through it.



9 Do not give the transmitter an abrupt temperature change. An abrupt temperature change may cause a fault due to building-up condensation inside of the transmitter.




10 Do not put or store the transmitter where:

- It is exposed to direct sunlight,
- It is in front of hot air outlet exhausted out of the vehicle, and
- It is close to a heating apparatus or it is too humid.


3 Designation of each equipment

◆1. Construction of radio remote control device


(Showing typical mounting example)

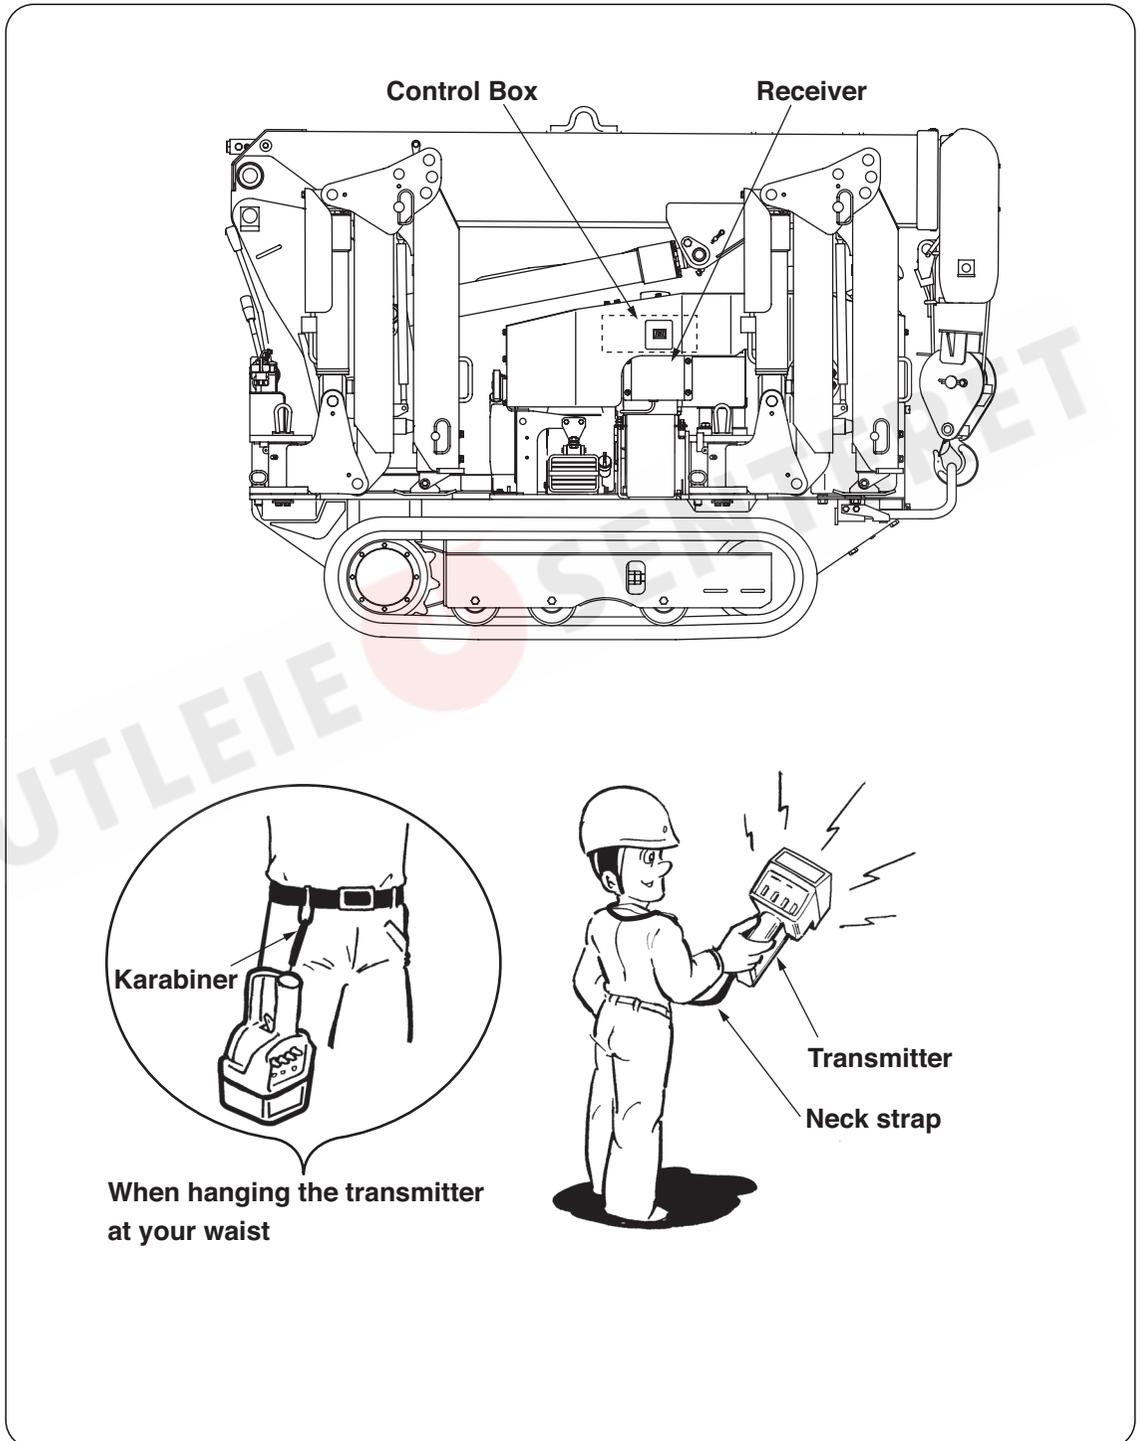

◆2. Designation of each part of transmitter

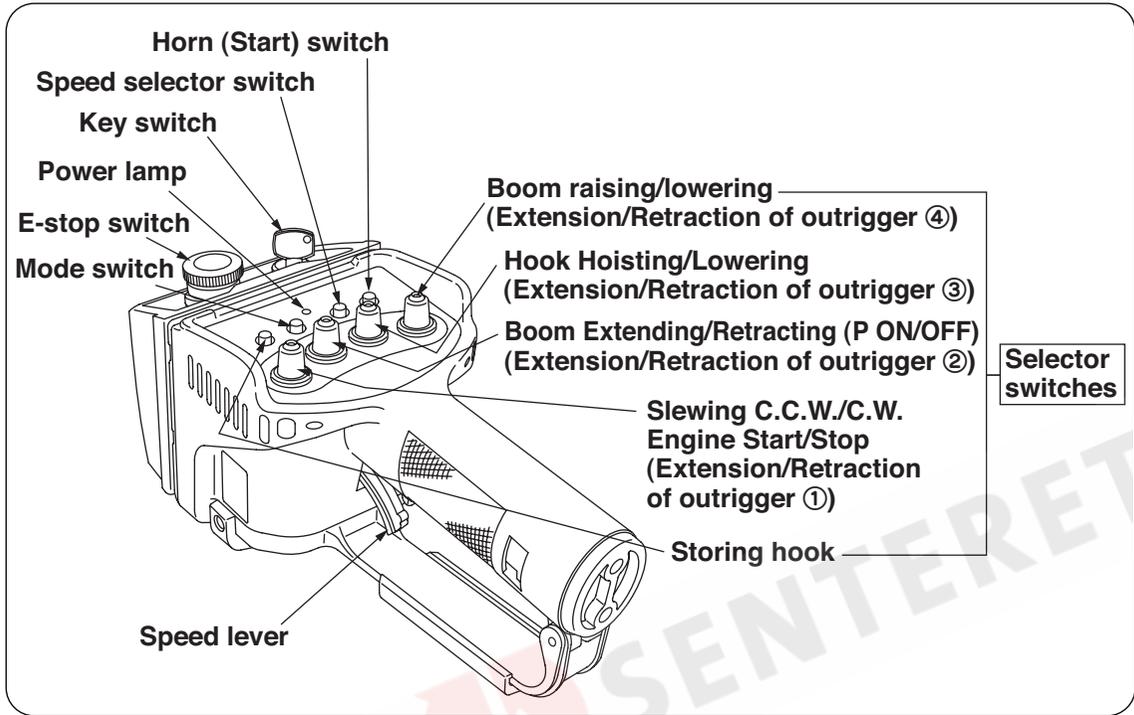


◆3. Designation of each part of receiver

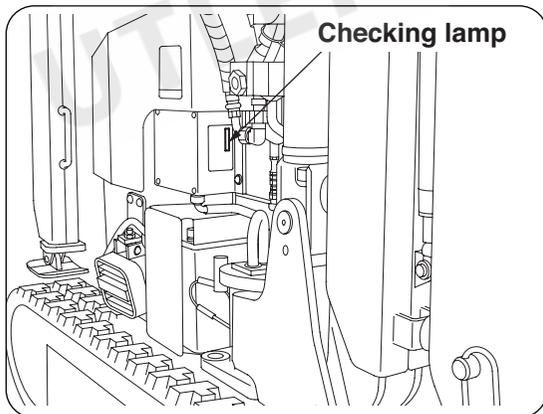

*Receiving antenna is built in the receiver.

◆4. Designation of each part of control box

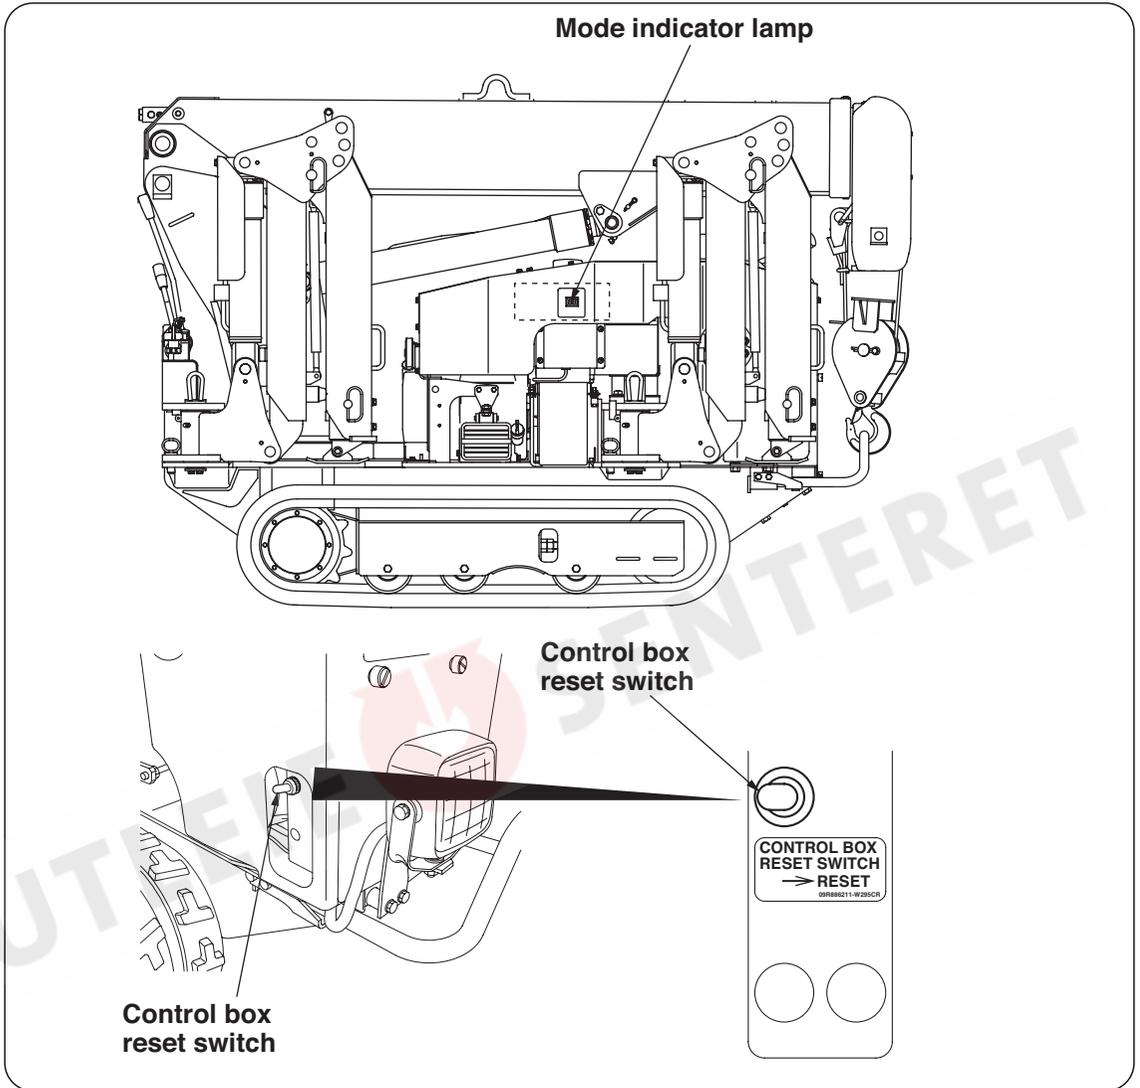


4 Inspection before crane operation

Before starting crane operation, check that the control box functions correctly according to procedures below.

●Remarks

Since power to the “control box” is to be controlled by the engine starter key, it is energized automatically when starting the engine and “mode indicator lamp” in the “control box” lights.

Also, the “power lamp” on the “radio control receiver” blinks in green.

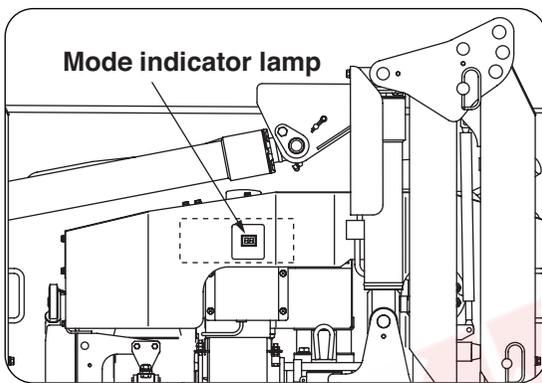

◆1. Checking mode indicator lamp

The “mode indicator lamp” makes a full lighting as in [B.B.] for about 2 seconds after the starter key is turned ON.

◆2. System diagnosis

The crane is carrying out system diagnosis while the “mode indicator lamp” is fully lit up.

What is to be checked during system diagnosis is if:

- Electronic circuit in the control box is functioning correctly,
- Manual control lever is at its neutral position, and
- Radio control receiver is connected to the crane and the receiver functions normally.

⚠ CAUTION

★ Do not make a crane operation while system diagnosis is being carried out.

If the crane is operated during the system diagnosis, voice message, “Beep, Service remote control, Service remote control”, sounds and the crane is turned into inoperable conditions.

If this happened, depress the control box reset switch.

This starts the system diagnosis again.

If it was found normal after the system diagnosis has been completed, the mode indicator lamp lights either one of following indication and voice message, **“Ping-pong, Remote control ready, Remote control ready”**, is issued.

Mode	Information	Indication priority
00	Current operation mode is on normal radio remote control mode.	4
0F	Current operation mode is traveling mode.	1
04	Current operation mode is on outrigger radio remote control mode.	2
10	Hook hits against weight for over-winding alarm (over-wound condition).	3

- Since priority is assigned for each mode in its information, it is to be indicated in the order of higher priority.

●Remarks

If the “mode indicator lamp” indicates [04], current control is on outrigger radio control mode.

No crane operation other than extension/retraction of outriggers is possible.

When operating the crane, turn the “crane/outrigger operation mode selector” switch to “crane”.


⚠ CAUTION

★ If the “mode indicator lamp” fails to make a full lighting during system diagnosis, or voice message, **“Beep, Service remote control, Service remote control”**, is issued despite the fact that the crane has not been operated, take measures according to the section 12. 8 ◆3. **“Trouble inspection”** (on page 12-39).

5 How to switch crane operation mode

The crane can be operated either by manual control levers or by the radio remote control transmitter.

Switch crane operation mode to the manual control mode for operating the crane with manual control lever, and to the radio remote control mode for operating the crane through radio remote control transmitter.

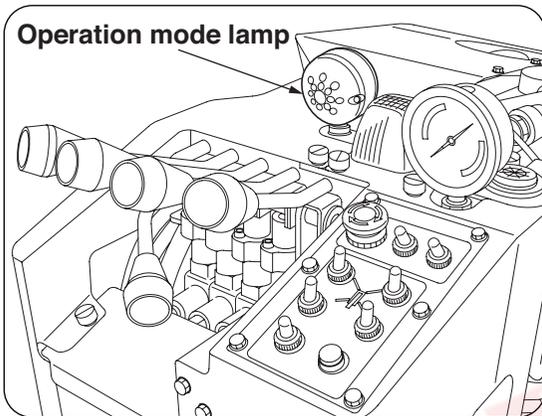

How to switch operation mode

Switching of manual control mode between radio remote control modes is to be made by the mode selection switch mounted on the cover.

Depression of mode selection switch when operated on manual operation mode allows to switch it into the radio control operation mode and following voice message is issued: "Remote control ready, Remote control ready"

The operation mode lamp lights when switched to the radio control operation mode.

Depression of mode selection switch when operated on the radio remote control mode allows to switch it into the manual operation mode and following voice message is issued: "Crane mode, Crane mode"

The operation mode lamp goes off when switched to the manual operation mode.

The crane can only be operated via manual control levers when it is on the manual control mode but it cannot be operated through the radio control transmitter.

The crane can only be operated through the radio control transmitter when it is on the radio remote control mode but it cannot be operated via manual control levers (including outriggers).

List of available functions to be operated on each control mode

Crane operation		Operation mode	
		Manual	Radio remote control
Manual lever	Boom Raising/Lowering	○	×
	Hook Hoisting/Lowering	○	×
	Boom Extending/Retracting	○	×
	Slewing C.C.W./C.W.	○	×
	Outrigger Extend/Retract	○	×
Radio remote control transmitter	Boom Raising/Lowering	×	○
	Hook Hoisting/Lowering	×	○
	Boom Extending/Retracting	×	○
	Slewing C.C.W./C.W.	×	○
	Storing hook	×	○
	Mode	×	○
	Speed select	×	○
	Horn	×	○
	Emergency stop	×	○
	Engine Start/Stop	—	○

Operation ○: Possible ×: Impossible

●Remarks

The crane cannot be operated both by manual and by radio remote control without selecting operation mode.

Operation mode of the crane can also be selected by “Mode selection switch” located on the top of cover.

The operation mode is to be memorized even after power to the crane has been turned OFF.

6 How to operate the crane through radio control operation

◆ 1. Preparation before operation


1. Extend the outriggers to their maximum with the manual control lever and level the crane.

● Remarks

If a crane operation (such as boom Up/Down, hook Up/Down, boom Extend/Retract, and swing C.C.W./C.W.) is carried out while the outriggers are being extended or retracted by manual control lever, the crane will make an automatic stop to avoid dangerous situation.

(The “mode indicator lamp” blinks [4]. Refer to section “9 Mode indicator lamp” on page 12-42 for detail.)

If this has taken place, stop both operation of the crane and of the outriggers once and try carrying out extension and retraction of outriggers again.

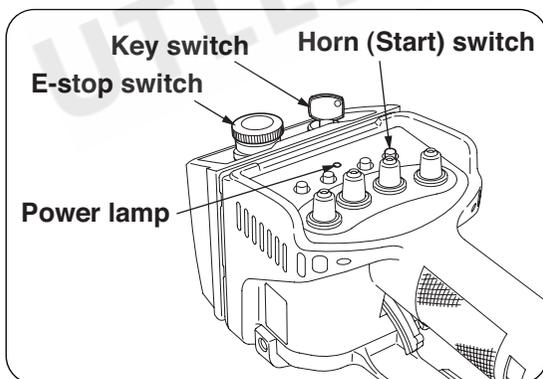


2. Check that the “E-stop switch” on the transmitter has been reset to turn ON the “key switch”.

If the “E-stop switch” has not been reset, turn the switch clockwise to reset it.

- Emergency stop function is to be actuated if the “E-stop switch” is pushed in, and emergency stop resets when it is not being depressed.

3. Depression of the “horn (start) switch” on the transmitter energizes the transmitter and “power lamp” lights (in red, in orange, or in green).

- Power to the transmitter is to be turned OFF by pushing in the “E-stop switch”, or by turning OFF the “key switch”, or if time has passed for more than 5 minutes when no crane operation has been carried out.
- If the “power lamp” blinks or fails to be lit, replace batteries of transmitter according to the section 12. [7] “◆3.How to replace batteries” illustrated on page 12-36.

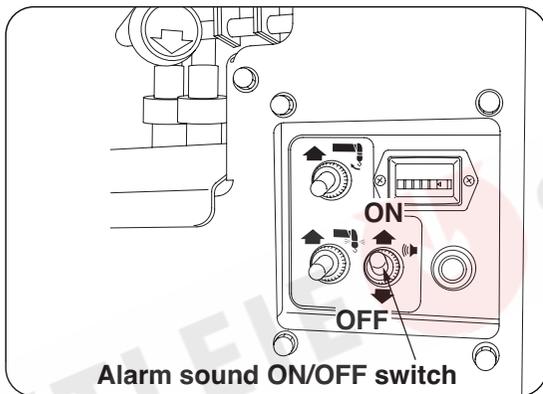

4. Check that the voice switch has been turned ON.
If not, turn it ON.



●Remarks

Voice message will not be issued when the voice switch has been turned OFF.

5. Depress the “radio remote control selector switch” on the switch panel to turn it to be operated on radio remote control mode.
The mode indicator lamp indicates [□□] and the following voice message is issued:
“Remote control ready, Remote control ready”

- When the operation mode is switched to “radio remote control mode.” with power to transmitter turned OFF, the mode indicator lamp indicates [□□].
Turning ON the power to the transmitter allows the mode indicator lamp to indicate [□□].

◆2. How to operate

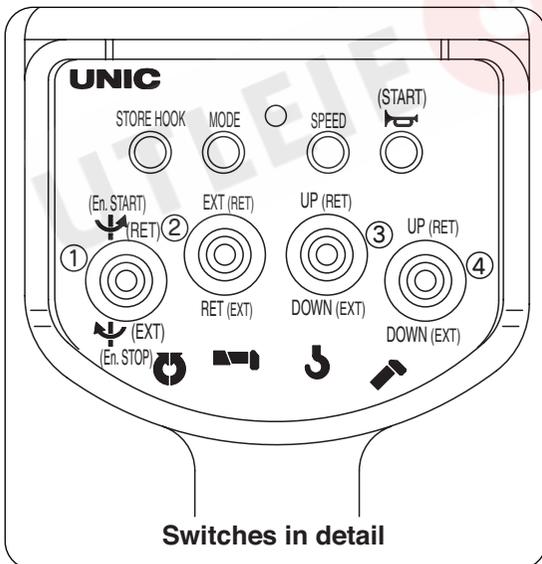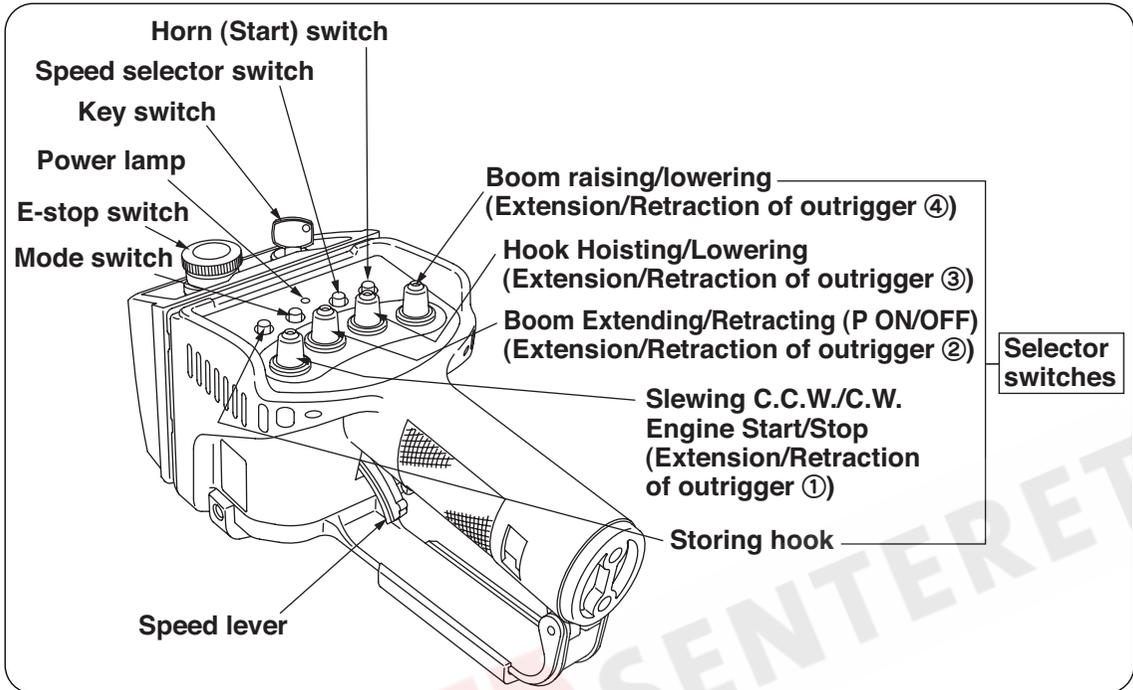

1. Operation of crane function

(1) Throw a corresponding “selector switch” to the direction allowing the desired crane function.

(2) Pull the “speed lever” slowly with the “selector switch” remained as it has been thrown.

If only one of the selector switches is to be operated, the crane starts to move slowly with the engine rotated at a low speed (idling speed) when pulling the “speed lever” slowly.

When the speed lever is pulled further, the engine speed increases to allow the operation speed of crane to be faster.

● If the “speed lever” is pulled with more than two “selector switches” thrown, the engine speed becomes faster than that in case of only one of selector switches is being pulled.

(However, maximum engine speed will not change. Refer to section 6 “Engine speed control function” (on page 12-24) for detail.


WARNING

★ When operating the crane with the radio remote control transmitter, be sure not to touch any of manual levers as manual levers shift simultaneously.

- (3) When stopping the crane operation, return the “speed lever” slowly, and then return the “selector switch”.
- (4) Depression of the “horn switch” activates the horn on the vehicle.
Use it when calling attention to those who stand around the vehicle.




● **Remarks**

- Switches mounted on the remote controller are ON/OFF type which can be actuated with a light touch.
Do not apply strong force as it may cause damage to the switches.
- When the same radio wave (of specified small power radiation type radio system) is being used near the working site, response time of the crane it takes from the time when the radio remote control device has been operated may become longer to some extent which is not a fault.
- When operating with the remote controller, working speed may become a bit slower than that of manual operation.

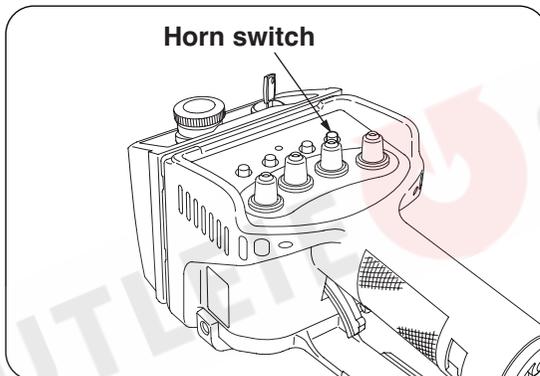

2. How to confirm and change speed mode

When operating the crane with the engine running at a medium speed, or at a lower speed such as in case of working at night, the speed mode can be changed.

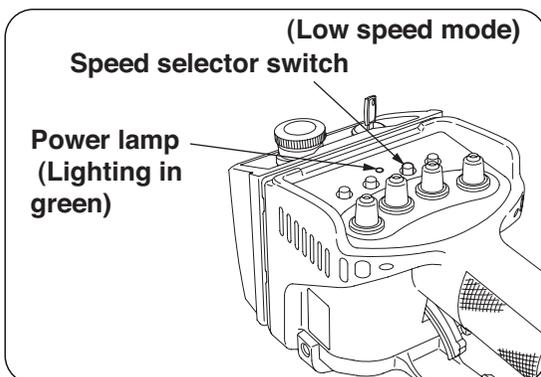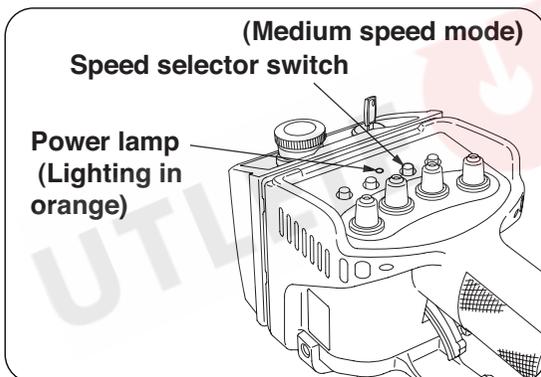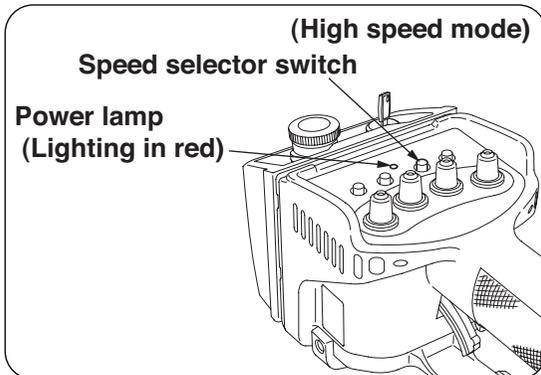

(1) How to confirm speed mode

Check the “power lamp” for lighting color, if it is lit in;

- ① Red : High speed mode
- ② Orange : Medium speed mode
- ③ Green : Low speed mode

If the “power lamp” is not lit, turn ON the power to transmitter to light the “power lamp”.

● Orange illumination is realized by lighting both red and green LED elements. Red and green LEDs may be seen separately where it is in a lot of sunshine.

(2) How to change speed mode

Confirm that the “power lamp” is lit to depress the “speed selector switch”.

Every time the “speed selector switch” is depressed, the “power lamp” lights in the order of



changing speed mode accordingly.

Depression of the “speed selector switch” with the “power lamp” lit in red allows the lamp to light in orange changing it into on medium speed mode.

Depression of the “speed selector switch” with the “power lamp” lit in orange allows the lamp to light in green changing it into on low speed mode.

Depression of the “speed selector switch” with the “power lamp” lit in green allows the lamp to light in red changing it into on high speed mode.

●Remarks

Setting of speed mode is to be memorized even when power to transmitter has been turned OFF.

Note that a slight speed difference between slewing C.C.W./C.W. may be found when slewing it on the low speed mode which is not a fault.

(3) Speed mode and manual lever control

Manual lever control is also applied to the speed mode.

High speed mode.....Engine will run at maximum speed.

Medium speed modeEngine will run at medium speed range.

Low speed mode.....Engine will run at close to idling speed.

●Remarks

Speed mode can only be changed through radio control transmitter.

Speed mode switches to high speed mode when power to the crane is turned OFF (starter switch is turned OFF).

Since setting of speed mode is memorized even when power to radio control transmitter has been turned OFF, speed mode is switched to the mode as the radio control transmitter has memorized previously when the crane is operated through radio control transmitter after power to the crane is turned ON again.

3. Interlocking balance control function

When interlocking operation (operation of speed lever with more than 2 of “selector switches” thrown) is carried out through the radio control transmitter, the system equips the function controlling movement of each control lever for each combination of the “selector switches”.

Therefore, when the speed lever is pulled to its extreme, movement of each control lever varies in accordance with combination of “selector switches”.

In some cases, the control lever may not be shifted to its full extent despite the fact that the speed lever on the radio control transmitter has been fully pulled which is not a fault.


●Remarks On interlocking balance retaining function:

The crane equips interlocking retaining function which prevent its operating speed from making an abrupt increase when interlocking operation is switched to independent operation,

When operation is switched from interlocking to independent (change from operation of speed lever with more than 2 of “selector switches” thrown to operation of speed lever with one of “selector switches” thrown), control speed may become slower as oppose to that of the independent operation, which is not a fault.

In order to correct this, release all the “selector switches” once and go back to independent operation again.

For immediate returning to normal speed of independent operation when it is switched from interlocking to independent, validity of interlocking balance retaining function can be switched through the transmitter.

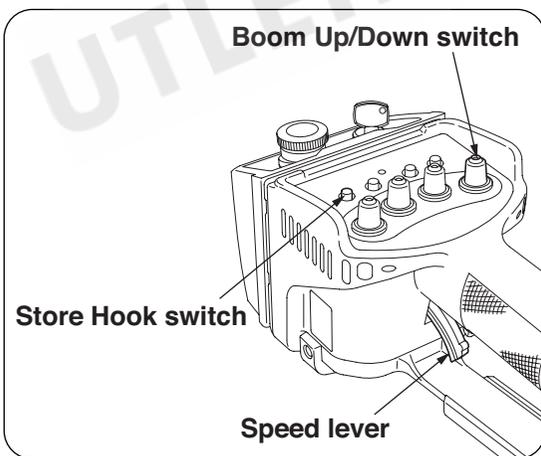

In order for the interlocking balance retaining function to be invalid, depress the “store hook” switch with the “boom Up/Down” switch turned to “Down”.

Voice message, “Change control mode, Change control mode”, sounds and the interlocking balance retaining function changes to be invalid.

(The voice message does not sound when the function remains as it was.)

Switching condition of the interlocking balance retaining function can be confirmed as the mode indicator is to be lit as in [$\square F$] (meaning “invalid”) while the switch is being controlled.

In order for the interlocking balance retaining function to be valid, depress the “store hook” switch with the “boom Up/Down” switch turned to ”Up”.

Voice message, “Change control mode, Change control mode”, sounds and the interlocking balance retaining function changes to be valid.

(The voice message does not sound when the function remains as it was.)

Switching condition of the interlocking balance retaining function can be confirmed as the mode indicator is to be lit as in [□□] (meaning “valid”) while the switch is being controlled.

CAUTION

★Be careful that the operation speed returns to that of independent operation immediately when it is switched from interlocking to independent with the interlocking balance retaining function switched to be invalid.

●Remarks

If the “boom Up/Down” switch is controlled before depression of the “store hook” switch, voice message, “Ping-pong, Secure lifting hook, Secure lifting hook”, may sounds which is not a fault.

The interlocking balance retaining function switches regardless of sounding voice message.

The interlocking balance retaining function is to be memorized even after power to the crane has been turned OFF.

4. Temporary changing function of interlocking balance (Click operation)

When interlocking operation with 2 “selector switches” thrown (2-interlocking operation) is carried out with the radio control transmitter, each speed balance can be changed temporarily.

Click a “selector switch” for which faster speed is needed during 2-interlocking operation.

Operating speed related to the “clicked” switch becomes faster than that of other operation.


The more number of times a switch has been clicked, the faster the operation related to the clicked switch becomes as opposed to against that of other operation relatively.

Turning OFF both “selector switches” on 2-interlocking operation releases the function to allow them to return to previous conditions.

U-WAVE, Radio remote control device


● Example of operation

Interlocking operation of both “Boom extending” and “Hook Lowering”.

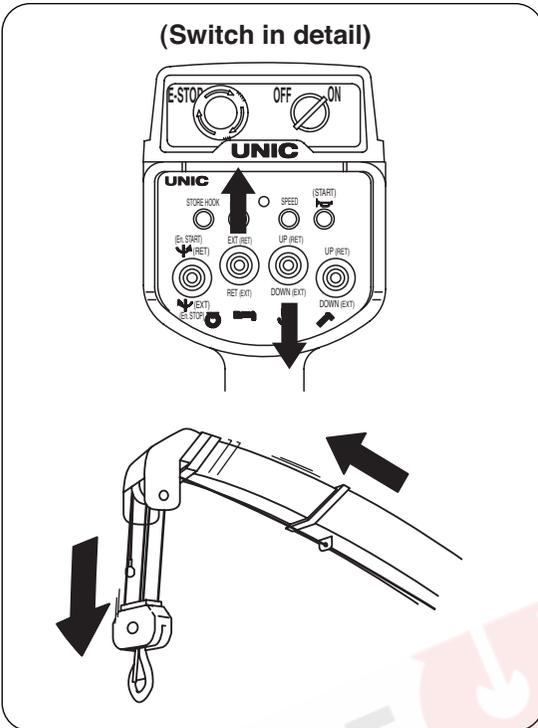

Pull the speed lever with the “hook Up/Down” switch thrown to “Down” and the “Boom Ext/Ret” switch put to “Ext”.


The hook lowers and the boom starts to extend.

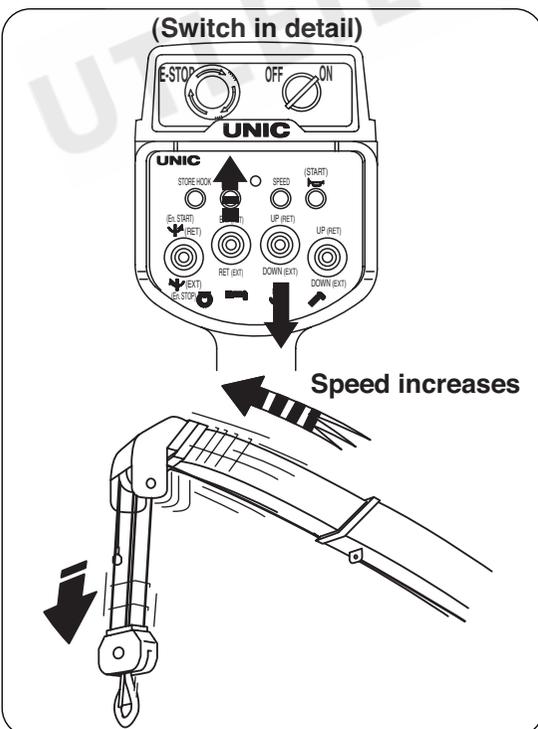

● To increase extending speed of boom
Click (operate it quickly in order of ON→OFF→ON) the “Boom Ext/Ret” switch to “Ext” side.

This allows extending speed of boom to become faster than that of hook down.

The more number of times the switch has been clicked toward “Ext”, the faster the boom extension becomes as oppose to that of hook down.

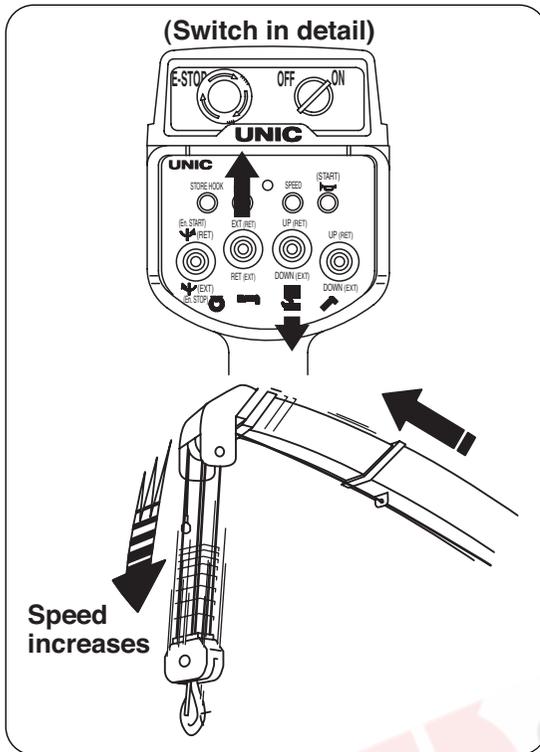

● **To increase winding Down speed of hook**


Click the “hook Up/Down” switch to “Down” side.

This allows the speed of hook down to become faster than that of boom extension.

The more number of times the switch has been clicked for “Down”, the faster the speed of winding Down hook becomes as opposed to that of boom extension.

● **Remarks**

- Repeated clicks allow the other operation not to function in the end.
If this happened, release all the “selector switches” once, or click the “selector switch” for which operation is inactivated.
- When one of “selector switches” is released during the clicking operation, speed of crane under operation may become faster.
- The clicking function is possible only when in 2-interlocking operation.
It will not be applied to operation such as of 3-interlocking and 4-interlocking.

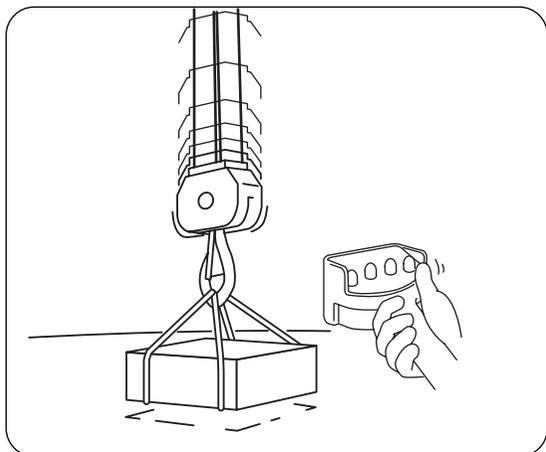

5. Shock-less function

The system equips a “shock-less” function allowing the crane to stop gently even when the crane has been made an abrupt stop by radio control transmitter.

Since the crane will not make an abrupt stop against a sharp operation, it eases shock to the crane and/or to the mounted vehicle, and it is also effective to prevent the wire rope from jumping up and a lifted cargo from swinging when the hook has stopped winding-up.

CAUTION

★ Pay attention that the crane makes a slight movement due to shock-less function after the radio control operation has been stopped abruptly.

●Remarks

When making the crane a sudden stop:


If the crane has to be made a sudden stop, actuate the “selector switch” controlling opposite function while the shock-less is functioning.

(Do not pull the speed lever in this case.)

Otherwise, the shock-less function is released to allow the crane to make a sudden stop.

When canceling the shock-less function:

If the shock-less function is unnecessary, it can be activated/inactivated by the radio control transmitter.

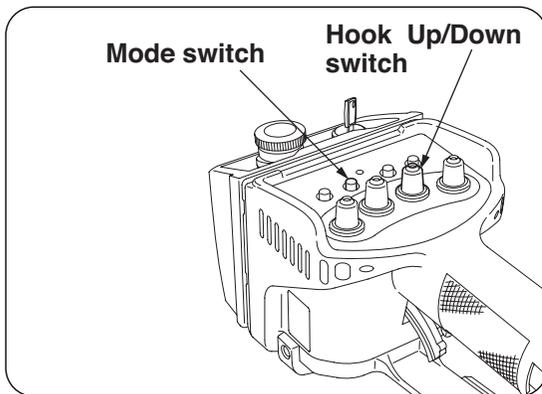


In order to inactivate the shock-less function, throw the “hook Up/Down” switch to “Down” with the “mode switch” depressed. The shock-less will not be functioning.

In order to activate the shock-less function, throw the “hook Up/Down” switch to “Up” with the “mode switch” depressed. The shock-less starts functioning.

When the shock-less function is active and the “mode indicator lamp” shows any of [00], [0 1], [0 4], [0 6] and [0 7], switching it to be inactive allows the figure indicated on the left to change to [-].

Switching the shock-less function to be active allows the mark [-] indicated on the left to change to [0].

Mode display	
When shock-less function active:	When shock-less function inactive:
00	-0
01	-1
04	-4
06	-6
07	-7

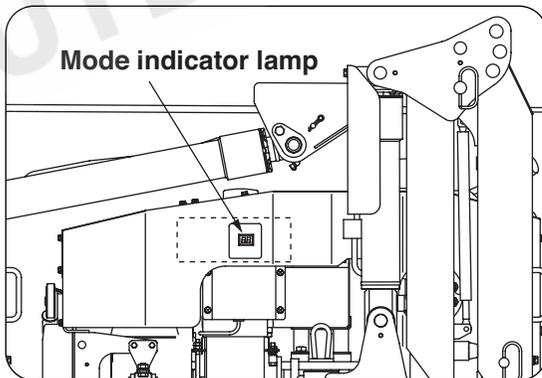

CAUTION


★ Be sure to check if the mode indicator changes accordingly after the shock-less function has been switched.

●Remarks

When the mode indicator shows [10] (over-wound condition), no change happens even after the shock-less function has been switched.

When checking condition of the shock-less function, remove the over-wound condition by operation of lowering hook or retracting boom.

Setting of shock-less function is to be memorized after power to the crane has been turned OFF.

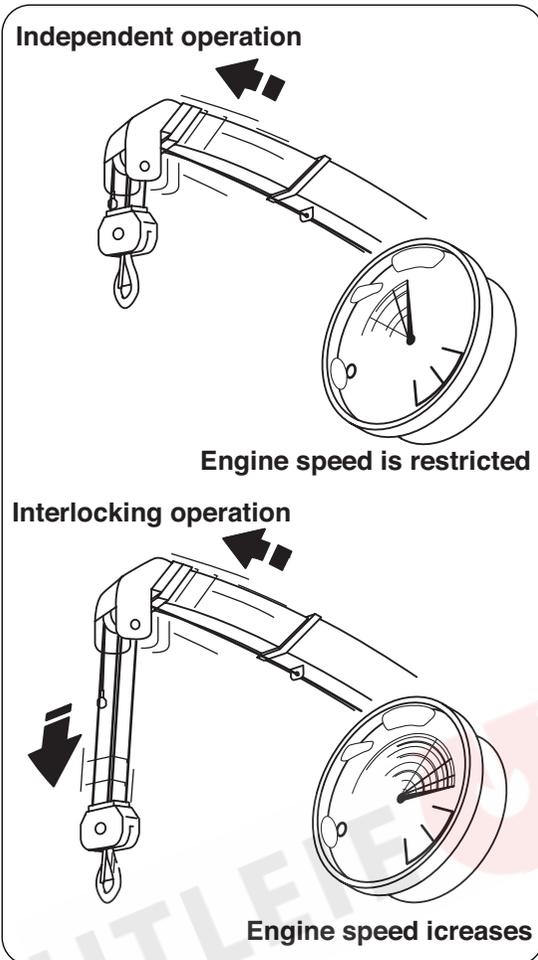

6. Engine speed control function

The system equips a function controlling the engine running at a suitable speed according to operating condition of the crane.

The function helps save energy because it can ease temperature rise of hydraulic oil and restrict the unnecessary increase of engine speed by controlling the engine to run at an appropriate speed.

- On independent crane operation, it allows the engine speed not to be increased unnecessarily while the crane is operating functions such as lowering boom, retracting boom, swing C.C.W./C.W., and retracting outriggers.
- The engine speed increases when the crane operation has been switched from independent to interlocking. (But no change in maximum engine speed.)
- The engine runs at a medium speed while the outriggers are being extended and retracted.
- When swinging the crane on independent operation by controlling manual lever, swinging speed may become faster when the independent operation is switched to interlocking operation by controlling other one of levers.
This is not a fault.

◆3. How to store hook

⚠ WARNING



★ Since releasing the hook from its stored position allows it to swing, it may cause an accident if a person stands under or in front of the hook.

In addition, excessive pulling of the “speed lever” increases the hook to swing that is dangerous so that do not pull the lever extremely.

★ It is strictly prohibited to operate the crane with the “storing hook” as this is very dangerous.



★ Retract the boom fully and lower it to its extreme to store it.

★ Do not operate the “storing hook” with any one of control levers at the same time.

This may cause an incorrect action and/or a breakdown of the crane.

★ Pay attention that the manual control lever for “hook Up/Down” moves “Up” side when retracting the hook.

U-WAVE, Radio remote control device

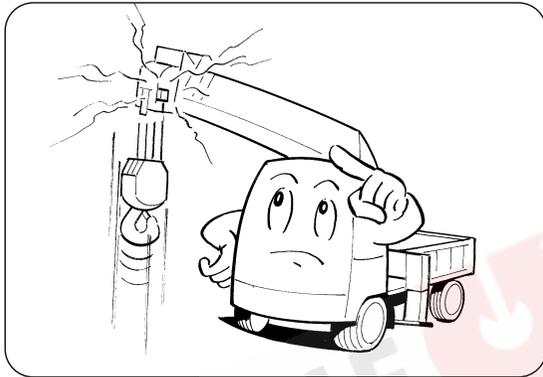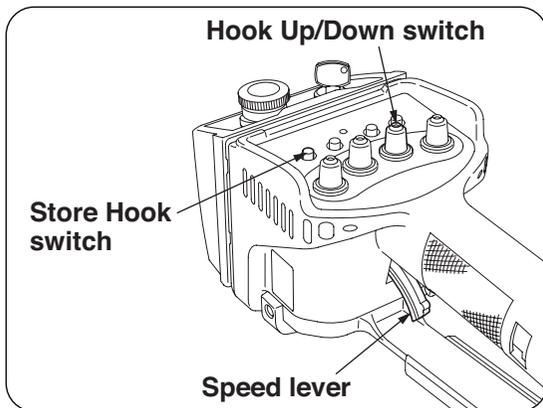

- (1) Wind up the hook with the “hook Up/Down” of selector switches.

The hook stops being wound-up automatically when it hits against the weight for over-winding alarm.

- When it stops being wound-up, following voice message, “**Beep, Stop winch up, Stop winch up, Beep, Beep**” is issued.

The last part of voice message, “**Beep, Beep**”, stops sounding when the operation concerned has been stopped.

- (2) Depress the “store hook” switch after the hook is at a standstill.


- Following voice message, “**Ping-pong, Secure lifting hook, Secure lifting hook**” is issued.

- (3) When pulling the “speed lever” with the “store hook” switch depressed, the hook starts being wound up slowly.

The “mode indicator lamp” indicates [13] while the hook is being stored.

CAUTION

★ Storing the hook while it is swinging may cause damage to the boom, to the hook itself, and to the wire rope.

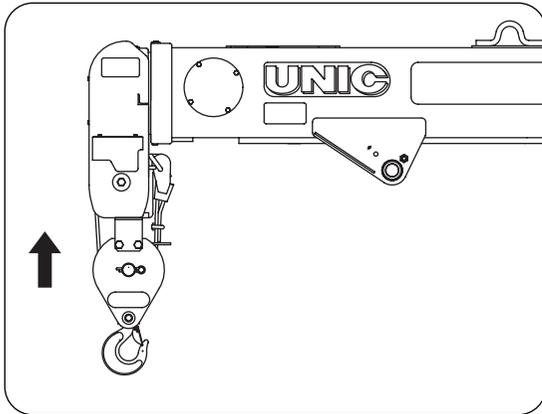

- (4) The hook hits against the boom top to be stored in position
Storing hook operation stops when the “speed lever” is returned and then the “store hook” switch is returned.

● **Remarks**

The engine is still running at a low speed (idling) while the hook is being stored.


⚠ CAUTION

★ Storing hook while it is swinging may cause the boom, the hook, and the wire rope to be damaged.

★ Take care that the manual control lever for hoisting/lowering hook moves toward hoisting side when storing the hook.

◆4. How to operate outriggers

Outriggers can be extended and retracted with the remote controller.

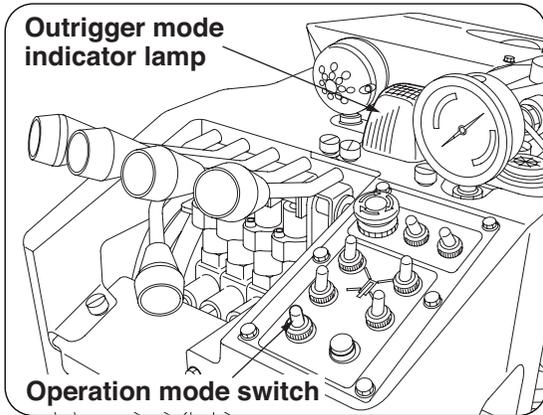

1. Preparation before operation

Put the “operation mode switch” located on the switch panel in the crane to “Outrigger”.

The outrigger mode indicator lamp should light and the buzzer sounds.


Indication of “mode indicator lamp” changes to [04] and [05], and voice message, “Change control mode”, is issued.


●Remarks

Turning OFF switch on the buzzer to stop the alarm sound.

If alarm sound of buzzer is to be avoided such as in working at night, turn it OFF to stop the buzzer.

Turn it ON when in normal crane operation.

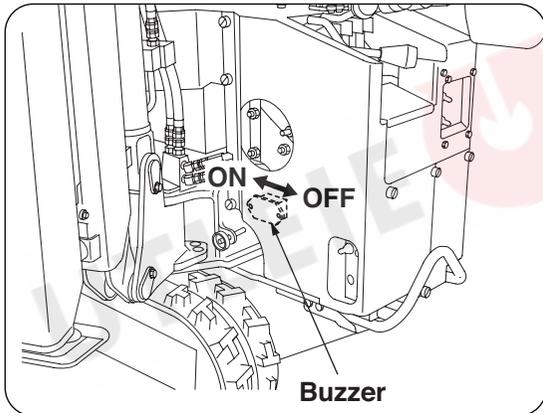

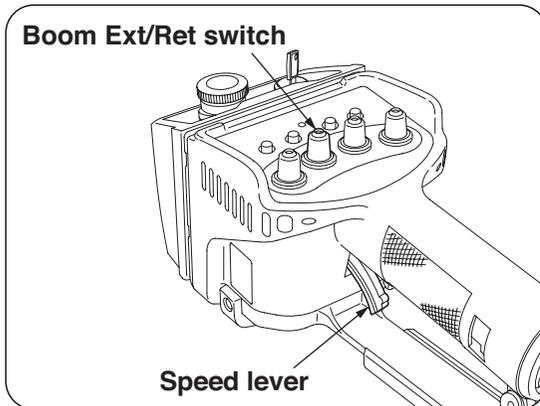


2. Operation

Throw the “selector switch” corresponding to the outrigger number requiring control to the desired operation side.

Then pull the “speed lever” slowly while keeping the “selector switch” thrown to the desired operation.

As the “speed lever” is pulled slowly, the vertical cylinder starts to be operated gradually with the engine running at a low (idling) speed, and pulling it further allows operating speed of the vertical cylinder becomes faster as the engine speed is increased.

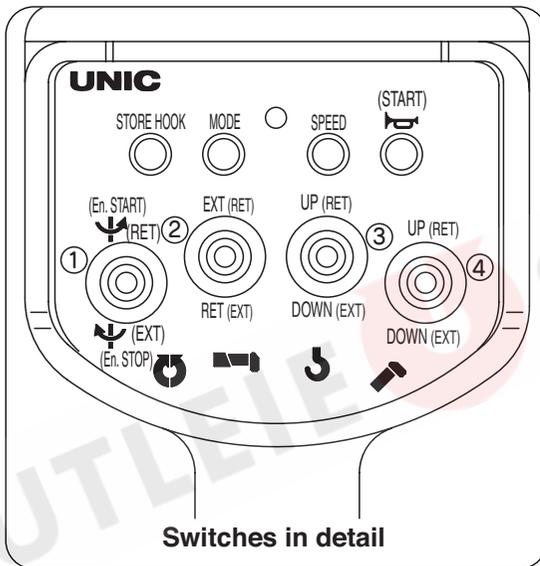

To extend

Turn the switch to “Ext” to pull the “speed lever”.

To retract

Turn the switch to “Ret” to pull the “speed lever”.

To stop

Return the “selector switch” after the “speed lever” has been returned slowly.


●Remarks

When the “crane/outrigger operation mode selector switch” is turned to “outrigger” (outrigger mode indicator lamp is being lit), normal crane operation of “boom Up/Down”, “hook Up/Down”, “telescoping boom”, “slewing C.C.W./C.W.”, and “storing hook” to be impossible both in radio control transmitter and in manual control lever.

When the selector switch is thrown to “crane” voice message, “Change control mode”, is issued and the mode is switched to crane operation mode when the yellow lamp located on the cover goes off.

! CAUTION

★If it has been selected to the mode (operation) to which is going to be selected, voice message will not be issued.

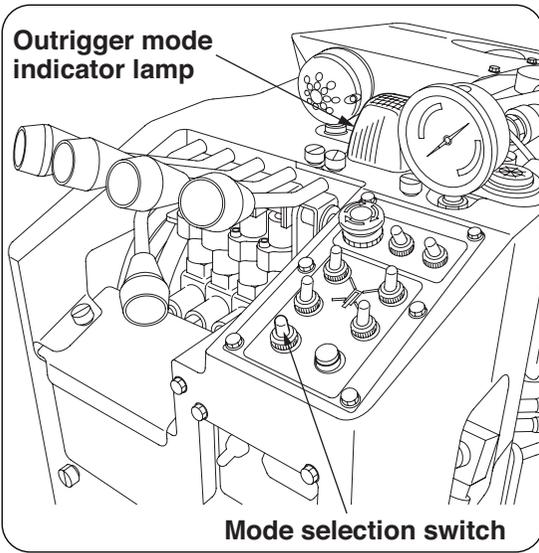


3. Closing operation

When extending/retracting operation of outrigger through the radio control transmitter has been over, be sure to turn the “crane/outrigger operation mode selector switch” to “crane”.

The outrigger mode indicator lamp goes off and the buzzer stop sounding.

Indication of the “mode indicator lamp” changes to either one of [00], [01], [06], or [07], and voice message, “Change control mode”, is issued.


(Refer to section 12. 9 “Mode indicator lamp” (on page 12-43) for mode indication in detail.

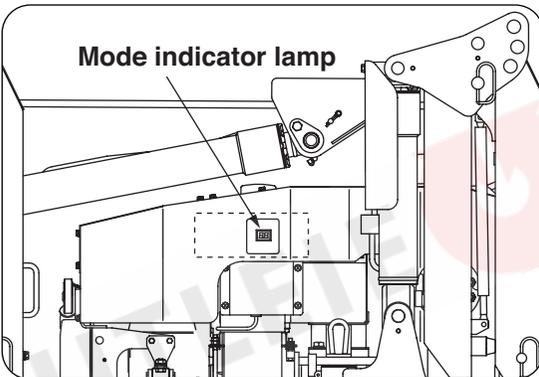

CAUTION

★Take special care that your foot will not be stamped by outrigger while extending outriggers.

★Be sure to secure the hook in place while outriggers are being operated.

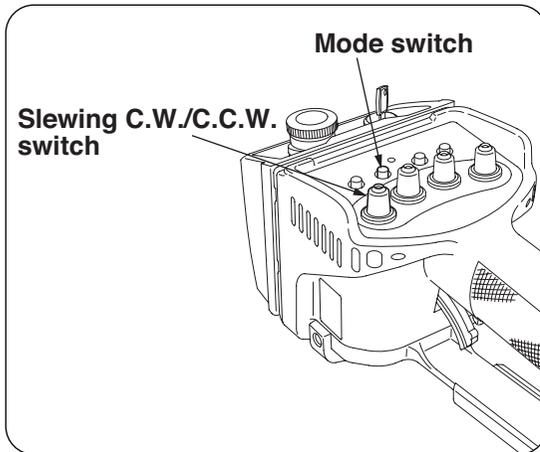

◆5. Starting/Stopping engine

The engine can be started and stopped from the radio control transmitter.

- ① When the engine key is turned ON, turning the selector switch to “slewing C.C.W.” with the “mode switch” being depressed allows the engine to start.
- ② Turning the selector switch to “slewing C.W.” with the “mode switch” being depressed allows the engine to stop.

⚠ CAUTION

★When the engine is to be stopped for a long period of time, be sure to turn OFF the engine key on the side of crane.

If the engine is being stopper by radio control transmitter for a long time during which power to transmitter is turned ON, shortening the life of batteries results.

★The radio control system carries out system diagnosis automatically every time when power is turned ON.

Do not operate the crane while the system diagnosis is being carried out.

(Do not touch any one of switches and levers during this period.)

If the crane is operated during system diagnosis, voice message, “Beep, Service remote control, Service remote control”, sounds and the crane is turned into inoperable conditions.


If this happened, depress the reset switch in the control box to carry out system diagnosis again.

★If the voice message, “Beep, Service remote control, Service remote control”, is issued when turning ON the power despite the fact that the crane has not been operated, ask a UNIC authorized service shop for repair as failure in the radio control system is suspected.

◆6. How to operate when engine speed becomes unstable due to low temperature

When in winter season or when temperature is too low, the engine speed may become unstable as viscosity of hydraulic oil increases.

In this case, switch the system to “low temperature operation mode” to allow the engine speed to be stable.

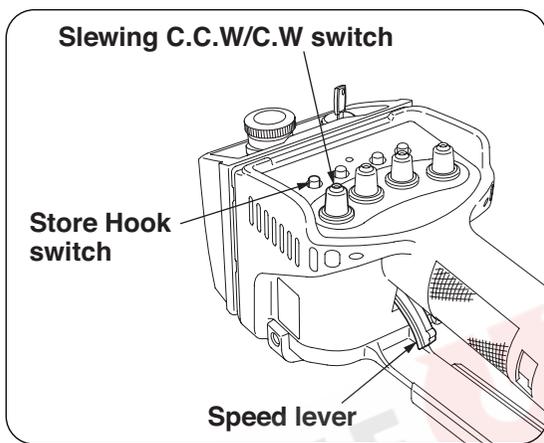

1. Switching to low temperature operation mode

Depress the “store hook” switch with the “slewing C.C.W./C.W.” switch turned to “C.C.W.”.

Indication of the “mode indicator lamp” changes to [05], and voice message, “**Ping-pong, Change control mode, Change control mode**”, is issued.

(Indication will not change if the “mode indicator lamp” is showing [04], [05], or [10].)

●Remarks

When switching it to low temperature operation mode, operation of the “store hook” switch before the “slewing C.C.W./C.W.” selector switch has been actuated may allow voice message, “**Ping-pong, Secure lifting hook, Secure lifting hook**”, to be issued.

2. Resetting low temperature operation mode

Depress the “store hook” switch with the “slewing C.C.W./C.W.” switch turned to “C.W.”. Indication of “mode indicator lamp” changes to [□□] and voice message “**Ping-pong, Change control mode, Change control mode**”, is issued.

(Indication will not change if the “mode indicator” is showing [□4], [□5], or [[1□].)

In addition, the low temperature operation mode is to be reset automatically, even when operation illustrated above has not been carried out, after approx. 10 minutes from the time when it has been switched to the “low temperature operation mode”.

The voice message “**Ping-pong, Change control mode, Change control mode**”, is issued at this time.

●Remarks

Response of the crane functions becomes slower when operated on low temperature operation mode.

In normal case, operate the crane after warming-up for a while to raise temperature of hydraulic oil.

Under extreme low temperature, crane operation may still be unstable even after the system has been switched to the “low temperature operation mode”.

In this case take measures such as by carrying out warm-up operation to raise temperature of hydraulic oil or by using hydraulic oil suitable for extreme low temperature.

CAUTION

★If viscosity of hydraulic oil is too high at a low temperature, excessive load will be imposed on hydraulic pumps which may cause damage to them.

In order to avoid this, be sure to carry out warming-up to raise temperature of hydraulic oil to an appropriate temperature to operate the crane.

◆7. Closing crane operation

After completion of the crane work, turn OFF the starter switch to shut off power to the crane after the boom, the hook, and the out-riggers have been stored in their respective positions.


7 How to replace batteries of transmitter

◆1. When to replace batteries

⚠ CAUTION

★When the power lamp of transmitter starts blinking, replace the batteries as early as possible. Leaving them as they were may cause the liquid in the batteries to leak.

★In case where leakage of battery liquid is found, wipe it off the battery holder and the battery case thoroughly to put new batteries in it.

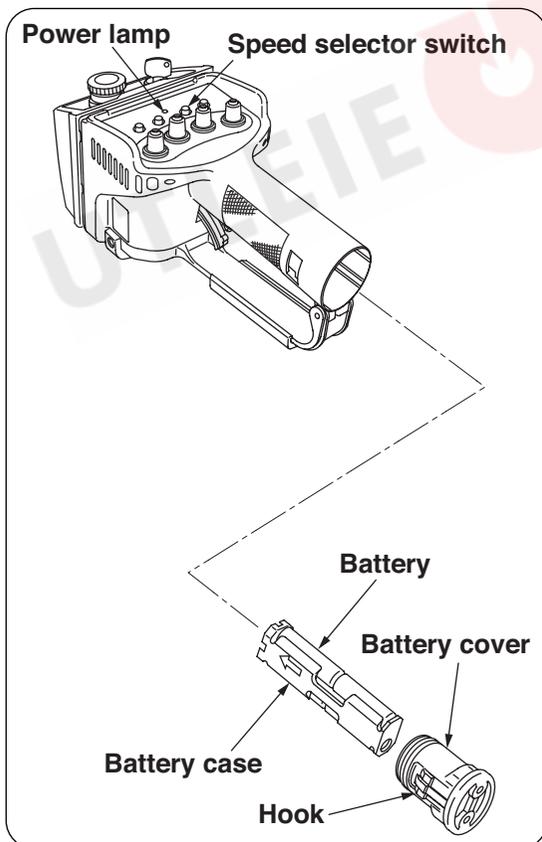

●Check the “power lamp” for lighting with the “speed selector switch” on the transmitter depressed.

- ① Continuous lighting: Radio control transmitter can be used.
- ② Blinking in low frequency (a flash every second): It allows the radio control transmitter to be used for about 1 hour after the blinking has started. Replace the batteries as early as possible as they are close to running out.
- ③ Blinking in high frequency (a flash every 0.1 second): The radio control transmitter can not to be used as the batteries have run out.
- ④ No lighting: The radio control transmitter can not to be used as the batteries have completely run out.

●If the “power lamp” blinks slow as in condition ② above, following voice message, “Ping-pong, Low transmitter battery, Low transmitter battery”, is issued.

The trouble lamp on the receiver blinks in red, and the “mode indicator lamp” shows [99] in blinking.

◆2. Battery to be employed

a size AAA battery: 4 pieces

Use alkaline-type battery.

(Manganese-type battery has a short service life.)

●Remarks

About the use of rechargeable batteries

Although UNIC recommends the use of alkaline type battery in the radio control transmitter, other rechargeable batteries such as nickel-hydrogen type and nickel-cadmium type may also be used.


Pay attention to the following when a rechargeable battery is used:

- Message suggesting replacement of battery may not be issued.
Be sure to prepare alkaline-type batteries when operating the crane through radio remote control device because rechargeable batteries tend to become inoperable suddenly.
- In some cases, service life of rechargeable battery may become shorter than that of alkaline battery in accordance with the capacity.
- There is a disadvantage such as memory effect comparing with alkaline-type battery.



CAUTION

★Do not mix up batteries of old and new, of different manufacturers, or of different types.

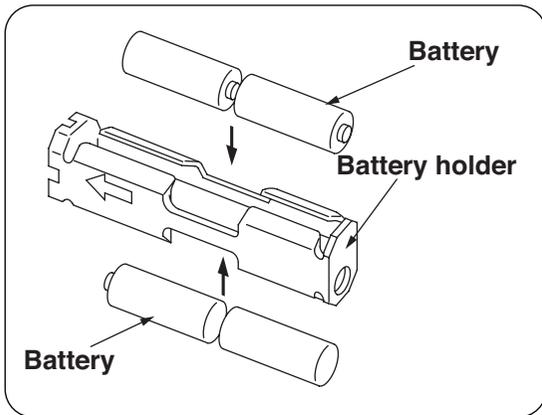

◆3. How to replace batteries

- (1) Turn OFF power to the crane. (Turn OFF the starter switch.).
- (2) Pull out the battery cover with the hook on the cover pushed in.
- (3) Replace old batteries in the battery holder with new ones.

⚠ CAUTION

★Pay attention to polarity of batteries.

(Put them as indicated on the battery holder)

★Do not connect between terminals of (+) and (-) directly with a metal piece.

- (4) Insert the battery holder into the transmitter grip to tighten up the battery cover securely.

⚠ CAUTION

★Take care that a drop of water will not enter inside of the grip.

- (5) Depress the “speed selector switch” to check that the “power lamp” lights.

●Remarks

Unless to the power to crane is turned OFF once when replacing batteries, blinking indication of [99] on the mode indicator lamp will not goes off even after batteries have been replaced.

8 Daily checks, trouble inspection

◆1. Daily checks

For cranes with radio remote control device, you are requested to inspect your crane for following items as well as carry out daily checks on your crane (read operator's manual of UNIC crane concerned for detail).

Check that;

1. Each enclosure of transmitter, receiver, and control box has not been damaged.
If the enclosure has been damaged, repair it immediately because moisture and/or dust entered through the break may cause a failure to electronic parts inside and cause incorrect operation of the crane concerned.
2. The stay on the transmitter has not been broken or deformed.
The transmitting antenna is built in the stay.
If break or remarkable deformation is found in the stay, replace or repair it as soon as possible because it may cause radio interference.
3. Switches and control levers on the radio control transmitter make a smooth operation.
Using the remote control transmitter with dust, dirt, and mud being stuck on may lead to failure especially in operation of switches and/or control levers.
Wipe them off with a piece of cloth after use.
If any of the selector switches fails to function correctly due to contamination, ask a UNIC authorized service shop for cleaning.



CAUTION

★Never try disassembly or alteration of the transmitter, the receiver, and the control box.


★Electric system is very sensitive to moisture.

Do not wash the transmitter, the receiver, and the control box with water directly.

U-WAVE, Radio remote control device

◆2. Check lamps (Radio control receiver)

Check lamps are mounted on the radio receiver, and they light as follows when it is in normal operating condition:

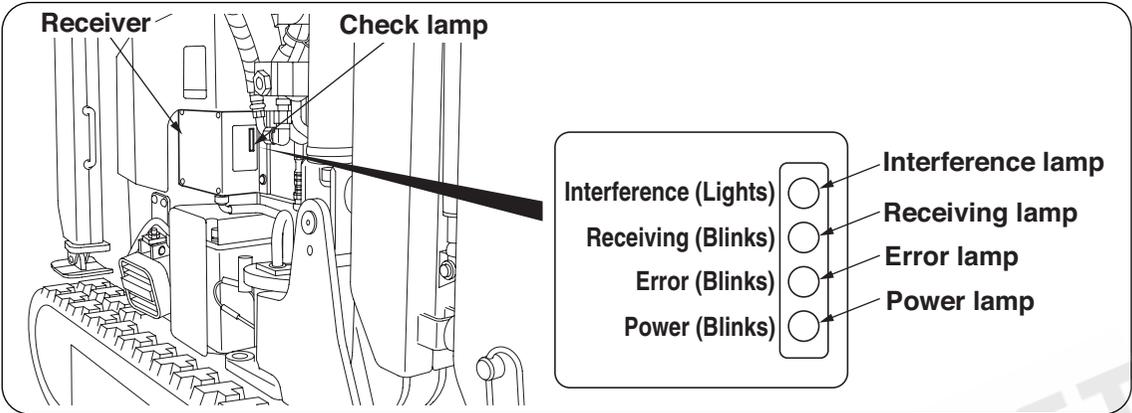

● Power lamp

When energizing the crane by turning ON the starter switch, it blinks in green.

● Receiving lamp

When the receiver is received radio wave transmitted from the transmitter correctly, it blinks in green.

● Interference lamp

If it lights in red when power to the transmitter is turned OFF, it indicates that the receiver is receiving radio wave from outside.

If it lights in red when power to the transmitter is turned OFF, response time during radio control operation may become longer to a certain extent.

When radio control operation is initiated from the state where the power to transmitter is turned OFF, the “interference lamp” may light for a moment but it is not a fault.

● Error lamp

It blinks in red when something is wrong with the radio control transmitter/receiver.

It also blinks in red when batteries in the transmitter have been run out.

◆3. Trouble inspection

If a trouble is found in the radio remote control device, check the following then contact the nearest UNIC authorized service shop.

Check if:

- ① Crane is controlled by manual levers.
- ② The “power lamp” on the transmitter lights. If it blinks or does not light, replace the batteries in the transmitter.
- ③ Switches and control levers on the transmitter make a correct operation.
- ④ The stay on the transmitter (antenna is built in) has not been broken or deformed.
- ⑤ The “mode indicator lamp” in the control box lights and the “power lamp” on the receiver blinks in green when power to the control box is turned ON.
If the “mode indicator lamp” blinks, refer to section “12. ⑨ Mode indicator” (on page12-43).

If the “error lamp” on the receiver blinks in red, turn OFF the power once and turn it ON again (turn ON the starter switch again).

If blinking of “error lamp” persists, repair is needed as the radio remote control device is in failure.

◆4. How to make an emergency stop


In case of emergency such as that the crane does not stop operation or the engine will not return to idling speed even if no crane operation has been made, depress the “E-stop” switch on the transmitter or the “EMERGENCY” switch on the cover.

This makes the crane and the engine to stop operation forcibly.

! WARNING


★When releasing the emergency stop switch, release it while no crane operation is being carried out.

Releasing the emergency stop switch while operating the crane allows the crane to make an abrupt movement that is very dangerous.

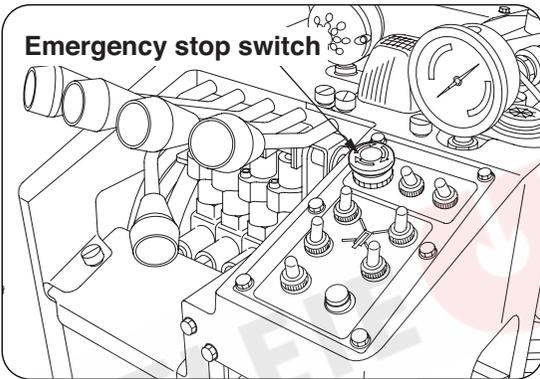


●How to make an emergency stop for the crane and reset it

- Depress the “EMERGENCY” stop switch on top of the cover.
The switch is held pushed in allowing the engine to stop operation.
When the switch is held pushed in, the engine cannot be re-started.
Rotate the emergency stop switch clockwise in arrow direction to return to its original state to release the switch.

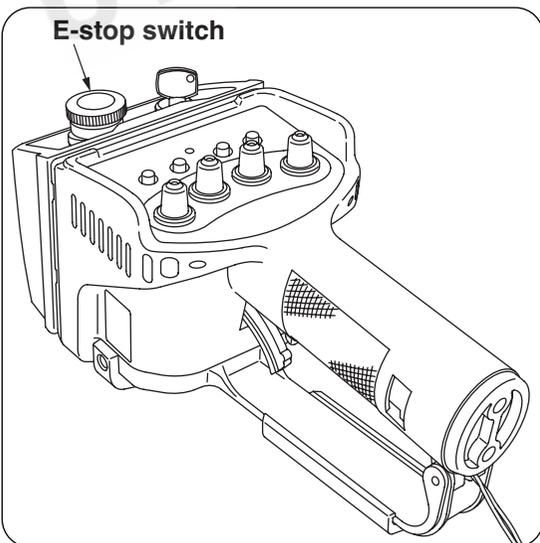

- Depress the “E-stop switch” on the transmitter.
The switch is held pushed in allowing the crane will not work.
Rotate the E-stop switch clockwise in arrow direction to return to its original state to release the switch.

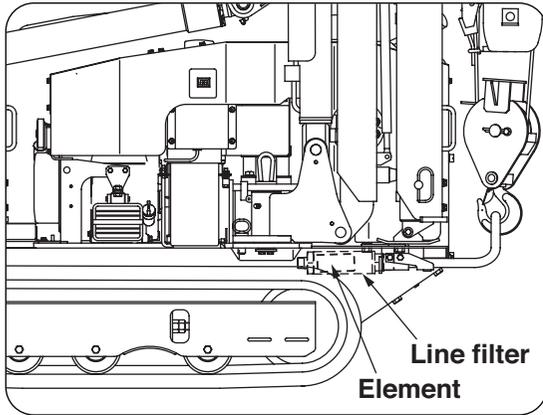

◆5. Replacement of line filter element


Replace the element inside of line filter after 1 year from the start of operation.

Be sure also to replace the element when the hydraulic pump is replaced and replace it after 1 year from the start of operation of the pump.

UTLEIE  SENTERET

9 Mode indicator lamp (Control box)

The “mode indicator lamp” is mounted in the control box indicating conditions of crane operation and troubles in detail.

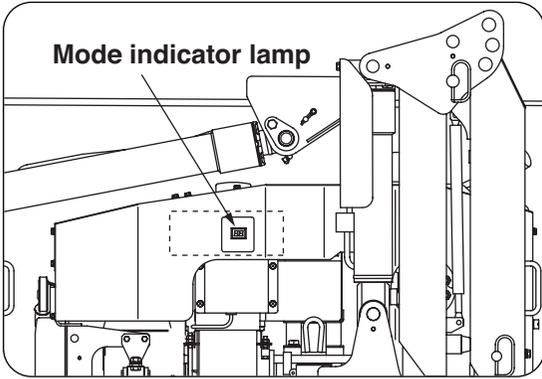

When the “mode indicator lamp” lights, the crane system is working normally.

When the “mode indicator lamp” blinks, the crane system is in a trouble or prohibited operation is being carried out.

◆1. Mode indication when crane is in normal operation

It indicates each operation mode and condition of the crane when it is normal.

Description of mode indication when it is in normal is as follows:

Mode indication when crane is in normal condition (lighting indication)

Mode	Mode description	Radio control operation mode	Manual operation mode	Priority
0F	Current control is on traveling mode. No operation other than traveling is possible either by manual control or by radio remote control.	×	×	1
00	Current control is on normal crane operation mode. Operation is possible either by manual control or by radio remote control.	○	×	9
01	Current control is on normal crane operation mode. Operation can only be carried out manually but not through radio remote control device.	×	○	9
04 05	Current operation is in outrigger radio control mode. Extension and retraction of outriggers can only be possible by manual control when in manual control mode or by radio remote control when in radio remote control mode.	○	×	5
	Operation other than the above is impossible either by manual or by radio remote control.	×	○	
06	Current control is on low temperature operation mode. Operation can be carried either by manual control or by radio remote control device.	○	○	8

Mode	Mode description	Radio control operation mode	Manual operation mode	Priority
07.	Current control is on low temperature operation mode. Operation can be carried by manual control but not through radio remote control.	×	○	8
10	Hook hits against weight for over-winding alarm (over-wound condition).	—	—	7
13	During operation of storing hook.	—	—	6
14	Automatic stop for over-winding reset switch is being controlled	—	—	4
15	Outriggers fail to touch the ground or overturn threshold alarm is actuated (URW series only).	—	—	2
16	Outriggers fail to be set up on the ground securely or overturn prediction alarm is actuated (URW series only).	—	—	3

●Remarks

Since priority is assigned for each mode description, it is to be indicated in the order of higher priority.

If the [.] (dot) is indicated on the bottom right of “mode indicator lamp”, it means the “radio control OFF” mode.

Crane cannot be operated through radio control transmitter.

When operated on outrigger radio control mode, crane operation other than extension/retraction of outriggers cannot be carried out.

When the shock-less function has been cancelled, the letter on the left indicated in the mode indicator changes to [-].

Refer to page 12-23 for detail.

◆2. Mode indication when crane is in trouble

When the “mode indicator lamp” is blinking figures larger than [42] (or [54] lights), the crane system is in trouble (system trouble indication).

If the system trouble indication is found on the “mode indicator lamp”, confirm and follow the mode description on the table illustrated below:

If the crane becomes impossible to be operated, store the crane by following procedures described in section 11. “13 Operation in an emergency” (on page 11-21), and ask an authorized UNIC service shop for repair.

Mode description when crane is in trouble (Blinking indication)

Mode	Mode description	Radio control operation mode	Manual operation mode
42~46	No operation is possible either by radio control or by manual control.	×	×
47~50	Turn OFF power once then turn it ON. If the trouble persists, ask an authorized UNIC service shop for repair. (Although it can be operated either by radio control or by manually, shock-less function returns to be “active”.)	○	○
51~53	No radio control operation is possible.	×	○
54	Radio control receiver is not connected. Check that cable connector (located inside switch box) of receiver is securely connected. Check cable to receiver for damage and break.	×	○
55	Either “mode selector switch”, “hook storing switch” or “radio control selector switch” in the control box is faulty. (Failed switch cannot be controlled but crane operation is possible.)	○	○
56	No operation is possible either by radio control or by manual control.	×	×
57	No operation is possible either by radio control or by manual control. Turn OFF power once then turn it ON again.	×	×
58	Radio control operation cannot be possible and engine speed control and safety devices will not function.	×	○
59	“Emergency stop switch” has been depressed. If this is indicated even when the “emergency stop switch” has not been depressed, ask a UNIC service shop for repair.	×	×

Mode	Mode description	Radio control operation mode	Manual operation mode
60~65	Manual lever is not at its neutral position when power is turned ON. Do not operate the crane as it is carrying out system diagnosis for about 3 seconds after power has been turned ON. If this appears even when the crane has not been operated, ask an authorized UNIC service shop for repair.	×	×
66~69	Either one of “Outrigger control switches” in switch panel of the crane is in failure. (Failed switch cannot be controlled but crane operation is possible.)	○	○
70~74	Stop radio control operation to try controlling levers manually. Check that the manual control levers make a smooth movement and that any of levers will not interfere with anything. If indication fails to return to be normal, ask an authorized UNIC service shop for repair.	×	×
75	Engine speed control is not carried out correctly. Crane can be operated but if this appears more frequently, ask an authorized UNIC service shop for repair.	○	○
76~79	No radio control operation is possible.	×	○
80~85	No operation is possible either by radio control or by manual control.	×	×
99	Batteries of radio control transmitter are running out. Replace old batteries with new ones and turn OFF power once then turn it ON again.	○	○

◆3. Mode indication when crane is mistakenly operated

When prohibited operation or combination of operation which may invites dangerous situations has been carried out, the “mode indicator lamp” will blink corresponding numbers (operation error indication).

When the operation error is indicated, the “mode indicator lamp” blinks showing corresponding numbers accordingly.

Confirm and follow the mode description concerned on the table illustrated below:

●Remarks

The operation error indication is not to indicate that the crane system is in trouble.

The error indication is to be reset when stopping the operation concerned.

Mode description when crane is mistakenly operated (Blinking indication)


Mode	Description of wrong operation	Measures to be taken
01	<p>Radio remote control operation is carried out in manual control mode.</p> <p>●Mode indicator lamp located on the top of cover will not be lit when in manual control mode.</p>	<p>Radio remote control cannot be carried out in manual control mode.</p> <p>When operating with radio remote controller, turn the selector switch located on the top of cover to radio remote control mode.</p> <p>●Operation mode indicator lamp located on the top of cover will be lit when in radio remote control mode.</p>
04	Crane is being operated when in outrigger mode.	<p>Crane cannot be operated when in outrigger control mode.</p> <p>When operating crane, turn the mode selector switch to “crane” to select crane mode.</p>
	Crane and outriggers are operated simultaneously.	<p>When crane and outriggers are operated simultaneously, both operating functions are stopped automatically to avoid a risk.</p> <p>Stop the simultaneous operation once and carry out either one of operation.</p>

Mode	Description of wrong operation	Measures to be taken
06	“Low temperature operation mode” is being switched during crane operation.	In order to avoid a risk, “low temperature operation mode” cannot be switched during crane operation. Stop crane operation once to switch it to “low temperature operation mode”. For switching “low temperature operation mode”, refer to section 6 [7]. “How to correct when operation becomes unstable due to low temperature” (on page 6-22).
10	Either one of operation such as “boom Up”, “hook Up”, or “boom Extend” is being carried out while hook has hit against weight for over-winding alarm.	Detach hook from weight for over-winding alarm.

10 Measures to be taken in an emergency

The “mode indicator lamp” is mounted in the control box indicating conditions of crane operation and troubles in detail.

Trouble	Possible cause	Measure to be taken
Crane fails to be operated by radio remote control device.	Batteries in transmitter have been run out or they are not loaded.	Replace batteries in transmitter.
Crane works just when a selector switch on transmitter is actuated.	Speed lever of radio control transmitter is faulty.	Repair radio control transmitter at a UNIC authorized service shop.
Crane works arbitrarily even when no controls have been made or a manual control lever has been shifted.	A solenoid valve of control valve is in failure.	Depress EMERGENCY stop switch to stop crane operation immediately. Gently turn the emergency screw clockwise until tight. (Pay attention that the screw may break if it is tightened with an excessive force.) Depress EMERGENCY stop switch again to reset emergency stop. Check that crane does not work when no controls have been made. Store crane with manual levers and ask a UNIC authorized service shop for replacement of faulty solenoid valve.

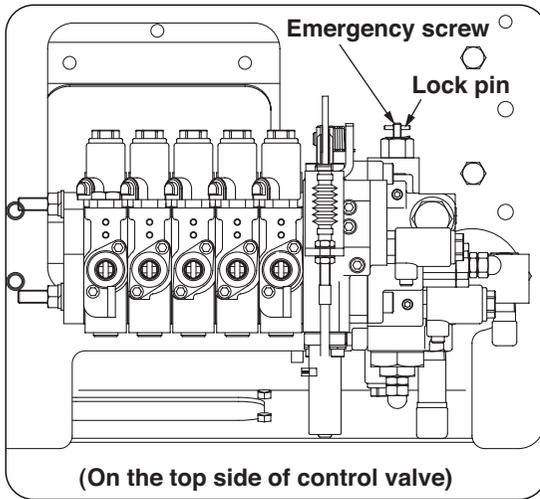

● **Remarks**

The emergency screw is fixed with a lock pin.

Remove the lock pin before turning the emergency screw.

UTLEIE  SENTERET

13. MAINTENANCE AND INSPECTION OF CARRIER

WARNING

★ **Caution signboard**

Be sure to hang a “caution signboard” such as on control levers while either maintenance or inspection is being carried out, and do not try operating the crane.

★ **Be sure to replace consumable items according to the replacement criteria.**

Failure to observe the replacement as specified may cause a breakdown and warranty will not be given even if it is within the period to be applied.

★ **When a part needs to be replaced or anything abnormal is found, contact a UNIC service shop for consultation or for inspection or ask repair as soon as possible.**

1 Inspection before operation

! WARNING

★ Since the machine uses gasoline as fuel, check the hose for crack and connections for tightness if you have a smell of gasoline around the engine.

If fuel leaked in the vicinity of engine and muffler which are very hot may cause a fire.

Wipe it off completely.

★ Be sure to stop the engine, and store the boom and the outriggers before carrying out maintenance and inspection.

★ A fire source such as smoking cigarette in mouth is strictly prohibited.

★ Do not start maintenance and inspection immediately after the engine has been stopped.

Carry it out after the engine and the heated parts have been cooled down.

In order to secure safety in crane operation and to improve working efficiency, be sure to inspect each part of the carrier according to the table as follows:

Device	Servicing item	Device	Servicing item
Engine	Fuel leakage Remaining fuel quantity Engine oil quantity/Filling up Battery electrolytic solution level check Unusual vibration, Noise Loose bolt, Broken bolt	Hydraulic oil tank	Oil leakage, Oil quantity, Filling up
		Interlock for crane-crawl lever	Function
		Crawling lever	Slack, Travel
		Wheel sprocket	Loose bolt
		Rubber crawler	Crack, Damage, Tension
		Frame	Bend, Crack, Deformation
		Truck roller	Loose nut, Oil leakage

! CAUTION

★ Perform monthly and annual inspection according to “Voluntary inspection table” in the warranty which is provided separately.

★ Keep the crawler crane in good condition so that it will be always ready for normal operation.


◆1. Check for remaining fuel quantity
/ Draining water

! WARNING

★Fuel (gasoline) is highly inflammable.


Do not smoke and bring a fire source close to the fuel when refueling and draining sediment.

★Wipe up spilled fuel thoroughly after refueling as it may cause the fire.

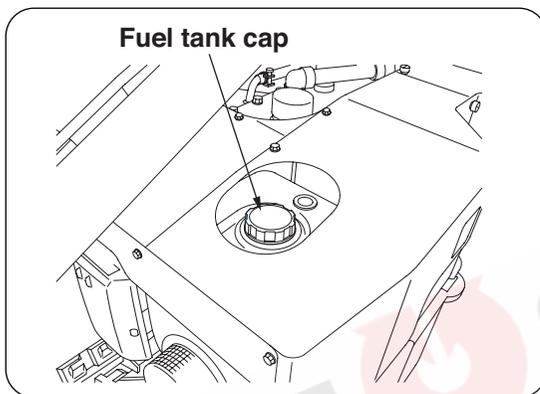

- When refueling, remove the cap and never fail to put the strainer of fuel tank in order to prevent water and dust from entering the tank.

Fuel tank capacity: 1.6gal.(6 liters)

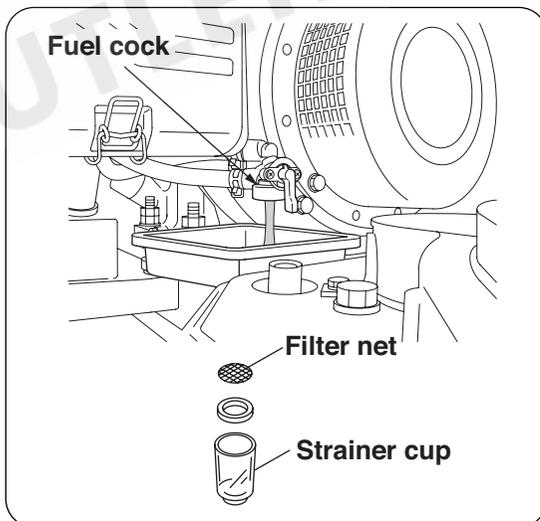

- When draining fuel in order to transport the crane and store it for long period of time, remove the strainer cup in the fuel cock to extract it.
- In addition, clean up the filter net with the fuel strainer cup removed.

**◆2. Check for engine oil quantity
/Filling up/Change**


! WARNING

★Wipe up spilled oil thoroughly after filling it up as it may cause the fire.

★Do not check and change the engine oil while it is still hot.


! CAUTION

★Replace engine oil after 25 hours of operation for initial replacement, and after every 50-hour operation thereafter.

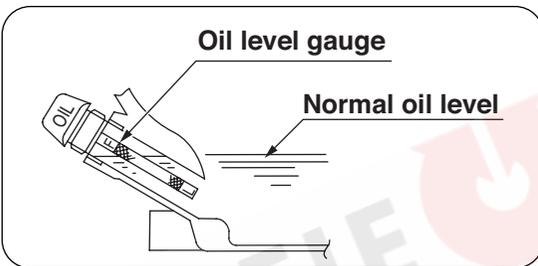

Check engine oil quantity before starting the engine with the crawler crane parked on a flat ground.

If the engine has been started, stop the engine and wait at least more than 5 minutes to check the oil level.

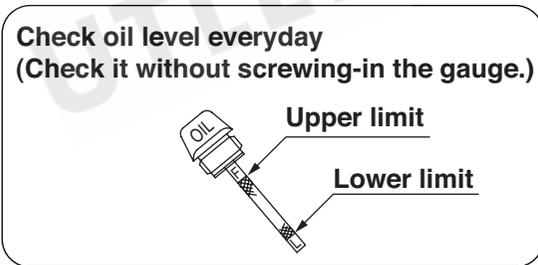

**Check oil level everyday
(Check it without screwing-in the gauge.)**


● Extract the oil level gauge and wipe it off with a piece of clean rag.

Insert the gauge fully again then extract it slowly to check the level gauge to find where it is wetted with oil.

(Check the oil for contamination and viscosity at the same time.)

● If engine oil level is found too low, supply it from the filling port.

Oil quantity to be filled up: 0.3gal.(1.2 liters)

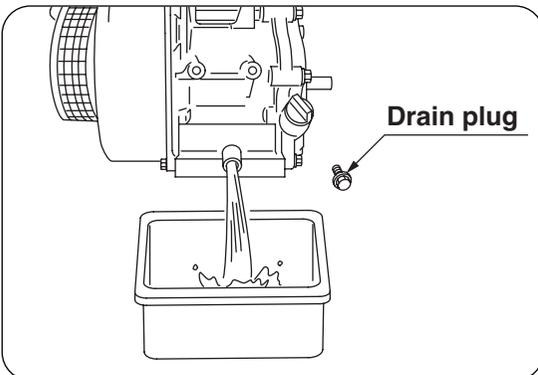

◆3. Check for battery electrolytic solution level / Filling up

! WARNING

★Gas evaporated from the battery solution is inflammable.

Do not bring a fire source close to the battery during battery maintenance.

And, be sure to disconnect the negative (-) side of battery cord.

★Battery electrolytic solution contains sulfuric acid so that you may be blinded or burned by the solution when your eye, skin, or clothes was stained with the solution.


Wear safety goggles and rubber gloves as a protective measures when working at battery.

If the solution stuck to your skin or clothes, wash it away with plenty of water immediately.

In case where it entered into your eye accidentally, see a doctor for treatment.

★When the crane will not be operated for a long period of time such as in being stored, charge the battery as follows:

Warm season (May to September)	Once a month
Cold season (October to April)	Once every 2nd month

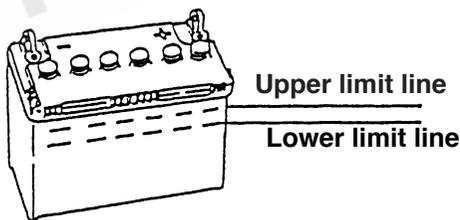

- Check that the battery solution level is somewhere between the upper and the lower limit lines with the battery placed level.
- If solution level is found below the lower limit line, remove the cap to fill it up with distilled water (It is available at a gas station.)
Tighten the caps securely after the water has been filled.
- Pay attention that the crane body may be eroded by the battery solution due to leakage during operation if solution level exceeds beyond the upper limit line.

◆4. Check hydraulic oil tank for oil level / Filling up


! WARNING

★Since temperature on the hydraulic oil tank surface is too high immediately after operation, remove the cap of the filling port after the temperature has gone down.


! CAUTION

★Replace hydraulic oil for the first time after 3 months of operation, and every year or every 500 hours of operation thereafter.

★Clean up the suction strainer and the return-filter once a year.

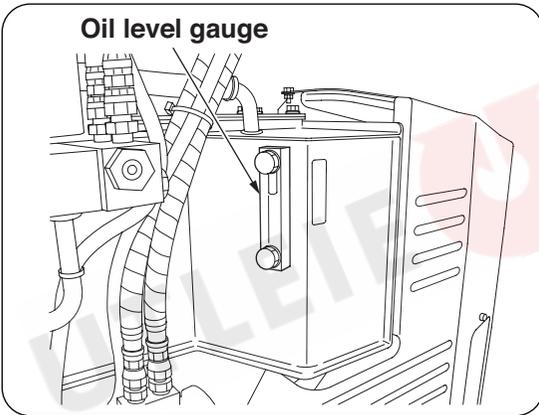

- Park the crawler on a flat ground to stop the engine.
- Check the oil quantity at the oil level gauge located in front of oil tank.
Capacity of hydraulic oil tank: 4.5 gal.(17 liters)

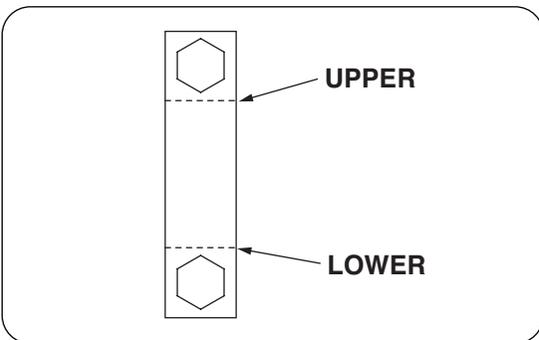




- A proper quantity of hydraulic oil is somewhere between “UPPER” and “LOWER” limits as illustrated in the figure.
- If oil level is found below the “LOWER” limit , remove the cover to the tank and remove the cap to fill it up with a specified oil.

◆5. Check for rubber crawler / Adjustment

! WARNING

★Do not check rubber crawler tension with the crane body raised above the ground.
It is very dangerous because an accidental fall of the crane may happen during inspection.
Be sure to carry out tension check with the crane touched the ground.

Standard: 5/8 in. (15~17mm)
Adjust if found less than 3/8 in. (10mm)

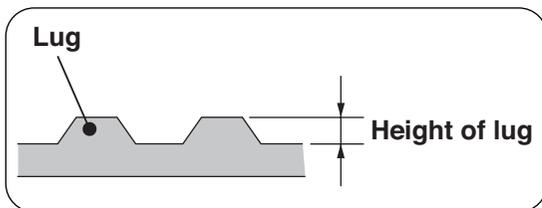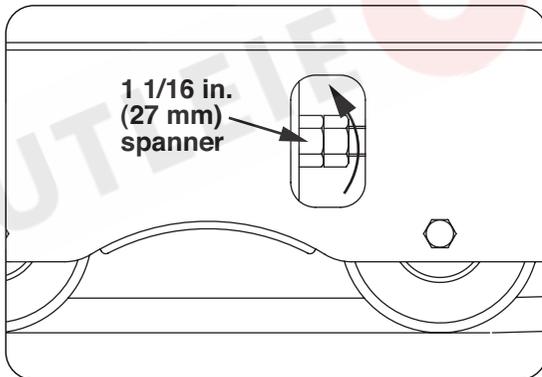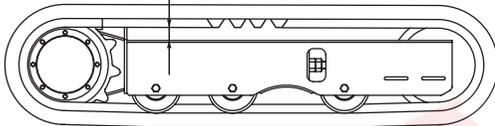

■ Inspection/Adjustment

Check the rubber crawler for wear and for tension whenever necessary as the wear varies according to operating and ground conditions.

- Initial check/adjustment: After 30 hours of operation and whenever necessary.
- When tensioning the rubber crawler, turn the nut following the arrow direction as illustrated and lock it with another nut (double-nut system).
- If the tension is too tight, it shortens service life of rubber crawler, wheel sprocket, and idle roller.

- Replace the rubber crawler when the lug height becomes less than 1/8 in. (3mm).

! CAUTION

★Adjust the tension again after 30 hours of operation if the new rubber crawler has been mounted.

 **CAUTION**

- ★Do not crawl over lying rocks or stones with sharp edges.
- ★Do not change direction where there is a difference in ground level.
- ★Do not make a quick change of direction as it may cause the wheels to go off the rubber crawler.
- ★Do not operate the crane on a ground being heated to the temperature of more than 140°F (60°C).
- ★Do not stain the rubber crawler with oils such as fuel, hydraulic oil, grease, and the other oil.
- ★Do not operate the crane at a place where salt content is abundant.
- ★When storing the crane for long period of time, store it indoors where it will not be exposed to the ray of the sun or to the rain directly.

2 *Inspection and Maintenance which is to be carried out every 250 hours or 3 months*

- ◆1. Check/Cleaning of air cleaner element


! WARNING

★Do not make a cleaning and a replacement of air cleaner while engine is running.

! CAUTION

★If the crane is operated in dusty environment, shorten the time when making inspection and cleaning accordingly.

Check and clean the air cleaner element when the crane has been operated for 250 hours (3 months).

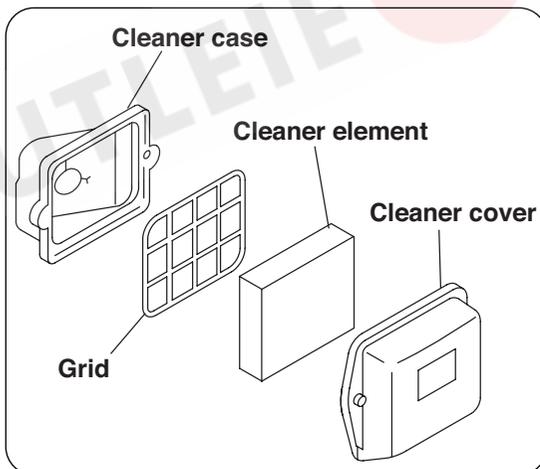

- 1** Unfasten the clamps to remove the air cleaner cover.
- 2** Clean the air cleaner element.

- ◆2. Check oil quantity in the reduction gears of crawling motor/Filling up
(Change oil every 1,000 hours)

WARNING



★Do not rush to work as each section of crawling devices is heated to a high temperature immediately after the crane operation. Work after temperature of crawling devices has cooled down.

★Pressure may be remained inside of the reduction gears of crawling motor.

Unfasten the filling port plug by 2~3 turns slowly to release the internal pressure and then remove the plug.

An abrupt removal of the plug may cause the plug to pop out or the oil to spurt out which is dangerous.

Do not turn your body or face toward the plug.

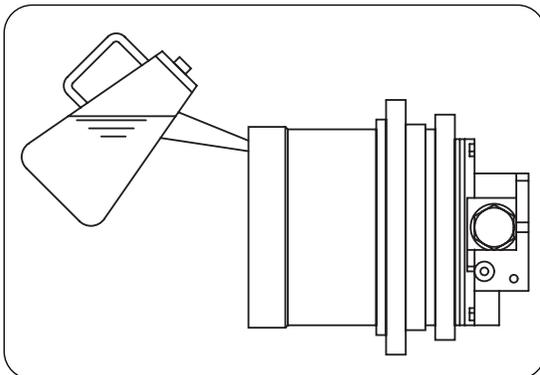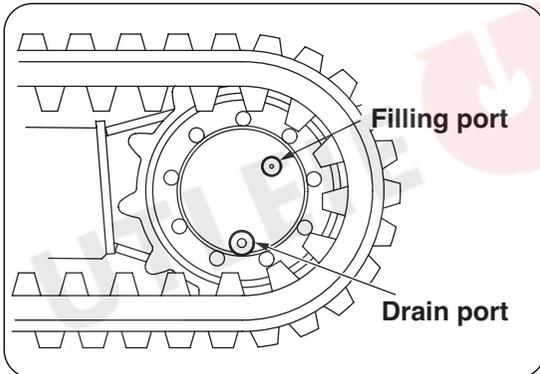

- 1** Park the crane on a flat ground.
- 2** Position 2 (two) plugs at the end of reduction gears of crawling motor as illustrated in the figure, "position for inspection", and stop the engine.
- 3** Unfasten the filling port plug slowly to bleed air.
- 4** Remove the filling port plug and oil quantity is correct if oil flows out of the filling port. If oil quantity is insufficient, fill it with the oil specified.
- 5** Check the sealing of each plug, replace it with new seal if it is found damaged.
- 6** Put the plug on the filling port and tighten it.

3 Storage

! WARNING

★ Stop the engine and thoroughly remove dirt and dust stuck on the carrier body.

In particular, be sure to remove the dust stuck to the battery, electric wiring, and the members directly affected by engine heat such as muffler as it may cause a fire.

★ In order to prevent those who are not in charge such as children from access to the crane, cover the crane or store it in a storage house.


Cover the crane after all the heated parts in the crane have been cooled down, otherwise it may cause a fire.

★ Shift each crawling lever at its neutral position.

★ Avoid storing the crane more than 3 months at a place where it is likely to be exposed to the direct sun light as the crawler made of rubber.

★ Disconnect a negative(-) side of battery cable if the crane is to be stored for a long period of time.

Failure to do this may cause a fire due to short-circuited such as by biting of a rat.

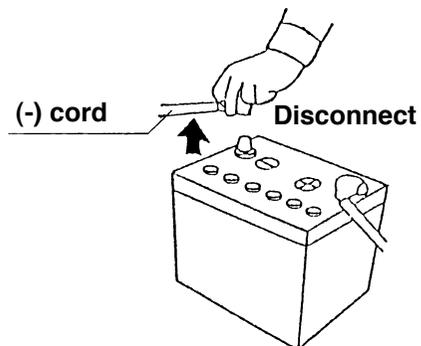

4 ***Fitting safety covers***

WARNING

★Be sure to fit the safety covers removed during inspection and maintenance where they were fitted originally. Otherwise, it is very dangerous because uncovered rotating members and heated parts may cause injury.

5 ***Maintenance and inspection of engine***

Carry out the maintenance and inspection of engine according to “Instruction manual for engine”.

14. MAINTENANCE AND INSPECTION OF CRANE

WARNING

★ **Caution signboard**

Be sure to hang a “caution signboard” such as on control levers while either maintenance or inspection is being carried out, and do not try operating the crane.

★ **Be sure to replace consumable items according to the replacement criteria.**

Failure to observe the replacement as specified may cause a breakdown and warranty will not be given even if it is within the period to be applied.

★ **When a part needs to be replaced or anything abnormal is found, contact a UNIC service shop for consultation or for ask inspection or repair as soon as possible.**

1 Inspection before operation

In order to secure safe operation and improve working efficiency, be sure to inspect daily each part of the crane according to the table as follows:

Device	Servicing item	Device	Servicing item	Device	Servicing item
Pump	Tightness of each mounting Oil leakage Unusual noise	Hook	Rotation of hook Function of retaining mechanism	Frame	Mounting of crane body Cracks Tightness of bolts Missing bolt
Hydraulic oil tank	Oil level Oil leakage	Wire rope	Damage Condition of rope-end	Slings and implements	Items necessary for crane operation are provided
Outriggers	Natural descent Function Control lever return Deformation Damage Oil leakage Cracks	Overwinding alarm	Function Alarm sound	Automatic storing device for hook	Function of automatic stop and storing operation
Hoisting winch	Function Control lever return Braking function Irregular winding	Interlock for crane-crawl lever	Check that crane will not actuate on crawling, and crawler will not travel on crawl lever return and on crane operation.	Automatic stop for leaving minimum wire rope	Further unwinding stops automatically when remaining wire rope on the drum comes to 3 turns.
Slewing device	Function Control lever return Oil leakage	Load meter	Oil leakage Function		
Derricking boom	Function Control lever return Oil leakage Mounting of foot-pin	Warning horn	Function		
Telescoping boom	Function Control lever return Oil leakage Deformation Cracks Mounting of fixing pin	Piping, Hydraulic hose	Oil leakage Damage		

CAUTION

★ Perform monthly and annual inspection according to “Voluntary inspection table” in the warranty which is provided separately.

★ Keep the crawler crane in good condition so that it will be always ready for normal operation.


2 **Cleaning**

Keep the crane clean at any time.

Sands and fine dusts may cause an abnormal wear .

Do not wash the crane by splashing highly pressurized water to prevent it from entering into the electric system by which may cause malfunction of the crane.

3 **Inspection of bolts mounting slewing bearings**

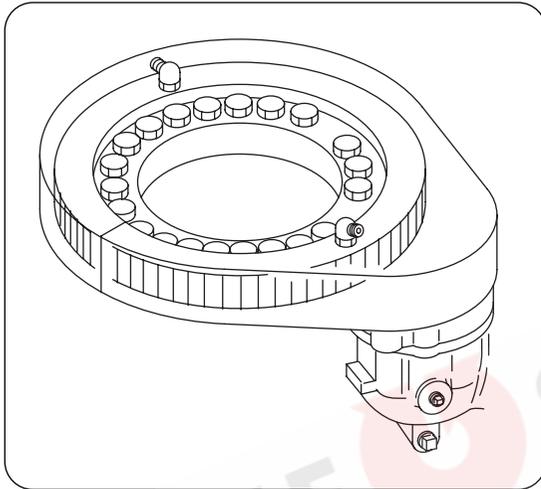

When the slewing device makes an unusual noise while operating or crawling the crane, or when a gap is created on the mounting surface, contact a UNIC authorized service shop for inspection and/ for repair.

CAUTION

★Break of the bolts mounting slewing bearings may invite an accident such as overturn and destruction of the crane.
Check the mounting bolts (outer ring side) for tightness once every 6 months.



4 Replacement of wire rope (for winding-up)

Wire rope is an expendable article and it will be damaged and its strand wires are broken to allow it to be thinner through a long period of operation.

Replace the rope according to following criteria.

◆1. Replacement criteria

1. A rope in which amount of broken strand wires (except filler wires) comes to more than 10% within a pitch of twist.

Replace the wire ropes intended for use with this crane if 13 pieces of strand wire have been broken within a pitch of twist.

2. A rope being kinked.





3. A rope from which its diameter has decreased by more than 7% of the nominal diameter.

For example, if wire rope with a nominal diameter of $9/32$ in.(7mm) is used, replace it when the diameter becomes $1/4$ in.(6.5mm).

Refer to the section 17, MAJOR SPECIFICATIONS, for length and construction of the wire rope for winding-up.


4. A rope which has been deformed and/or corroded excessively.

★Be sure to replace a wire rope when it comes under the criteria, item 1 through 4, illustrated above.

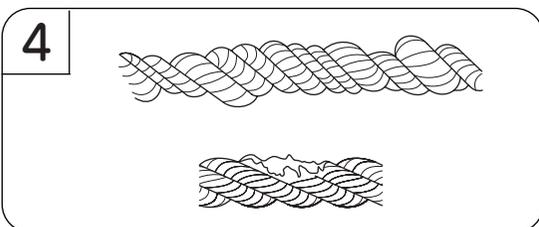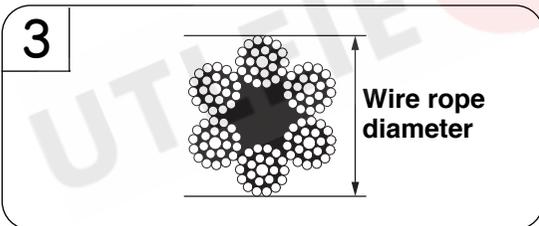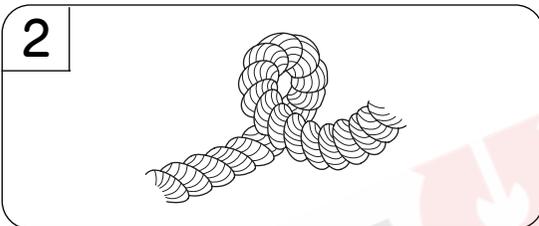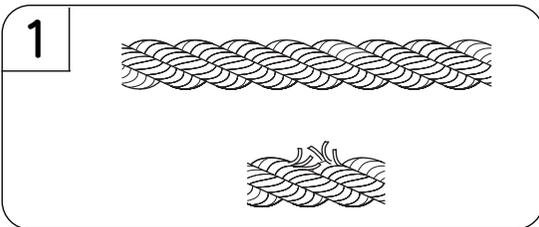


CAUTION

★Wear leather gloves when replacing wire ropes.

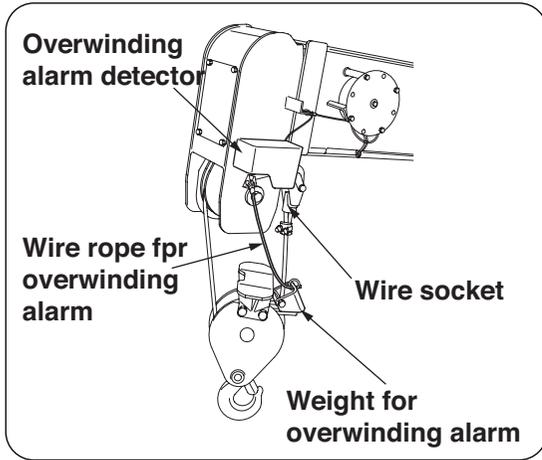


◆2. How to replace wire ropes

1. Refer to the figure in the left for how to hook the wire ropes for winding -up and for where the weight for over-winding alarm is to be mounted.

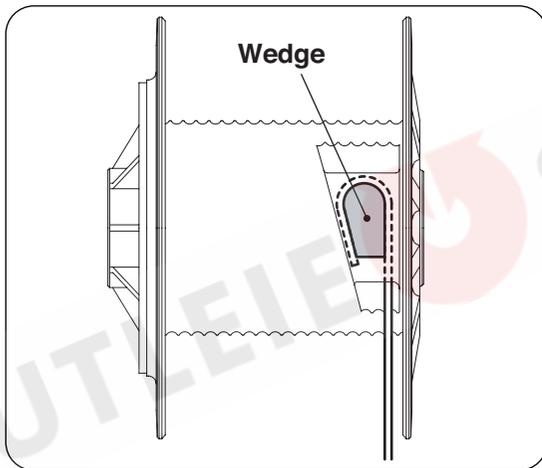


Refer to the figure in the left for how to attach the hook.

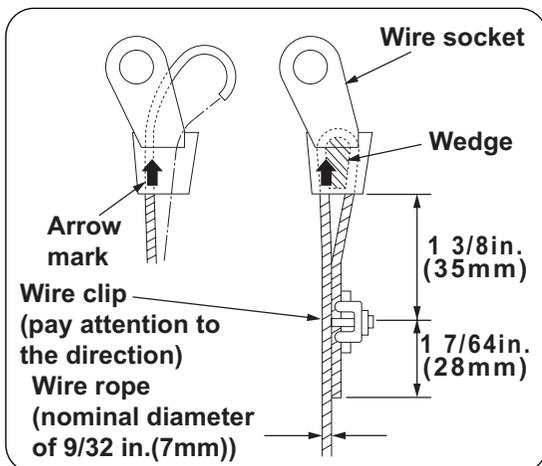



2. How to fasten the end of wire rope

- ① When passing the wire rope, pass it along the arrow mark indicated on the wire socket. If it has been passed in the opposite direction, service life of the wire rope is shortened as it is kept bent all the time.
- ② Be sure to attach both the wedge and the wire clip as indicated in the figure .on the left.

MAINTENANCE AND INSPECTION OF CRANE

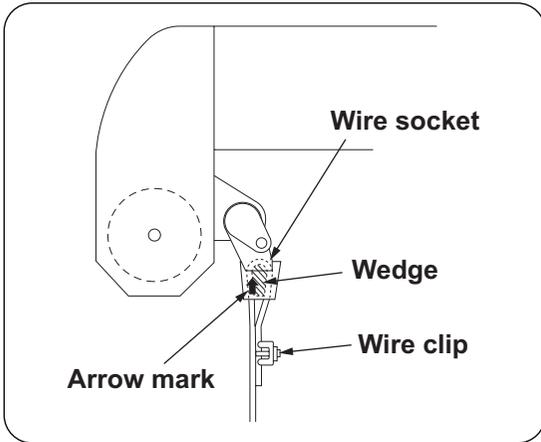

- ③ When mounting the wire socket to the boom, the arrow mark indicated on the wire socket comes outside as in the figure on the left.

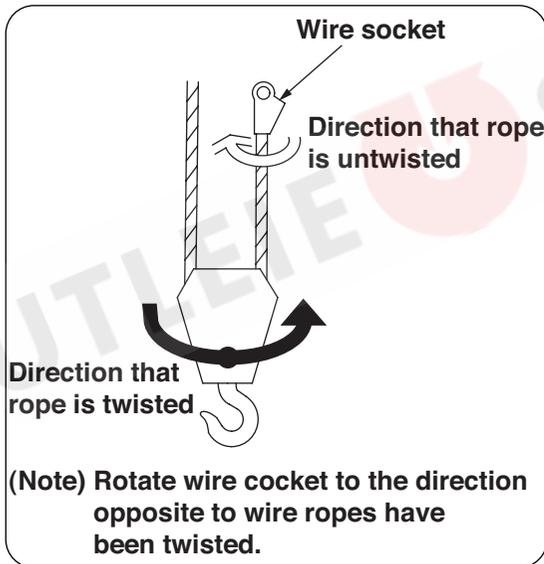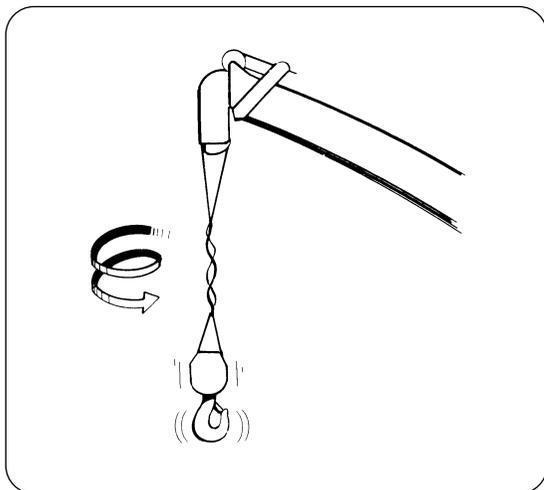

◆3. How to correct twisted wire ropes

Wire ropes tend to turn in untwisting direction when they are under tension.

If two or more wire ropes are hooked together, they tend to be twisted particularly while they are new.

The twist will decrease as the ropes are getting fit to the crane.

If wire ropes are twisted, correct them as follows:


1. Unload the hook.
2. Extend the boom fully.
3. Raise the boom to an angle of approximately 65°.
4. Unwind the hook until it comes close to the ground.
5. Check how many turns the wire rope has been twisted.
6. Wind up the hook and retract the boom to be on a stored condition.
7. Remove the wire socket and turn the socket in the untwisting direction by as many turns as the wire ropes have been twisted multiplied by the number of wire ropes being hooked. However, remember that the wire socket may be turned up to 4 turns at a time.
8. Attach the wire socket and repeat winding up and down the rope 2 or 3 times between both extremes. Then, check if twist of the wire ropes is corrected. If they remain twisted, repeat the procedures shown above.

5 **Replacement of expendable parts**

◆1. **Replacement of gaskets and seals for each cylinder**

Although timing of replacement of a part varies according to how frequently the crane has been operated, replace gaskets and seals used in each cylinder after every 3 years of operation (period during which crane has not been operated is included) in order to operate the crane safely.

Ask a local UNIC authorized service shop for replacement of gaskets and/or seals.

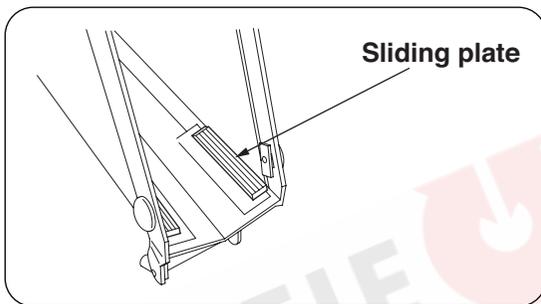

◆2. **Replacement of sliding plate of boom**

Replace it every 3 years.

15. LUBRICATION TO CARRIER

WARNING

- ★ Be sure to stop the engine, and store the boom and the outriggers before carrying out filling/replacing lubricant and/or fuel.
- ★ A fire source such as smoking cigarette in mouth is strictly prohibited.
- ★ Do not rush to start maintenance and inspection as the engine and the members close to the engine is heated to a high temperature immediately after the engine has been stopped.

Precaution when carrying out lubrication

Lubricate according to “Lubrication chart” and keep the following instructions in mind when carrying out lubrication.


1. Clean filling ports and grease nipples thoroughly before carrying out lubrication.
2. Always supply new lubricant and prevent dusts from entering inside.
3. When supplying grease into each grease nipple, be sure to inject it until old grease is forced out of it.

CAUTION

- ★ In order to ensure smooth operation of each part of the crane, minimum wear, and longer service life, be sure to supply lubricant as well as hydraulic oil which is indispensable to drive hydraulic equipment.
- ★ Warranty will not be given, even if it is within the period to be applied, for failure to observe the replacement of lubricant as specified.

2 List of recommended lubricant

◆1. Use the engine oils as below:

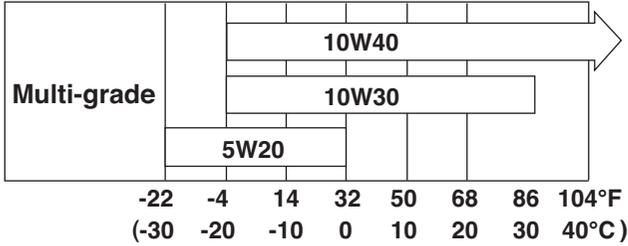

The selection of engine oil is very important to a diesel engine. If an unsuitable oil is used, or oil change is neglected, it may result in damage, and a shorter engine life. Use oils that meet API Engine Service Classification CD.

- ◆2. Use the recommended grease for lubrication as below.
 Chassis grease
 Use NLGI No. 2 grade for most temperatures.
 Use NLGI No. 1 grade for extremely low temperatures.

- ◆3. Use the fuel as specified below.
 Use only automobile non-leaded gasoline.

- ◆4. Hydraulic oil is the same as the oil used in the crane.


- ◆5. Use the gear oils for the reduction gears of crawling motor as below:

Classification	Depending on atmospheric temperature							
Rating to be applied	-22	-4	14	32	50	68	86°F	
	(-30)	(-20)	(-10)	0	10	20	30°C)	
Engine oil								
Diesel engine oil of CD class	SAE30							

- SHELL : DONAX TT or TD
- CALTEX : RPM TRACTOR HYDRAULIC FLUID
- CHEVRON : TRACTOR HYDRAULIC FLUID
- TEXACO : TDH OIL
- MOBIL : MOBILAND SUPER UNIVERSAL.

It is possible to substitute engine oil CLASS-CD SAE 30.

3 Filling water and lubrication chart

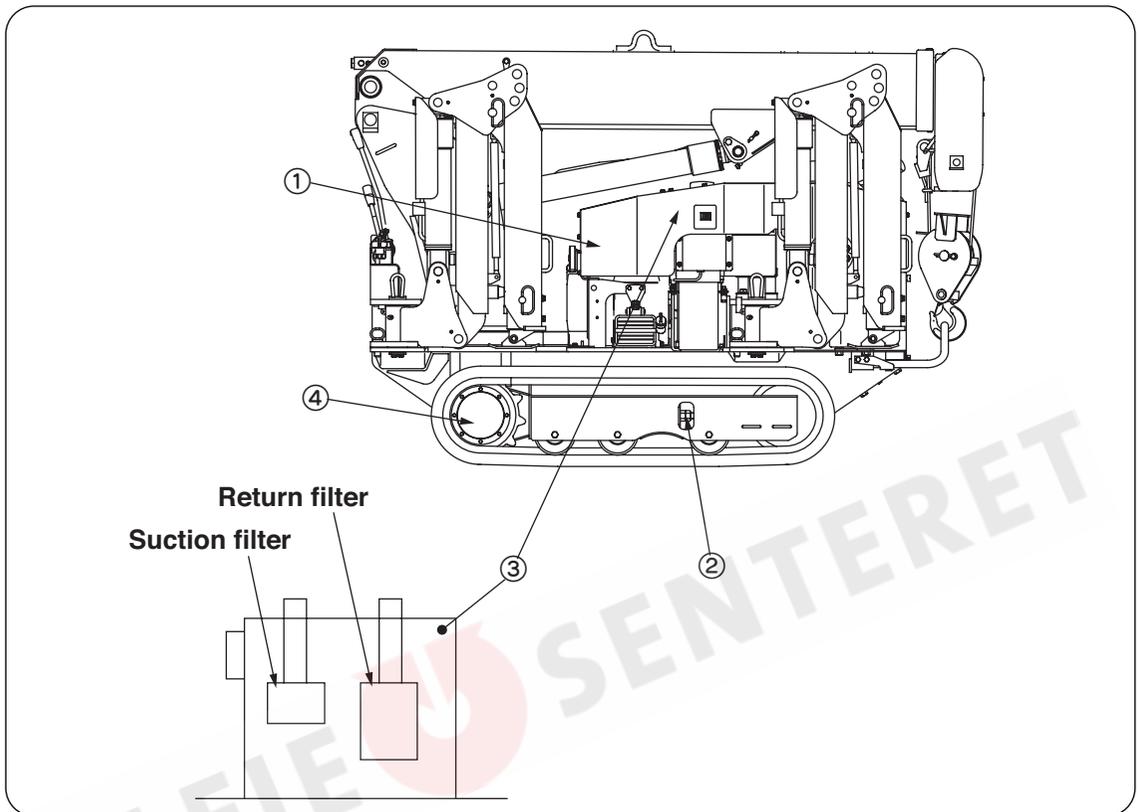

Service interval	Where to lubricate	No. of part	Lubricant	Tool
Initial: Replace after 25 hours After : Replace every 50 hours	① Engine 0.3 gal.(1.2 liters)	1	Engine oil	
Initial : 30 hours, Whenever necessary	② Tension adjustment of rubber crawler	2		1 1/16in.(27mm) spanner
Initial: Replace after 3 months After : Replace once a year or every 500 hours	③ Hydraulic oil tank 4.49 gal.(17 liters)	1	Hydraulic oil	
Replace every 1000 hours	④ Reduction gears of crawling motor 0.1 gal.(0.33 liters)	2 (Right/Left)	Diesel engine oil	

Refer to “MAINTENANCE AND INSPECTION OF CARRIER” for replacement procedures.

Fuel	Gasoline
Fuel tank capacity	1.6 gal.(6 liters)

16. LUBRICATION TO CRANE

! WARNING

★Do not carry out maintenance and inspection while temperature of hydraulic oil is still high.


★Be sure to stop the engine to carry out lubrication.

★Temperature of both hydraulic and gear oils is very high immediately after crane operation so that accumulated high pressure still remains inside.

Uncapping the filling port, draining oil, and replacing filter while oil temperature is high may allow the hydraulic and/or gear oils to spout out from which a scald may result.

1 Precaution when carrying out lubrication

Lubricate according to “Lubrication chart” and keep the following instructions in mind when carrying out lubrication.

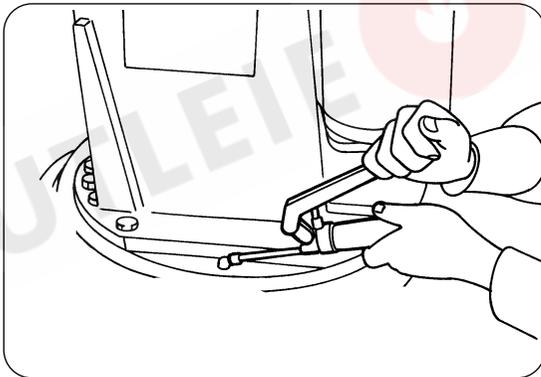

1. Clean filling ports and grease nipples thoroughly before carrying out lubrication.
2. Always supply new lubricant and prevent dusts from entering inside.
3. When supplying grease into each grease nipple, be sure to inject it until old grease is forced out of it.

! CAUTION

★In order to ensure smooth operation of each part of the crane, minimum wear, and longer service life, be sure to supply lubricant as well as hydraulic oil which is indispensable to drive hydraulic equipment.

★Warranty will not be given, even if it is within the period to be applied, for failure to observe the replacement of lubricant as specified.

2 List of recommended lubricant

◆ 1. List of recommended lubricants

★ Use the UNIC genuine hydraulic oils listed below as hydraulic oil for the crane.

Use industrial-type hydraulic oil

ISO VG 46 for temperatures above 32°F (0°C)

ISO VG 32 for temperatures below 32°F (0°C)

Petroleum Maker	Brand	
	ISO VG 32	ISO VG 46
EXXON MOBIL	Mobil DTE 24	Mobil DTE 25
CHEVRON	Rando Oil HD ISO 32	Rando Oil HD ISO 46
SHELL	Shell Tellus Oil 32	Shell Tellus Oil 46

★ Use the recommended lubricants listed below as gear oil for lubrication.

Application	Petroleum Maker	Brand
Reducer for slewing gear	Use API service GL-4 SAE 90 gear oils. (Refer to the followings)	
Reducer for winch	CHEVRON	Thuban GL4 90
	SHELL	Shell Spirax EP 90

★ Use the recommended greases listed below as grease for lubrication.

(a) Chassis grease

Use NLGI No.2 grade for most temperatures.


Use NLGI No.1 grade for extremely low temperatures.

(b) Molybdenum grease

Use NLGI No.2 grade.

Petroleum Maker	Brand
EXXON MOBIL	Mobilgrease CM-P
CHEVRON	Moly greases EP 2 (Texaco Molytex EP 2)
SHELL	Retinax grease EPX 2 (Retinax grease AM)


3 Lubrication chart

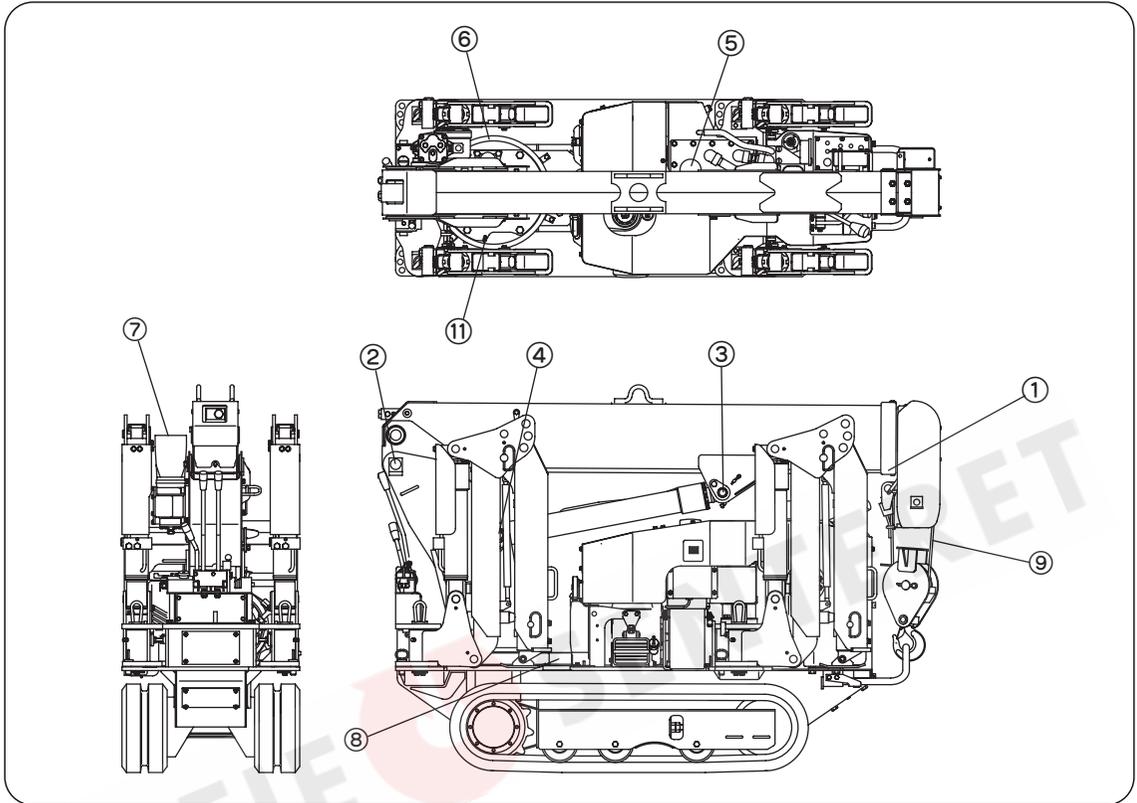


Service interval	Where to lubricate	No. of part	Lubricant	Tool
Daily	① Boom slide plate (Underside & side face of boom sections ②, ③, and ④) For 4-section boom	4	Molybdenum grease	Manual application
	② Boom foot pin	1	Chassis grease	Grease pump
	③ Upper support pin of derrick cylinder	1	Chassis grease	Grease pump
	④ Lower support pin of derrick cylinder	1	Chassis grease	Grease pump
Weekly	⑤ Hydraulic oil tank	4.5gal. (17liters)	Hydraulic oil(up to middle of level gauge)	Manual application
	⑥ Slewing gears	1	Chassis grease	
Monthly	⑦ Winch reduction gears (Approx. 0.1gal.(0.3 liter))	1	Gear oil	Spray gun Grease pump Grease pump
	⑧ Slewing reduction gears (Approx. 0.1gal.(0.3 liter))	1	Gear oil	
	⑨ Wire rope	1	Rope grease	
	⑩ Slewing bearings	2	Chassis grease	
	⑪ Outrigger fulcrum pin	4	Chassis grease	

4 Lubrication

Winch reduction gears

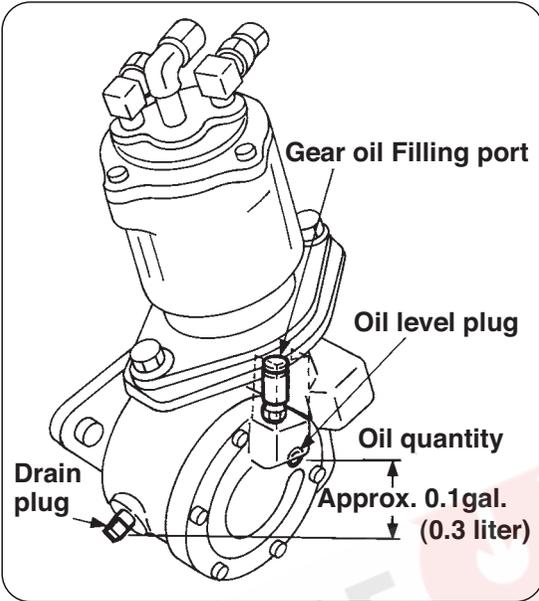

Slewing reduction gears

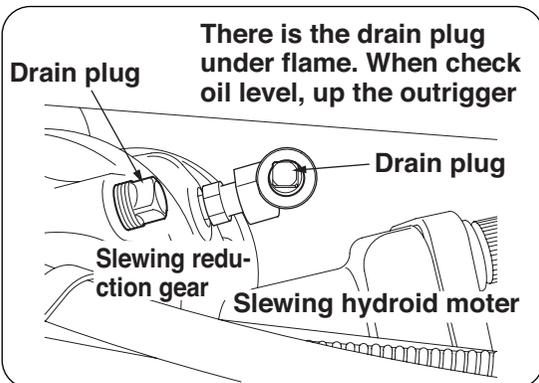

◆1. Replacement of gear oil (Winch reduction gears and Slewing reduction gears)

★Air enters in and out of the gear case so that dirt and moisture are brought in the gear case.

In addition, since hydraulic equipment gradually wears to produce worn particles, replace gear oil after 6 months from the start of operation.

★Afterward, replace gear oil:

- Once a year for winch reduction gears, and
- Once every 2 years for slewing reduction gears.

⚠ CAUTION

★Replace gear oil after oil temperature has dropped.

★Fill up the oil for winch reduction gears until oil level comes to halfway between upper limit and lower limit on the oil level gauge (oil quantity: approx. 0.1gal.(0.34 liter)).

★Fill up the oil for slewing reduction gear until oil level comes to halfway between upper limit and lower limit on the oil level gauge (oil quantity: approx. 0.1gal.(0.3 liter)).


In order to check oil level, insert the level gauge until it just touches the oil level port

◆2. Lubrication to slewing bearings

The crane employs ball bearings as the slewing bearing.

Be sure to lubricate the bearings as insufficient lubrication may cause it to make unusual noise.

Grease the nipples while slewing the boom once a month for moderate operation, and once a week for heavy-duty operation.

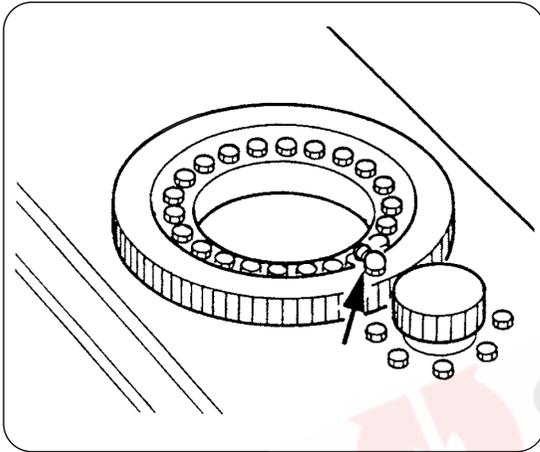

17. MAJOR SPECIFICATIONS

1 URW094CP2UR (4-section boom)

(Speed indicated in the table below is at oil temperature range of 113~131°F(45~55°C), operating with no-load, and at rated pump discharge.)

Major specifications

Model		URW094CP2UR (4-section boom)
Crane capacity (maximum lifting load)		1990 lbs. × 4.9ft (995kg × 1.5m) (With outriggers extended fully)
Maximum lift above ground (Hook)		Approx. 18.3ft (5.6m)
Boom to be extended to:		5.6ft~9.8ft~13.9ft~18.0ft (1.73m~3.01m~4.25m~5.49m)
Maximum working radius		16.9ft (5.17m)
Speed of winding-up (Rope speed)		55.7ft (17m)/min (At 3rd layer on the drum)
Hoisting speed of hook		27.8ft (8.5m)/min (At 3rd layer on the drum, with 2-part line hooking)
Extending speed of boom		12.3ft (3.76m)/17sec
Raising speed of boom		0°~78°/6.5sec
Slewing speed		1.5rpm
Slewing range		360° (Continuous)
Hoisting rope	Construction	6×Fi (29) GRADE B (Breaking load: 6500lbs.(28.9kN){2950kgf})
	Diameter×length	9/32 in.(7mm)×88.5ft (27m)
Outrigger	Lateral	3-steps (with damper) for bend and 4-steps extension.
	Vertical	Double acting hydraulic cylinders with double pilot-operated check valves, direct pushing type. (Directly connected with hydraulic automatic lock device)
Hydraulic pump	Rated pressure	Crane: 2990psi {20.6MPa (210kgf/cm ²)} Crawl: 3130psi {21.6MPa (220kgf/cm ²)}
	Rated discharge	Approx. 6.60gal.(25 liters)/min
	Rated rotation	Approx. 1800rpm
Hydraulic oil tank capacity		4.49gal. (17 liters)

MAJOR SPECIFICATIONS (URW094CP2UR)

Equipment and construction

Model	URW094CP2UR (4-section boom)
Boom telescoping	Boom: 4-section, box beam
	Telescoped by direct pushing of hydraulic cylinder and by wire rope (With hydraulic automatic locking device) (2nd sections: sequential actuation, 3rd & 4th sections: simultaneous actuation)
Boom derricking	Direct pushing by hydraulic cylinder (With hydraulic automatic locking device)
Hoisting	Hydraulic motor: Axial plunger type
	Reduction gears: Worm-gear reduction
	Brake: Worm self-lock
Slewing	Hydraulic motor: Trochoid type (With hydraulic automatic locking device)
	Reduction gears: Worm-gear+Spur-gear reduction (Supported by ball bearings)
	Brake: Worm self-lock
Hydraulic pump	Variable delivery piston pump
Hooking capacity	1990 lbs.(903kg) Number of slinging rope: 2
Safety device	Pressure relief valve for hydraulic circuit
	Counterbalance valves for boom raising and boom telescoping cylinders
	Double pilot-operated check valves for outrigger cylinders
	Boom angle indicator with load indicator
	Hook safety latch
	Automatic stop for overwinding
	Overwinding alarm
	Automatic stop for leaving minimum wire rope
	Emergency stop button (Ignition cut)
	Interlock device of crane and crawling levers
	Interlock device of crane-crawl lever and outriggers
Level	
Weight	Approx. 2210 lbs.(1000kg)

Crawling device

Model	URW094CP2UR (4-section boom)
Crawling	Endless rubber crawler
Crawler	5.9in. × 36links × 2.8in. (150mm × 36links × 72mm)
Length of ground contact	2.95ft (900mm)
Pressure of ground contact	5.26psi (36.3kPa (0.37kgf/cm ²))
Crawling speed	Forward/Backward: 0~1.36mph(0~2.2km/h)
Hill-climbing ability	20°
Engine	Continuous Rated Output 5.5kW (7.3HP)/1800rpm
Crawling	Independently driven by hydraulic power
Parking brake	Disc brake with hydraulic motor built-in
Starting engine	Electric starter
Fuel tank	Capacity: 1.58gal.(6 liters)

MAJOR SPECIFICATIONS (URW094CP2UR)

Chart of rated load

RATED LOAD CHART

The mass of the hook(35lbs.),slings, and any accesories attached to the boom or loadline must be deducted from the rated loads in the chart.

BOOM SECTION	1				
WORKING RADIUS(ft.)	3,0	3,5	4,0	4,5	4,62
RATED OUTRIGGER MAX EXT.	1990	1990	1990	1990	1990
LOAD(lbs.) OUTRIGGER NOT MAX EXT.	1760	1760	1620	1470	1430

BOOM SECTION	1+2						
WORKING RADIUS(ft.)	3,0	3,5	4,5	5,0	7,0	8,0	8,82
RATED OUTRIGGER MAX EXT.	1990	1990	1990	1990	1660	1460	1270
LOAD(lbs.) OUTRIGGER NOT MAX EXT.	1760	1760	1450	1300	800	650	500

BOOM SECTION	1+2+3							
WORKING RADIUS(ft.)	3,0	6,0	7,0	8,0	9,0	10,0	11,0	12,89
RATED OUTRIGGER MAX EXT.	1870	1860	1670	1470	1300	1150	950	700
LOAD(lbs.) OUTRIGGER NOT MAX EXT.	1100	1080	800	650	500	400	340	250


BOOM SECTION	1+2+3+4							
WORKING RADIUS(ft.)	8,0	9,0	10,0	11,0	12,0	14,0	16,0	16,96
RATED OUTRIGGER MAX EXT.	1450	1300	1140	980	840	650	500	440
LOAD(lbs.) OUTRIGGER NOT MAX EXT.	750	520	390	340	280	200	150	140



CAUTION RATED LOAD

- The rated load is performance when the crane is placed level and is based on an actual working radius including boom deflection under load. The rated load is also based on strength and stability of the crane.
- Maximum extension of an outrigger is a condition in which the inner box is extended to the maximum extension position and a swing lock pin of the outrigger arm is inserted into "MAX EXT." position. In other conditions than the above, operate with performance of not maximum extension.
- If any one of the four outriggers is not fully extended, operate with peromance of not maximum extension.
- Improper set-up of the outriggers may cause the crane to turn over. Place the outriggers on a firm and level surface with maximum extension. Make sure, then, that lock pins are securely inserted.
- The boom [1+2+3] is a condition in which the boom [3] is extended to the mark.
- Operate with performance of [1+2+3] when the boom [3] is extended even if only a little; and performance of [1+2+3+4] when the mark on the side plate of the boom [3] moves away from the boom [2] even if only a little.


30L88104G-W094CP2UR

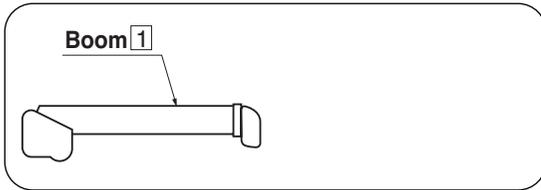

● How boom-sections are extended


Boom : **1**

All boom sections are retracted.

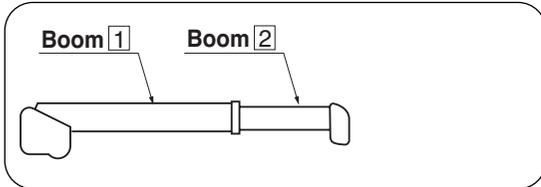


Boom : **1+2** or **2**

Boom section(2) only is extended.

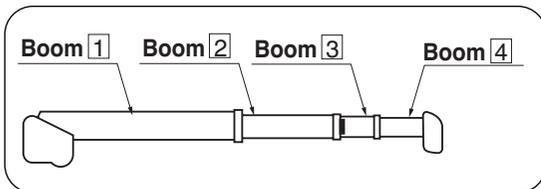

Boom : **1+2+3** or **3**

Boom sections (3) is extended to the mark ■.

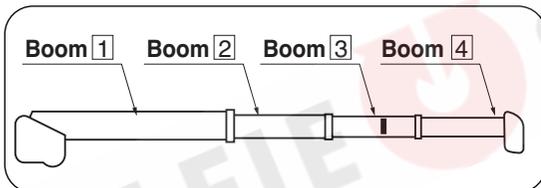

Boom : **1+2+3+4** or **4**

Boom section (2), (3) and (4) are fully extended.

MAJOR SPECIFICATIONS (Radio remote control device)

Model	RC-500HA-USA, Radio remote control device
Radio frequency	458~459 MHz band
Transmission output	10 mW
Frequency selection	Auto-scanning system
Range of radio wave	328ft (100m) min. (when in good conditions)
System structure	Combined system of manual and radio remote control operation

Controls (functions operated through radio control transmitter)

Selector switches:

Boom :Up/Down

Hook :Up/Down

Boom telescoping :Extend/Retract

Slewing :C.C.W./C.W. (Start/Stop)

Store hook :Storage

Speed selector switch:

Switching to mode of : High/Medium/Low speed

Mode switch :Switching each function by combination of selector switch

Horn switch :Alarm/Start

Speed lever :Both hydraulic control and engine speed control

Power supply

Crane: Battery on mounting vehicle (DC 12V)

Transmitter: a size AAA battery: 4 pieces

Power consumption

Crane operating single function at maximum speed:

Approx. 50W, 120W max. (including control box)

Transmitter (service life with alkaline batteries):

20 hours min.

Voice messages

“Crane mode”

“Remote control ready”

“Outrigger mode, outriggers moving”

“Stop winch up”

“Secure lifting hook”

“Low transmitter battery”

“Service remote control”

“Change control mode”

Operating temperature range

-4°F~+140°F(-20°C~+60°C)

Storing temperature range

-22°F~+167°F(-30°C~+75°C)

Weight of remote controller

1.54lbs.(700g) (including batteries)

★ The radio remote control device employs a unique data transmission system and an ID (identification) code is assigned to each equipment.

Therefore, the crane will not be worked by radio wave radiated from other radio equipment.

★ About auto-scanning system :

Auto-scanning system is a system that changes the current frequency to other frequencies automatically to avoid radio interference when a similar radio wave is being radiated nearby.

FURUKAWA UNIC CORPORATION

HEAD OFFICE : Nihonbashi nishikawa Bldg, 5-3, Nihonbashi
1-chome, Chuo-ku, Tokyo 103-0027, Japan